

PRICE LIST No. 52

WIARD PLOWS REPAIRS AND IMPLEMENTS

DISTRIBUTING HOUSES

Day Brothers,
Grand Blanc, Mich.

Ross Bros. Co.,
Worcester, Mass.

F. L. Oakley, Inc.,
East Williston, Long Island, N. Y.

I. W. Scott Co.,
500 Liberty Avenue,
Pittsburgh, Pa.

Lancaster Storage Co., Inc.,
Lancaster, Pa.

J. O. Middlebrook & Sons,
Burlington, Vt.

**This List Supersedes All Others. Subject to Change
Without Notice.**

See Instructions and Descriptions on Page 2.

Manufactured by
Wiard Plow Co.
Batavia, N. Y., U. S. A.

. Please Observe the Following Explanations
and Suggestions in Ordering Plows
or Plow Repairs.

ALL PARTS OF THE FOLLOWING PLOWS ARE INTERCHANGEABLE

Nos. 10, 10B, 10C and 10D; Nos. 26 and 26½; Nos. 27 and 28; Nos. 43 and 44; Nos. 70 and 71; Nos. 74 and 75; Nos. 80 and 81; Nos. 90 and 91; Nos. 103 and 104; Nos. 208 and 209; Nos. 214 and 215; Nos. 219 and 220.

POINTS THAT ARE ALIKE

Nos. 3A and 8 Plain Scotch; 4 and 7 Plain Scotch; 2A, 5 and 6 Plain Scotch; 10C and 10D Cutter; 10, 10C and 10D Stony; 13 and 213; 14 and 15 Cutter; 14 and 15 Stony; 16 and 19 Plain; 16 and 19 Cutter; 16 and 19 Slip; 16 and 19 Stony; 20 and 127; 21, 121 and 125; 22 and 122; 25, 26, 26½ and 60 Plain; 25, 26, 26½ and 60 Cutter; 25, 26, 26½ and 60 Slip; 25, 26, 26½ and 60 Stony; 27 and 28 Cutter; 27 and 28 Slip Nose; 27 and 28 Stony; 35 and 126; 43 and 44 Stony; 43 and 44 Wide; 43 and 44 Slip Nose; 43 and 44 Cutter; 68 and 69; 70 and 90 Plain; 70, 71, 90 and 91 Stony; 70, 71, 90 and 91 Slip Nose; 70, 71, 90 and 91 Cutter; 70, 71, 90 and 91 Plain Heavy; 71 and 91 Plain; 80 and 81 Plain Heavy; 80 and 81 Stony; 80 and 81 Slip Nose; 80 and 81 Cutter; 103 and 104 Slip Nose; 103 and 104 Wide; 103 and 104 Cutter; 103 and 104 Stony; 115, 120, 130, 140 and 300; 123 and 124; 144 and 240; 219 and 220.

Points for all other Plows, except as noted above and those that are interchangeable, are made to fit one Plow only and are marked as the Plow is numbered.

Points are put up for shipment six in a bundle.

JOINTER POINTS

Marked "IJ" fit Chief, Jr., Sr., Hero, and the A, D and F Plows.

Marked "10" fit Nos. 2, 3, 4, 5, 6, 10, 10B, 10C, 10D, 11, 12, 16, 17, 18, 19, 23, 24, 25, 26, 26½, 43, 44, 45, 60, 70, 71, 72, 90, 91, 113, 114, 202, 203, 219, 220, 524, 526, 528, 1524, 1526 and 1528 Plows.

Marked "10" fit No. 100 Plow that has Jointer with Cast Moldboards and Point.

Marked "40" fit Nos. 27, 28, 29, 80, 81, 95, 103, 104, 105, 106, 205, 206, 313, 314, 416, 420, 544, 546, 548, 1544, 1546 and 1548 Plows.

Marked "74G" fit Nos. 73, 74, 75, 200, 216, 218, 520 and 522 Plows.

Marked "90" fit all Swivel Plows.

Marked "100," Steel, Diamond Shaped, Reversible Points, fit No. 100 Plows that take the 100M Jointer.

Marked "105," Steel, Diamond Shaped, Reversible Points, fit Nos. 95 and 105 Plows that take the 105M Jointer.

JOINTER MOLDBOARDS.

Marked "6" fit Nos. 27, 28, 29, 80, 104, 105, 106, 205, 206, 313, 416, 420, 544, 546, 548, 1544, 1546 and 1548 Plows.

Marked "6" fit Nos. 95 and 105 Jointers that have Cast Moldboard and Point.

Marked "84" fit Nos. 2, 3, 4, 5, 6, 17, 18, 19, 25, 26, 26½, 43, 44, 45, 60, 70, 71, 72, 90, 91, 113, 114, 202, 203, 219, 220, 520, 522, 524, 526, 528, 1524, 1526 and 1528 Plows.

Marked "84" fit No. 100 Jointer that has Cast Moldboard and Point.

Marked "91" fit right side of all Swivel Plows.

Marked "92" fit left side of all Swivel Plows.

Marked "Right" fit A, D and F Plows.

MOLDBOARD STANDARDS

The Moldboard Standards for the Nos. 16, 27 and 28 Plows with Chilled Moldboards are different from those of the same numbers with Steel Moldboards.

Moldboard Standards for Nos. 43, 44, 103, 104, 105, 1524, 1526, 1528, 1544, 1546 and 1548 Sulky Plow Bases are different from Hand Plows.

MOLDBOARD STANDARDS THAT ARE ALIKE

Nos. 5 and 6	Nos. 90 and 91
Nos. 10, 10B, 10C and 10D	Nos. 103 and 104 Hand
Nos. 26 and 26½	Nos. 121 and 122
Nos. 43 and 44 Hand	Nos. 219 and 220
Nos. 70 and 71	Nos. 208 and 209
Nos. 74 and 75	Nos. 103 and 104 Sulky
Nos. 43 and 44 Sulky	Nos. 214 and 215
Nos. 80 and 81	Nos. 526 and 1526

PAIR HANDLES THAT ARE ALIKE

A, D and F	Nos. 62 and 63
Nos. 10, 10B, 10C, 10D	Nos. 70, 71, 72, 80, 81, 90, 91
Nos. 11, 12, 23 and 24	Nos. 73, 74 and 75
Nos. 14, 15, Penn	Nos. 115X, 116, 140, 126X
Nos. 16 and 25	Nos. 120 and 126 St'l Beam
Nos. 17 and 18	Nos. 208 and 209
Nos. 20 and 130X	Nos. 210, 212
Nos. 21, 121, 122 and 125	Nos. 214, 215, 216, 218
Nos. 26 and 26½	Nos. 219 and 220
Nos. 27 and 28	Nos. 526, 528, 1526, 1528
Nos. 43, 44, 45, 103, 104, 106	Nos. 546, 548, 1546, 1548

WOOD BEAMS THAT ARE ALIKE

Nos. A and D	Nos. 16 and 19
Nos. 10, 10B, 10C and 10D	Nos. 18, 26, 26½, 27 and 28
Nos. 121 and 122	

 
LANDSLIDES THAT ARE ALIKE

Nos. A and D	Nos. 43 and 44
Nos. 5 and 6	Nos. 70 and 71
Nos. 10, 10B, 10C and 10D	Nos. 73, 74 and 75
Nos. 13 and 213	Nos. 80 and 81
Nos. 17 and 18	Nos. 90 and 91
Nos. 23 and 24	Nos. 103, 104 and 106
Nos. 26 and 26½	Nos. 219 and 220
Nos. 27 and 28	Nos. 214 and 215
	Nos. 208 and 209

SHOES

Marked "2BL" fits the No. 2 Scotch Plow.
 Marked "3BL" fits the No. 3 Scotch Plow.
 Marked "5 or 6" fits Nos. 5 and 6 Scotch Plows.
 Marked "No. 7" or "116" fits the No. 116 Swivel.
 Marked "20" fits Nos. 20 and 127 Swivel Plows.
 Marked "43 or 44C" fit the Nos. 43 and 44 Plows.
 Marked "68C" fits Nos. 68 and 69 Contractor's Plows.
 Marked "72C" fits the No. 72 Plow.
 Marked "74C" fits the Nos. 73, 74 and 75 Plows.
 Marked "80 or 81C" fits the Nos. 80 and 81 Plows.
 Marked "85F" fits No. 85 Middlebreaker.
 Marked "86C" fits No. 86 Middlebreaker.
 Marked "90 or 91C" fits the Nos. 90 or 91 Hand Plows and the 90 or 91 Sulky with long landside.
 Marked "90 or 91C Sulky" fits the Nos. 90 and 91 Sulky Plows with short landside.
 Marked "100C" fits the No. 100 and 100L Plows.
 Marked "103 or 104C" fits Nos. 103, 104 and 106.
 Marked "105C" fits the Nos. 95 and 105 Plows.
 Marked "120 or 140" fits the Nos. 120 and 140 Swivel.
 Marked "121 or 122" fits Nos. 121, 122 and 125 Swivel.
 Marked "123C" or "124C" fits Nos. 123 and 124 Plows.
 Marked "126" fits Nos. 126 and 126X Swivel Plows.
 Marked "130" fits the Nos. 115X, 130X and 300.


TRACTOR PLOWS

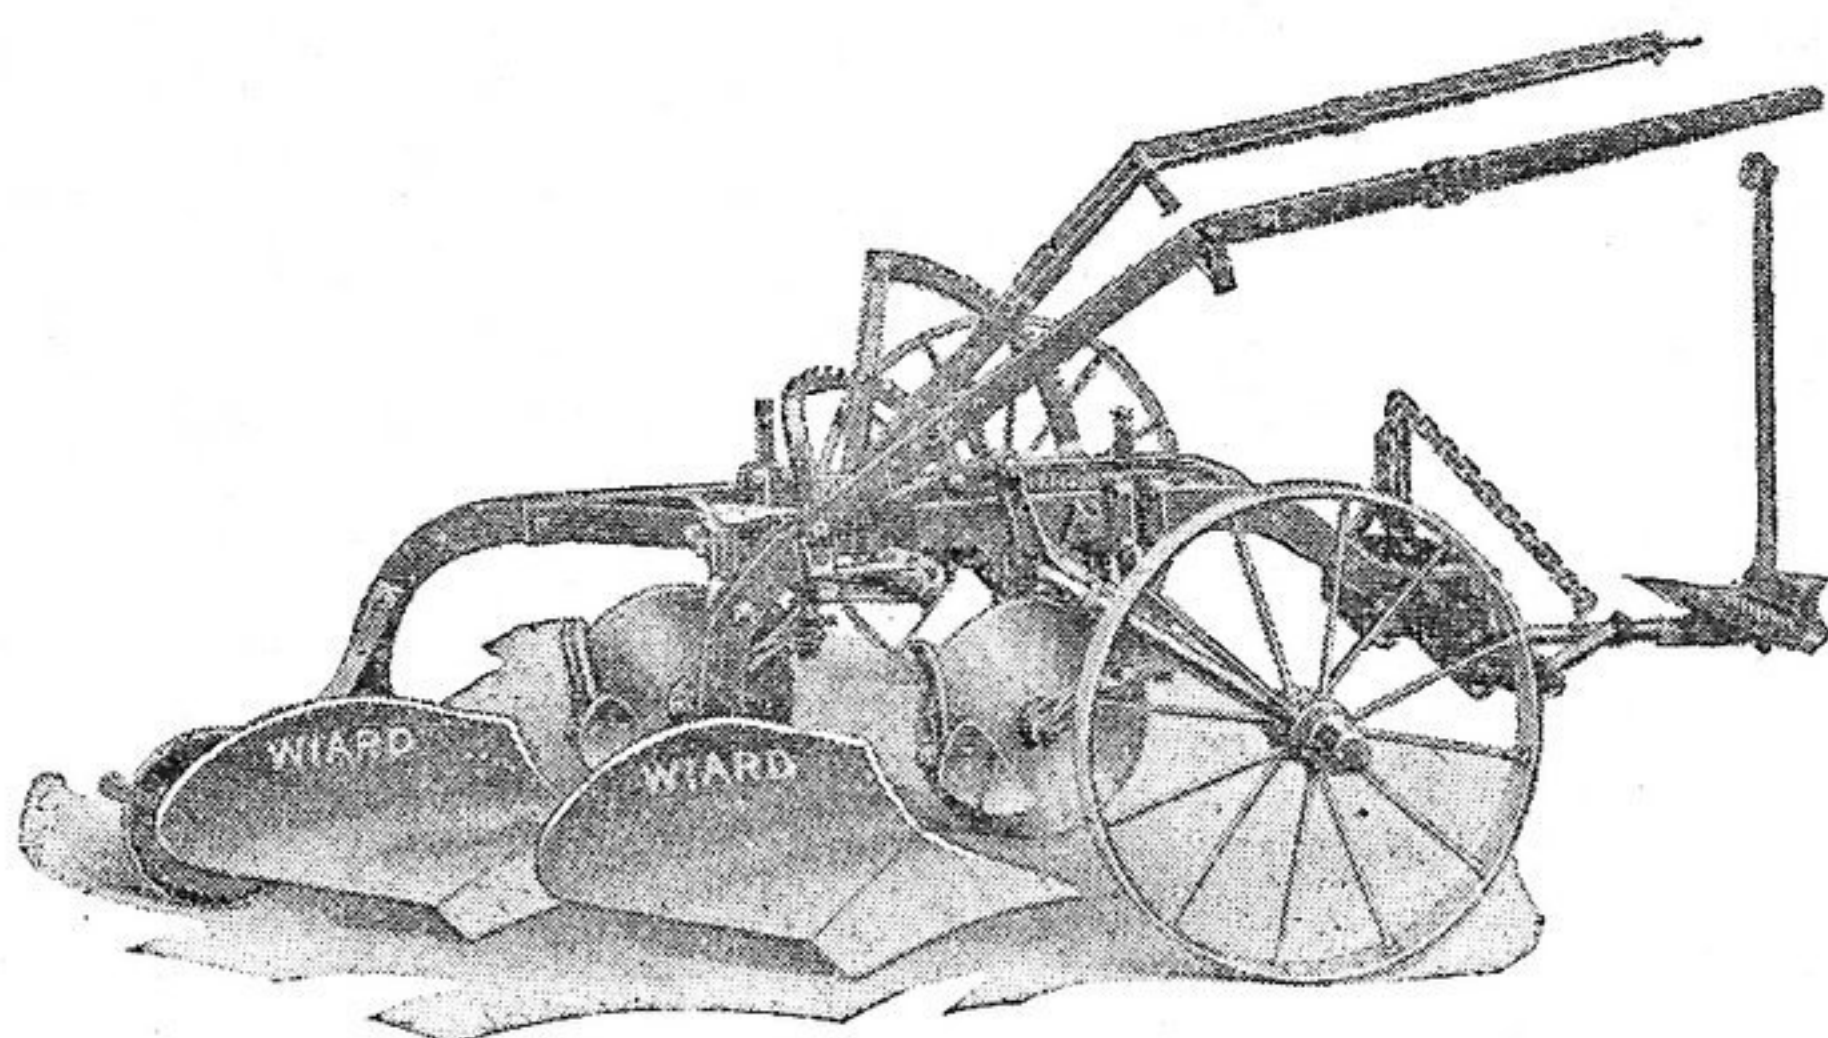

24" to 28" Cut

Regular Equipment — Combination Rolling Colters and Jointers — Safety Spring Trip Hitch and Wheel Lugs

No. 4X With S. C. Steel Molds	\$127.00
No. 4X With Chilled Molds	124.00
For Jointers instead of CRC & J, deduct	8.35
For Long Moldboards, add	1.00
For Wide Wheels with 5" Tire, add	3.00

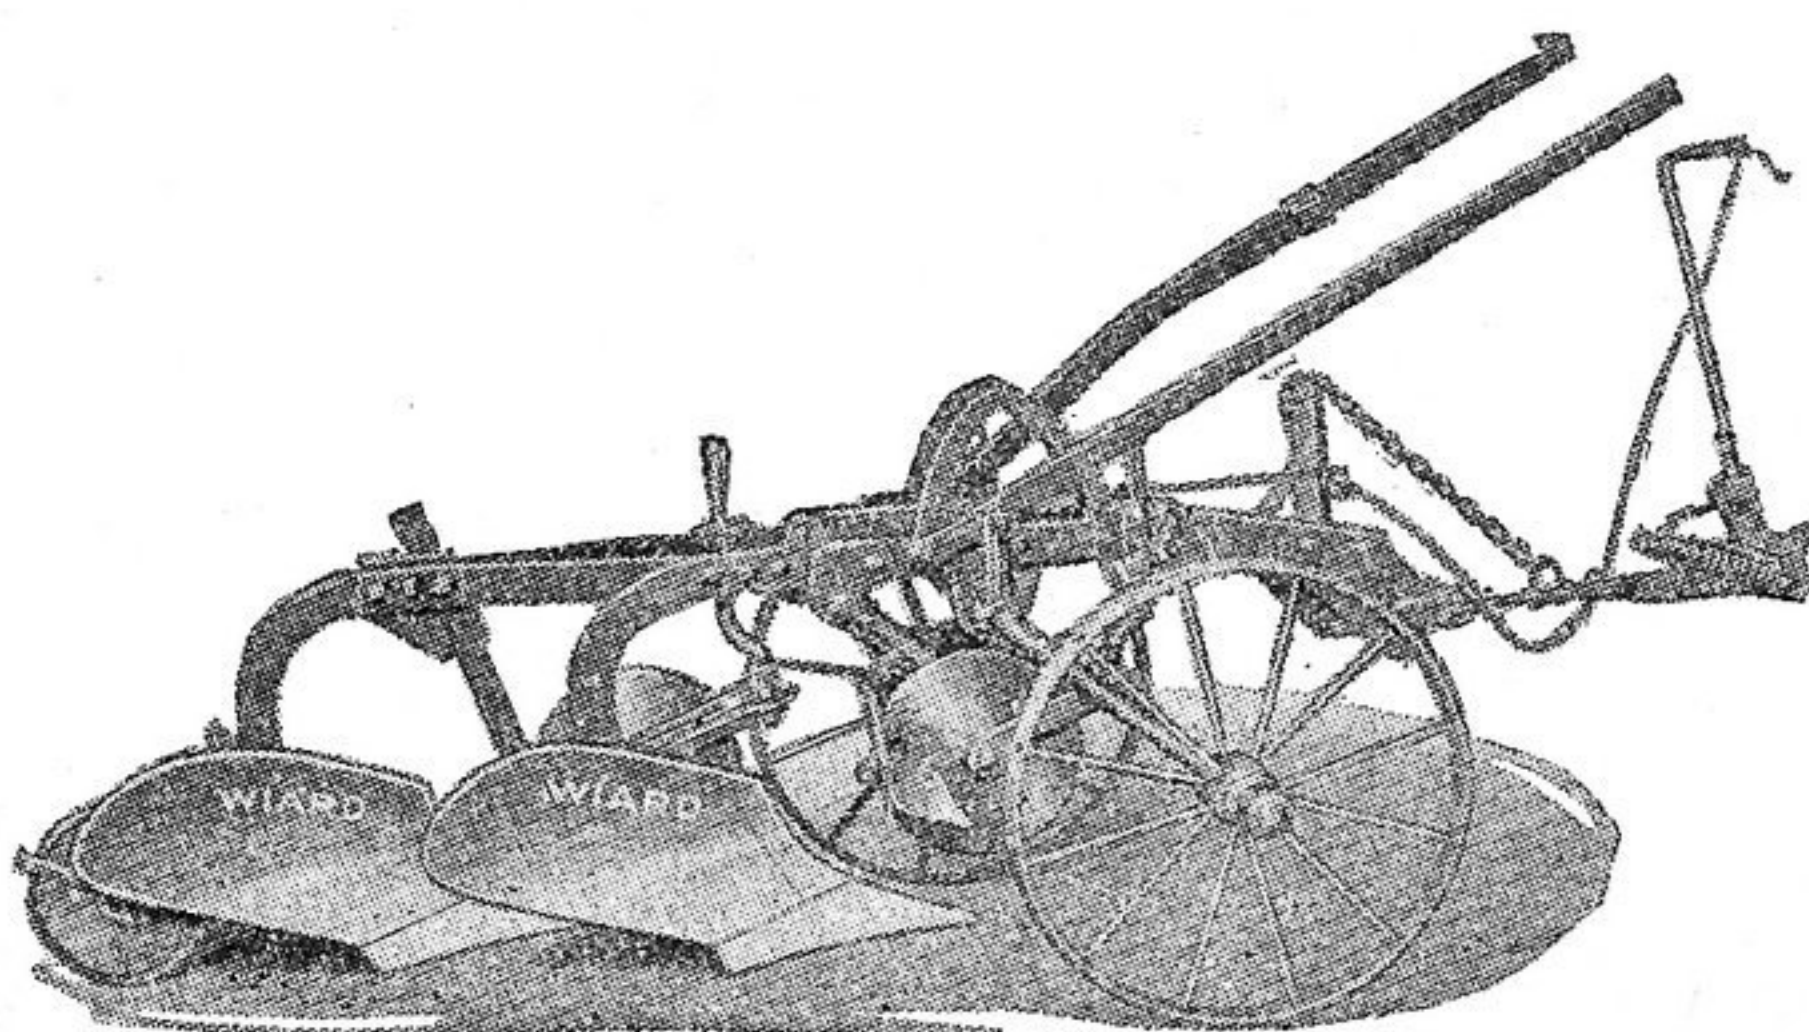 


24" to 28" Cut

Regular Equipment — Combination Rolling Colters and Jointers — Safety Spring Trip Hitch and Wheel Lugs

No. 232 With S. C. Steel Molds	\$105.50
No. 232 With Chilled Molds	102.50
For Jointers instead of CRC & J, deduct	8.35
For Long Moldboards, add	1.00

Retail List of Tractor Plow Parts on Application.

 SINGLE BOTTOM TRACTOR PLOW

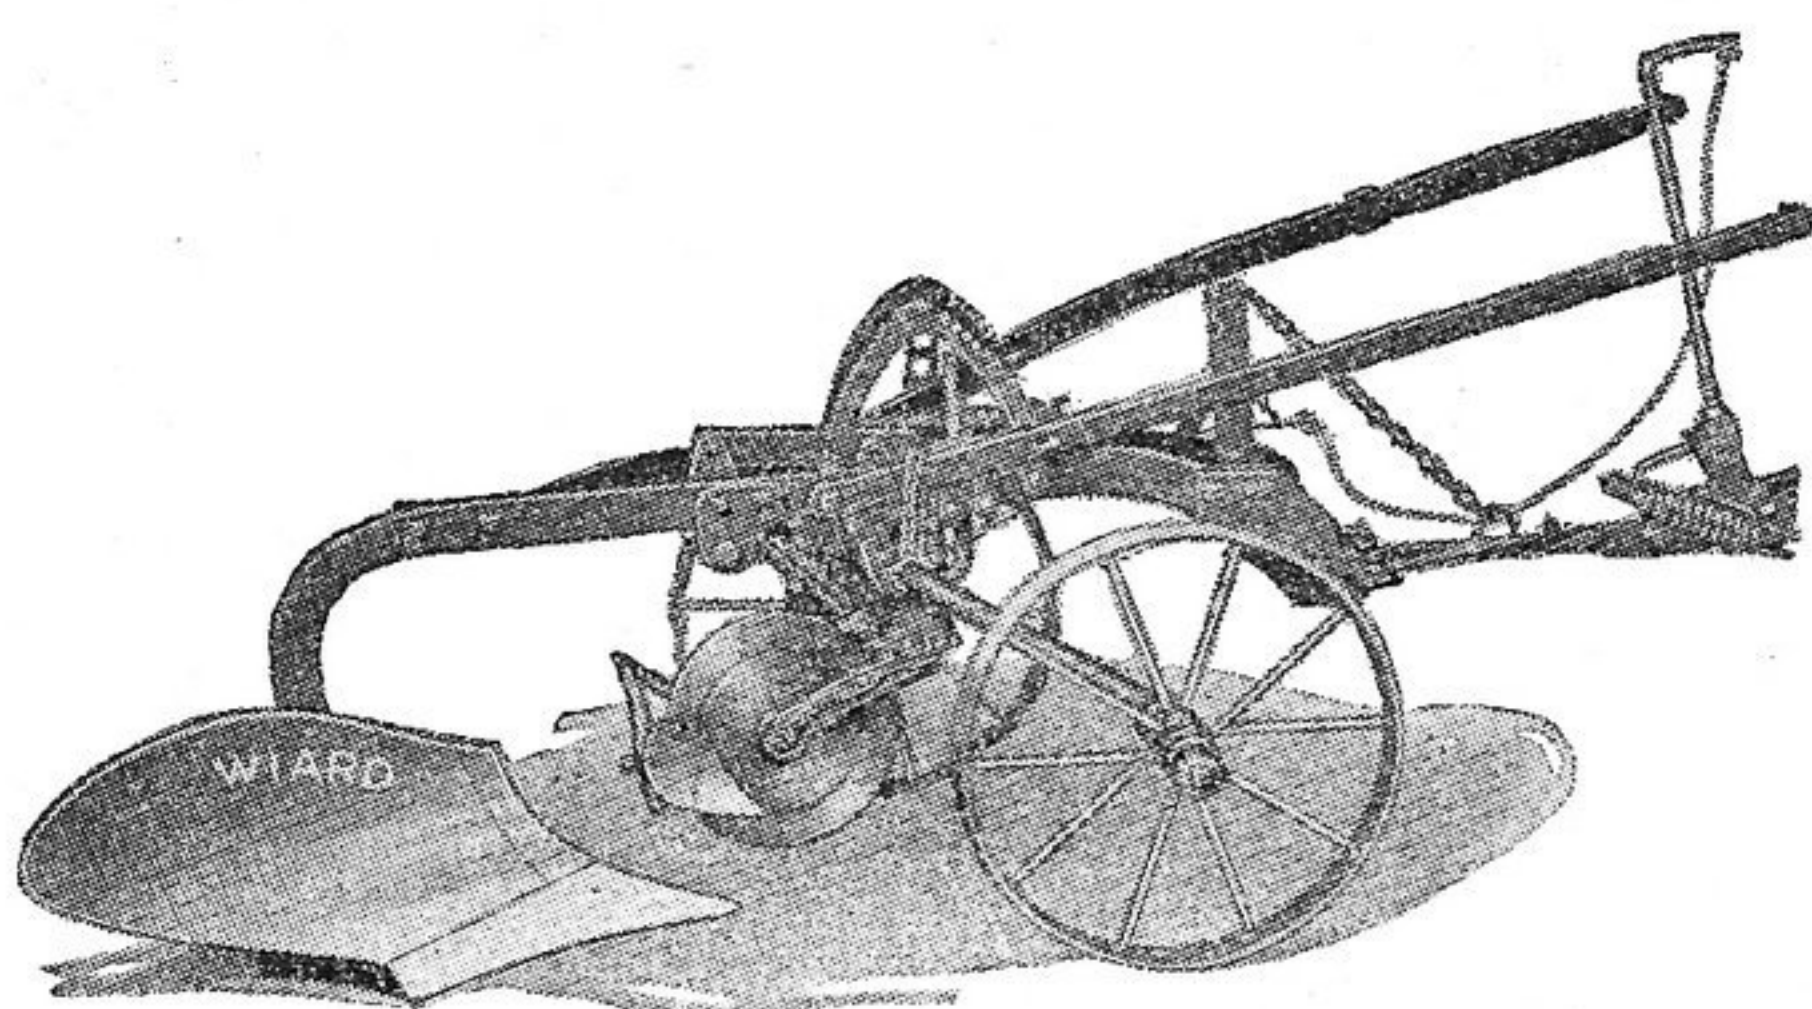

16" to 18" Cut


Regular Equipment — Combination Rolling Colters and Jointers — Safety Spring Trip Hitch and Wheel Lugs

No. 132 With S. C. Steel Mold	\$88.50
No. 132 With Chilled Mold	87.00
For Jointers instead of CRC & J, deduct	4.20

Retail list of Tractor Plow parts on application.

SHORT TURN SULKY PLOWS

 Fitted Regular with Chilled Moldboard, Chilled Point, Lock Rod, 3-H Whiffletrees

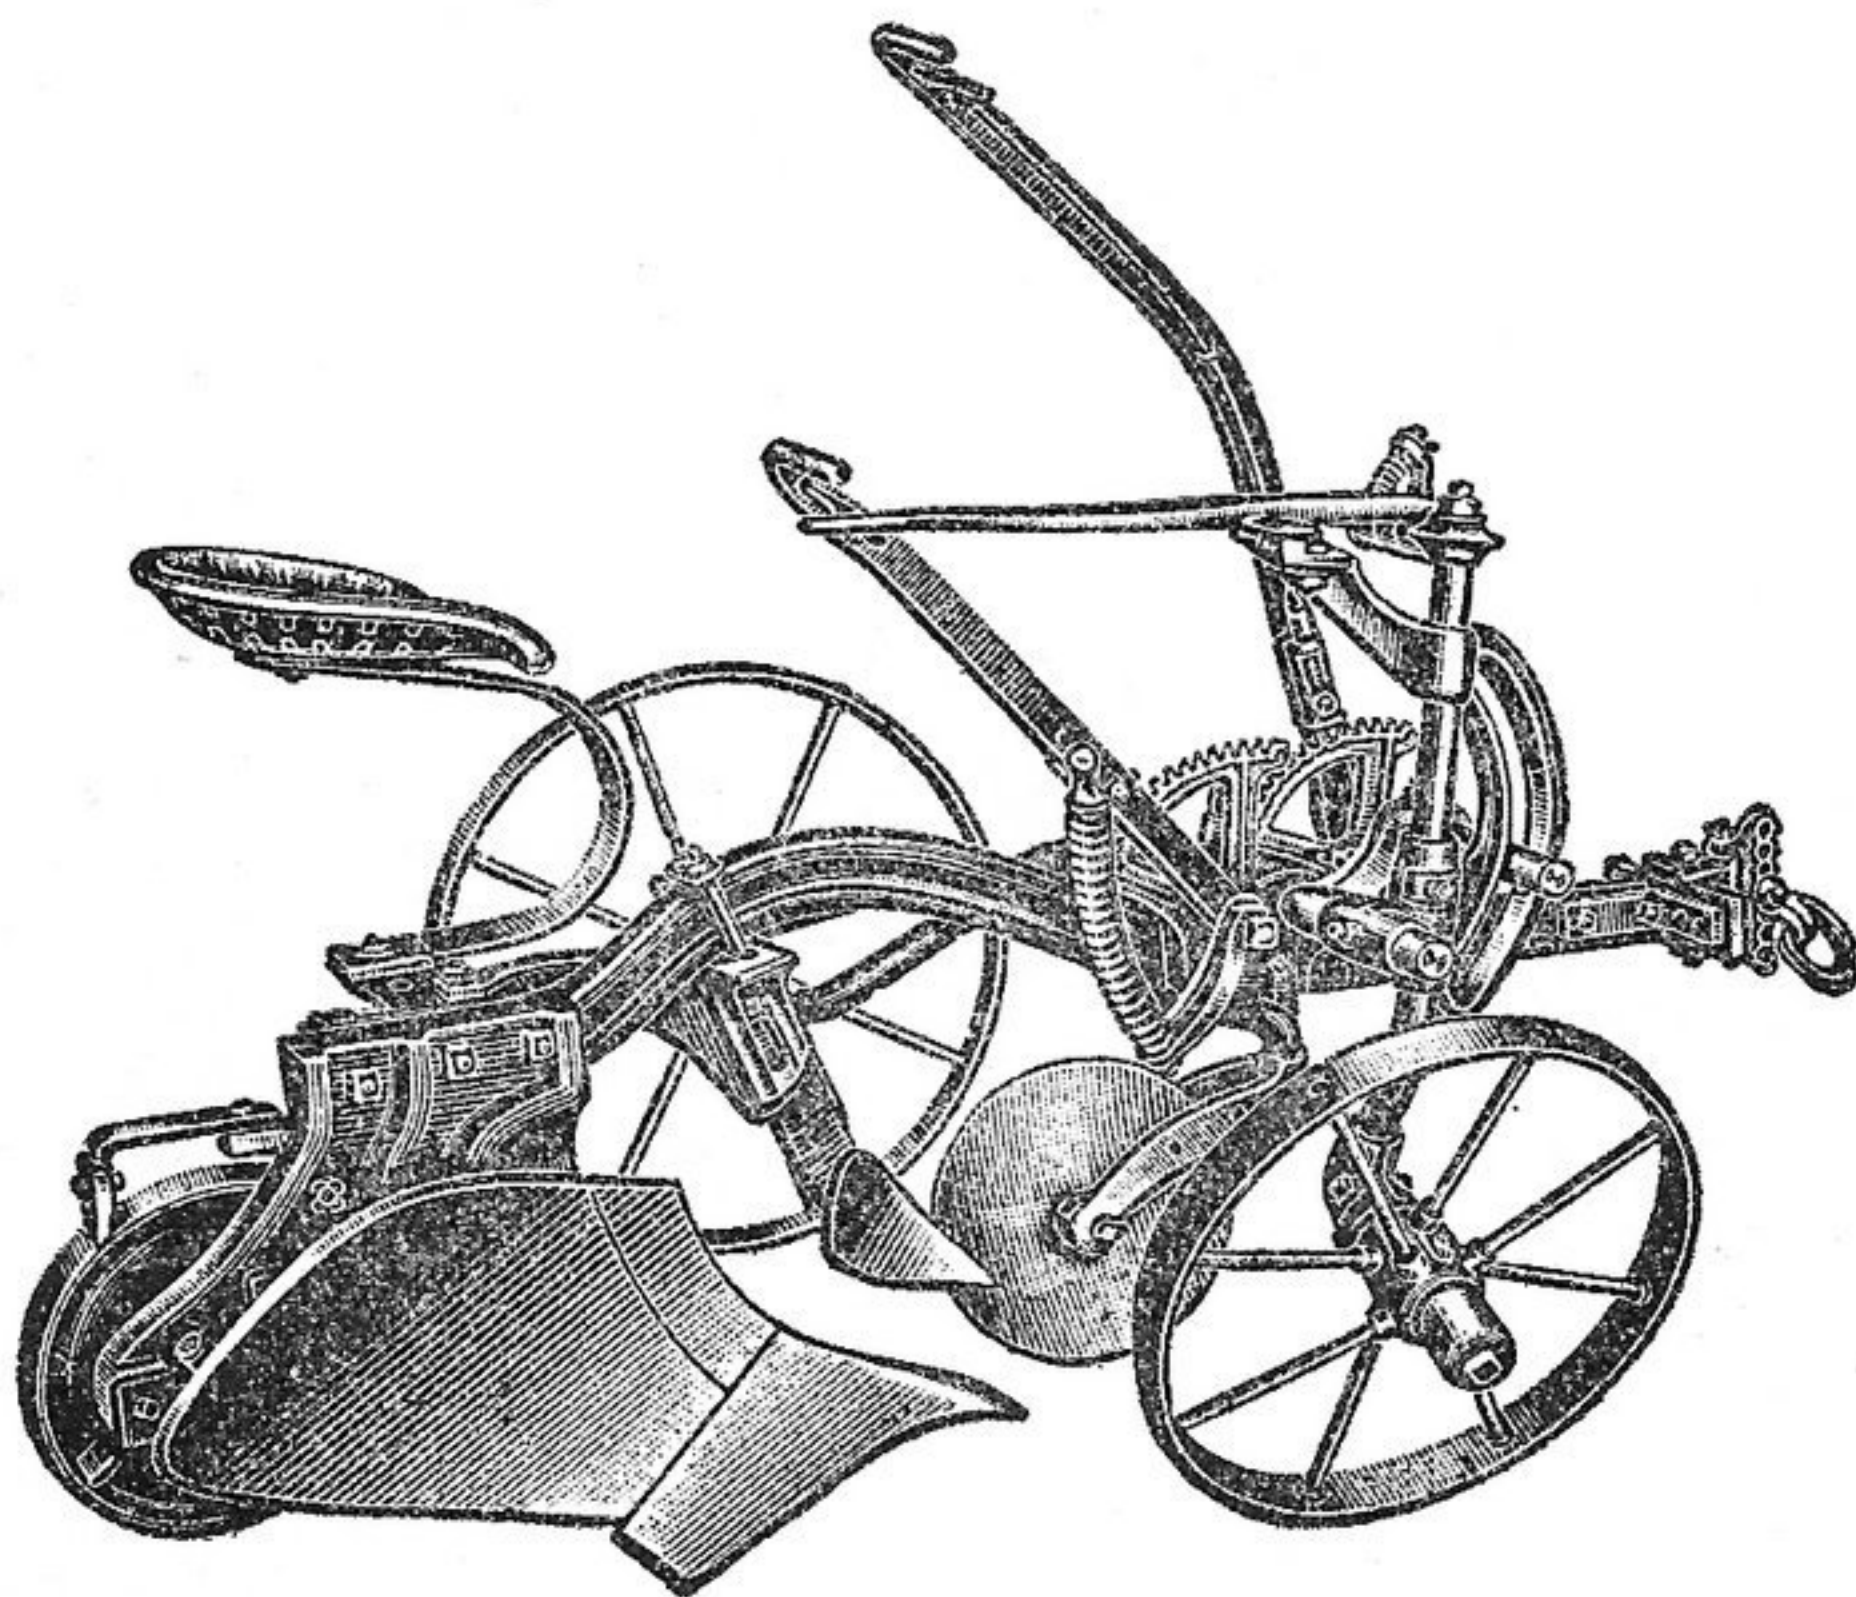


No. 511 R.H.—711 L.H.	\$67.50
No. 511 R.H.—711 L.H. with Jointer	71.00
No. 511 R.H.—711 L.H. with Rolling Colter	71.75
No. 511 R.H.—711 L.H. with Jointer and Rolling Colter	74.75
Add to price for Soft Center Steel Moldboard	1.55
Add to price for Forged Steel Point	2.75
Add to price for Weed Hook95

Retail list of Short Turn Sulky parts on application.


TRACTOR SHIFT HITCHES

 When ordering refer to list and order by number. Always specify name and model of tractor, hitch is to be used with, as connecting irons are different for each style.

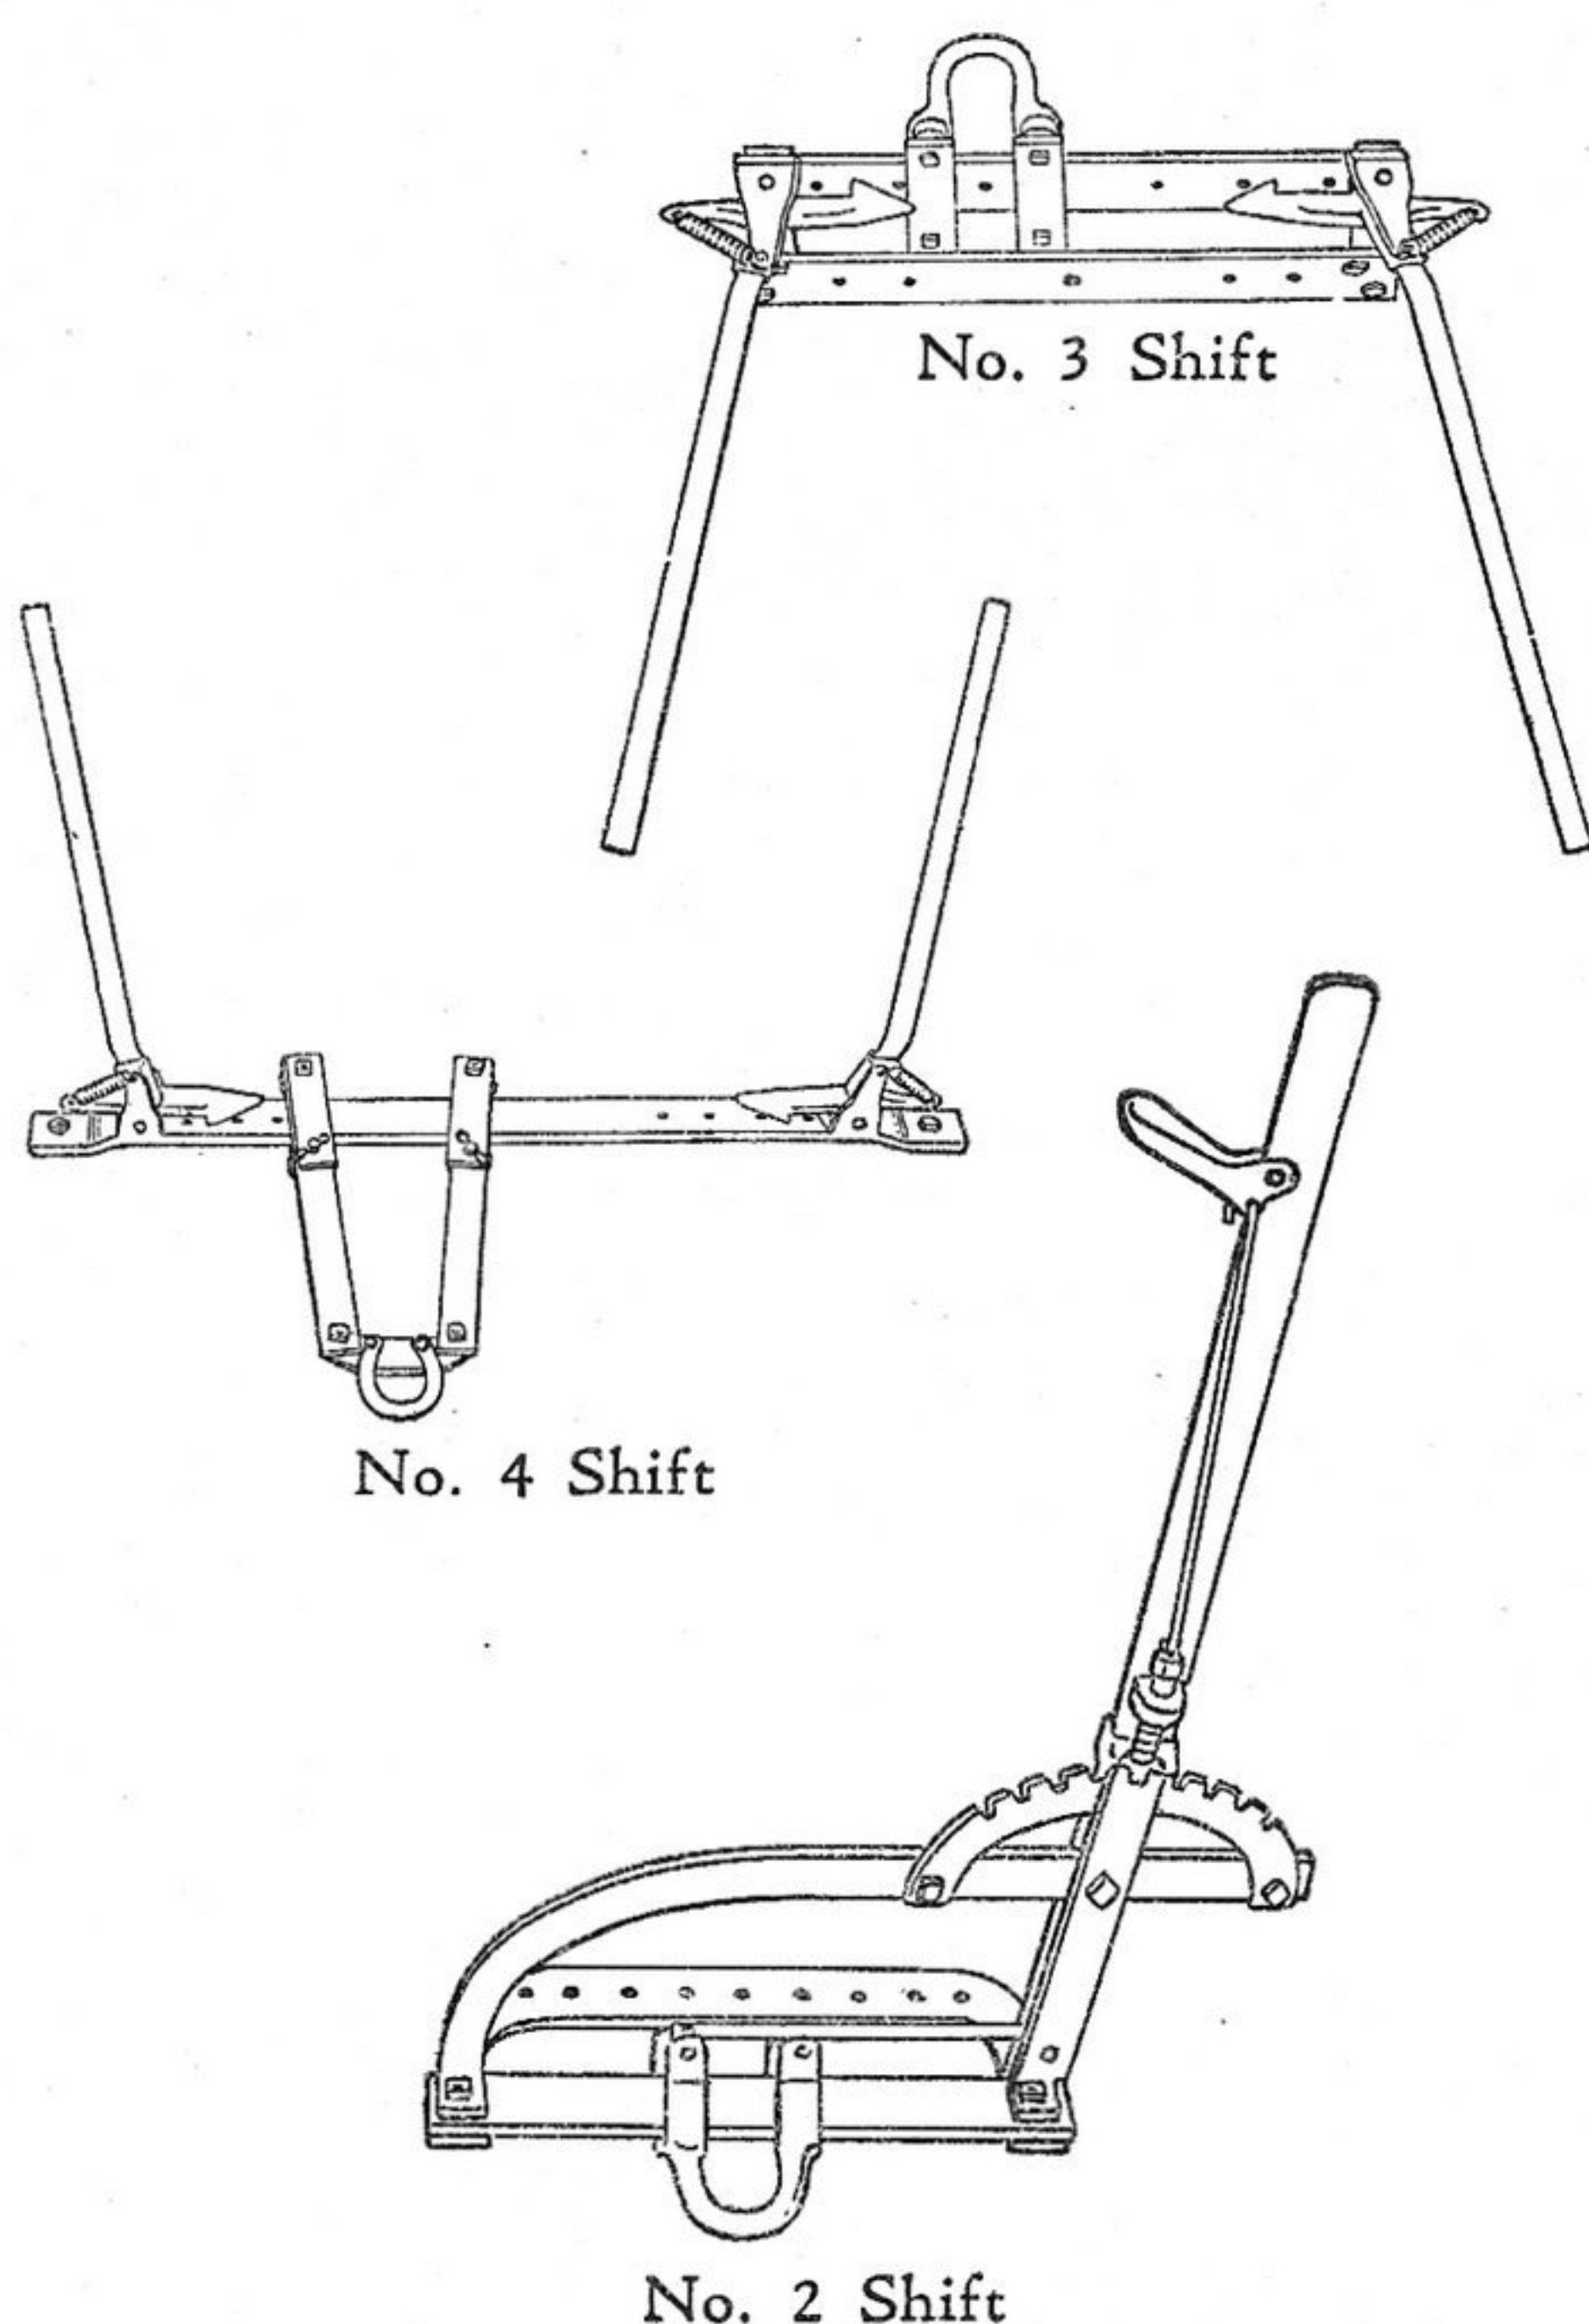

- No. 1—Hitch for Fordsons built prior to 1929....\$ 7.30
- No. 2—Hitch for Case, Deere, I. H. C. and similar types of wheel tractors, except Farmall 11.00
- No. 3—Hitch for Caterpillar, Cletrac and Case Tractors for Neufang Plow 13.50
- No. 4—Automatic Hitch for Farmall with Neufang Plow. Always specify whether you require 42 or 54 inch draw bar 13.50
- No. 5—Hitch for No. 10 and No. 15 Caterpillar.. 11.00
- No. 6—Hitch for Massey-Harris 66 inch General Purpose, for 4X, T. P., and Neufang Plows. Specify if for Neufang 23.00
- No. 7—Hitch for Massey-Harris 76 inch General Purpose, for 4X, T. P., and Neufang Plows. Specify if for Neufang 23.00

 
SULKY PLOWS

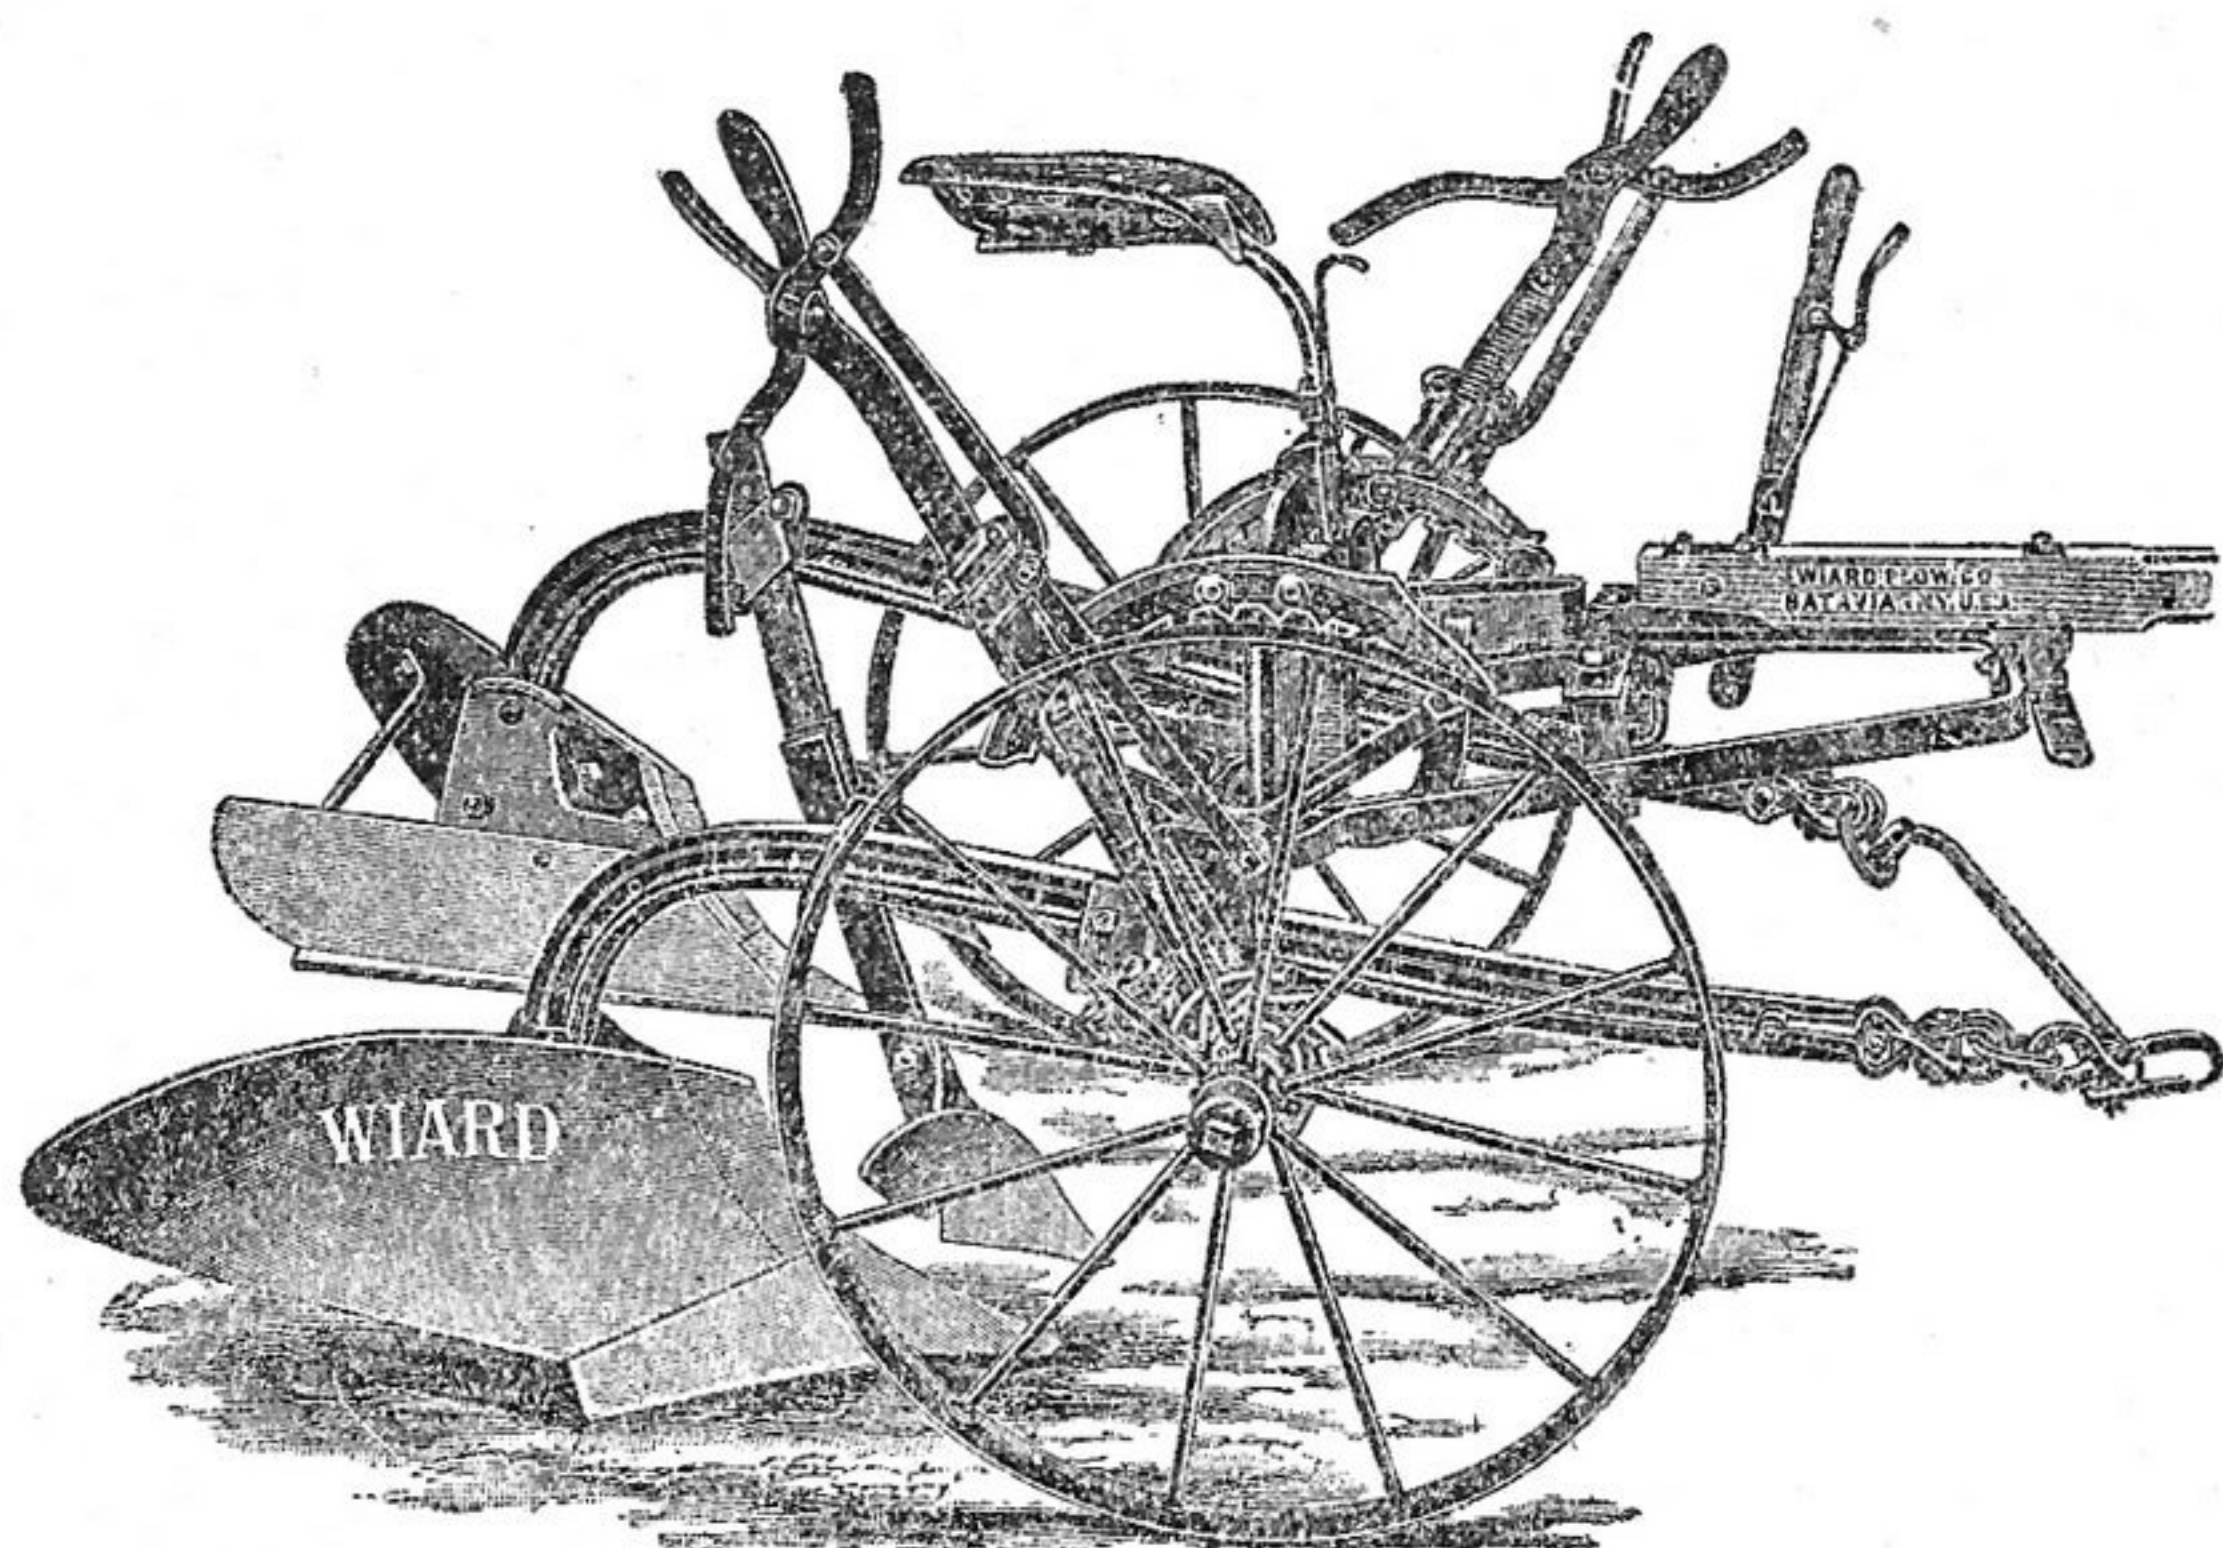

400A REVERSIBLE OR TWO WAY SULKY PLOW

Complete with Chilled Molds, Cast Iron Points, 3-H equipment and rigged with Jointers or straight Colters as ordered. Fitted with bottoms:

43-103 Chilled	\$113.50
1524-1544 Chilled	113.50
Above bases w/S.C. Steel Molds	116.50
44-104 Chilled	115.00
1526-1546 Chilled	115.00
Above bases w/S.C. Steel Molds	118.00
95-105 S.C. Steel Bases	118.00

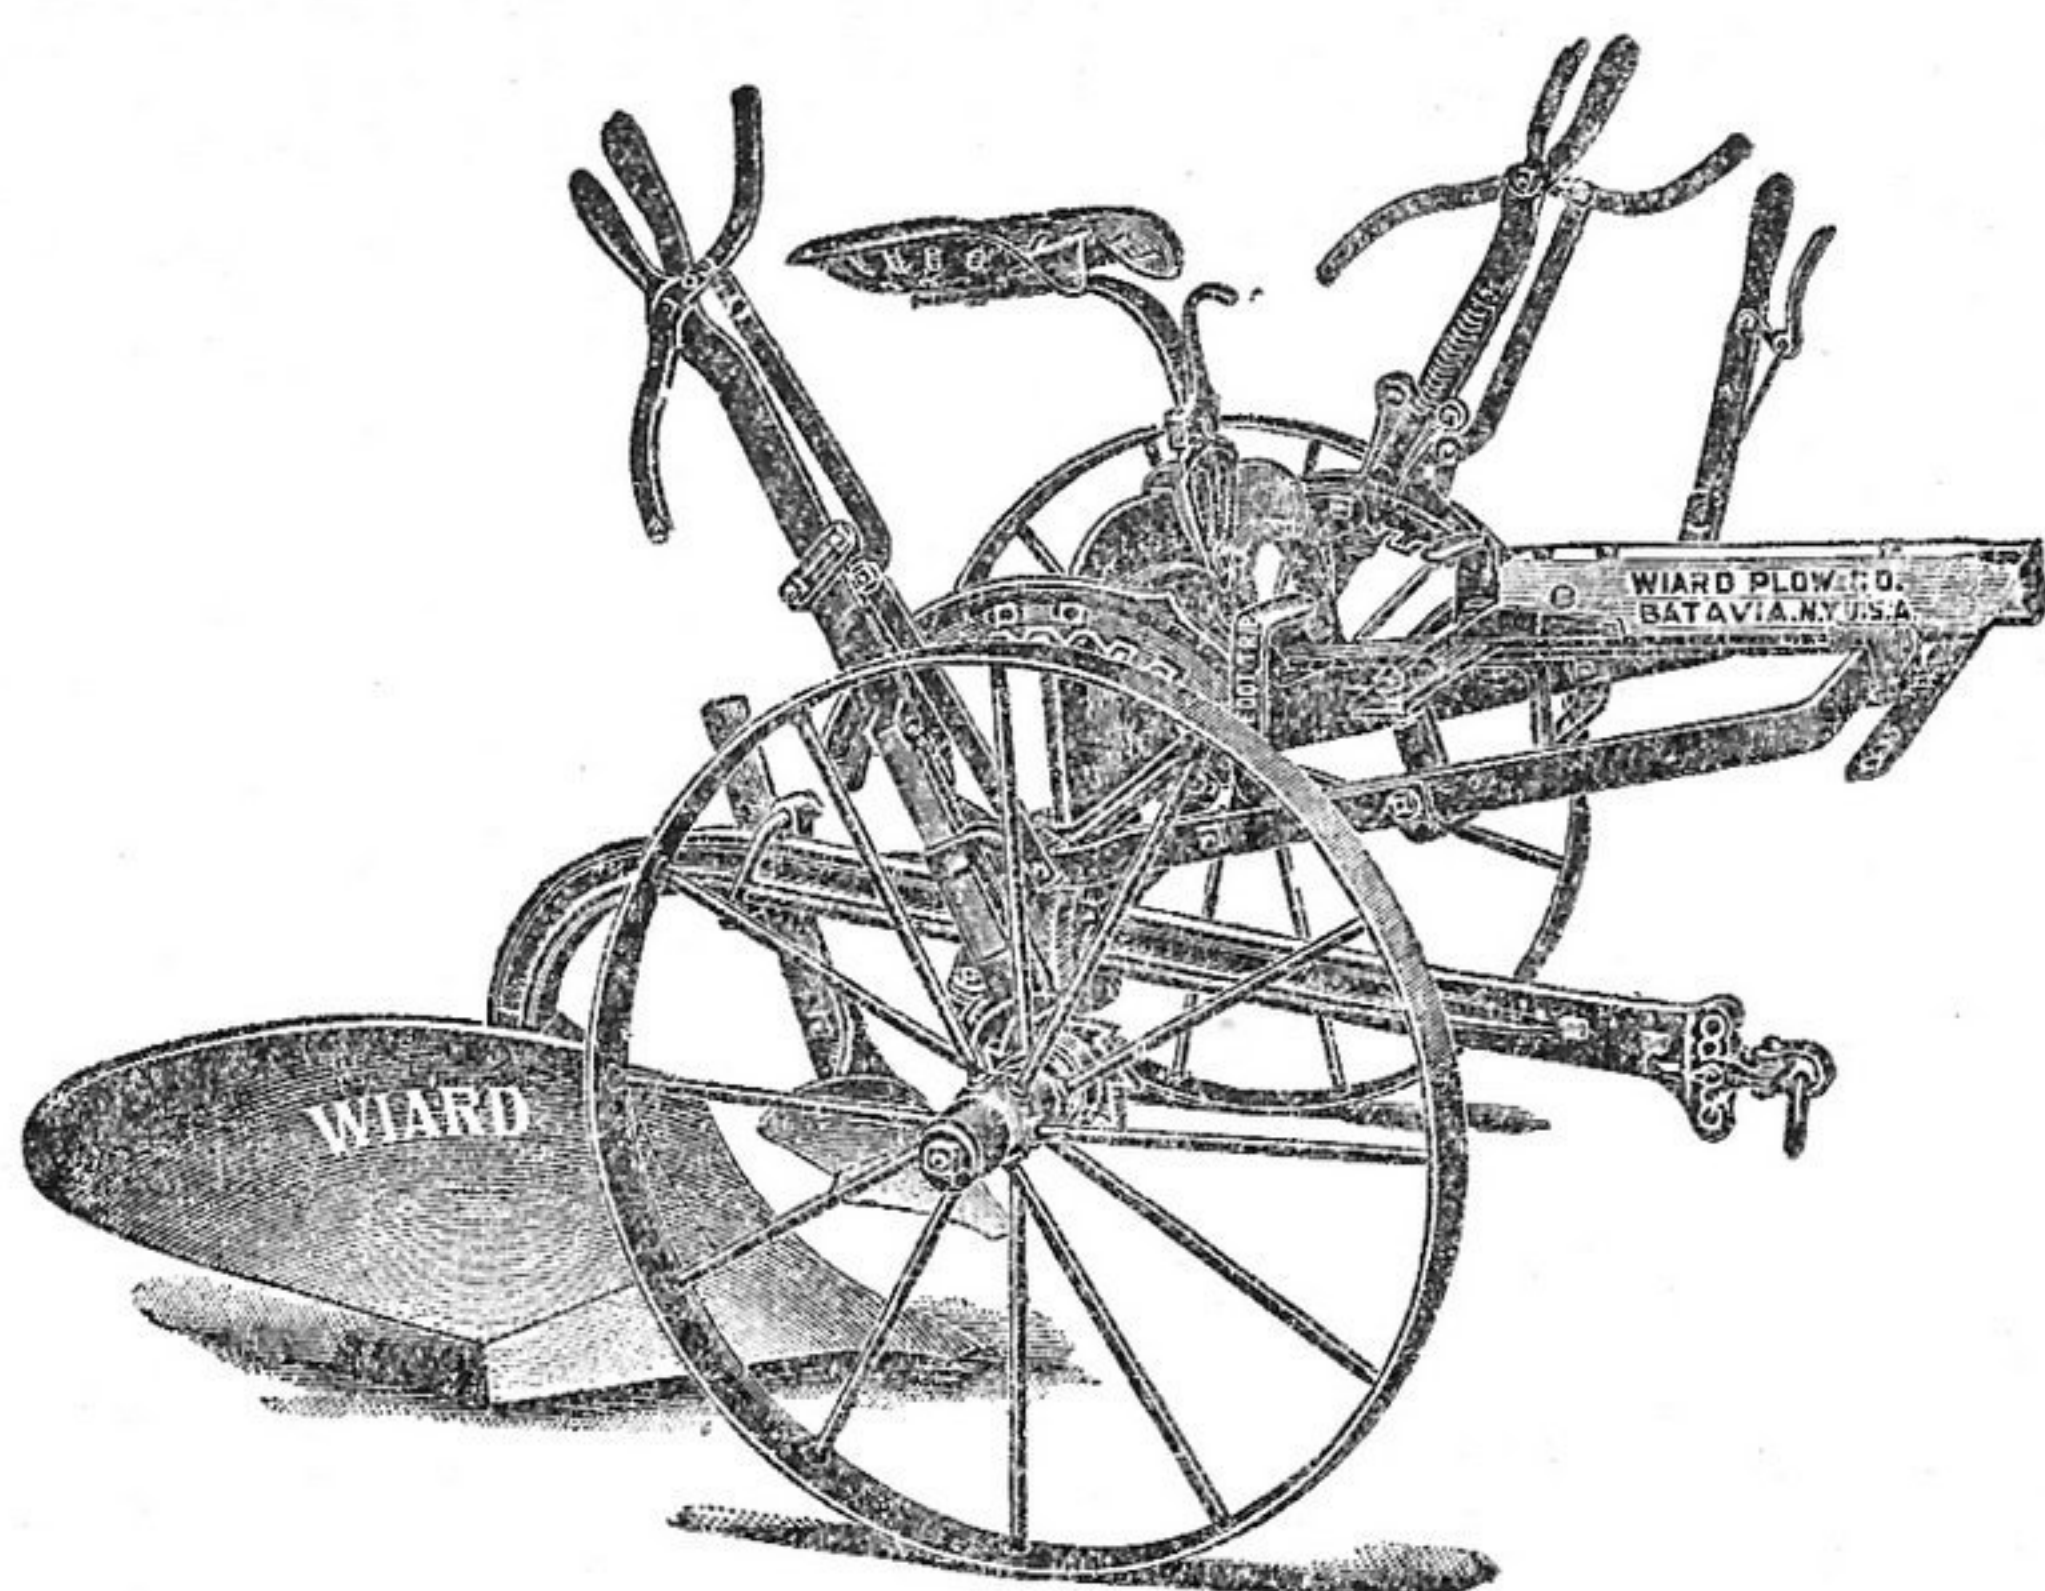 


440A SULKY, RIGHT OR LEFT HAND

Complete with Chilled Mold, Cast Iron Point, 3-H equipment, and rigged with Jointer or straight Colter as ordered. Fitted with bottoms:

43 or 1524 Right, 103 or 1544 Left	\$82.50
44 or 1526 Right, 104 or 1546 Left	83.25
45 or 1528 Right, 106 or 1548 Left	84.00
Steel Molds for above bases, add	1.55
4. 5, 6 Scotch, 100, 100L Rt., 95 Lt.	84.75
When 2-H Equipment is ordered in place of 3-H, deduct	1.95

 
WALKING GANG PLOWS

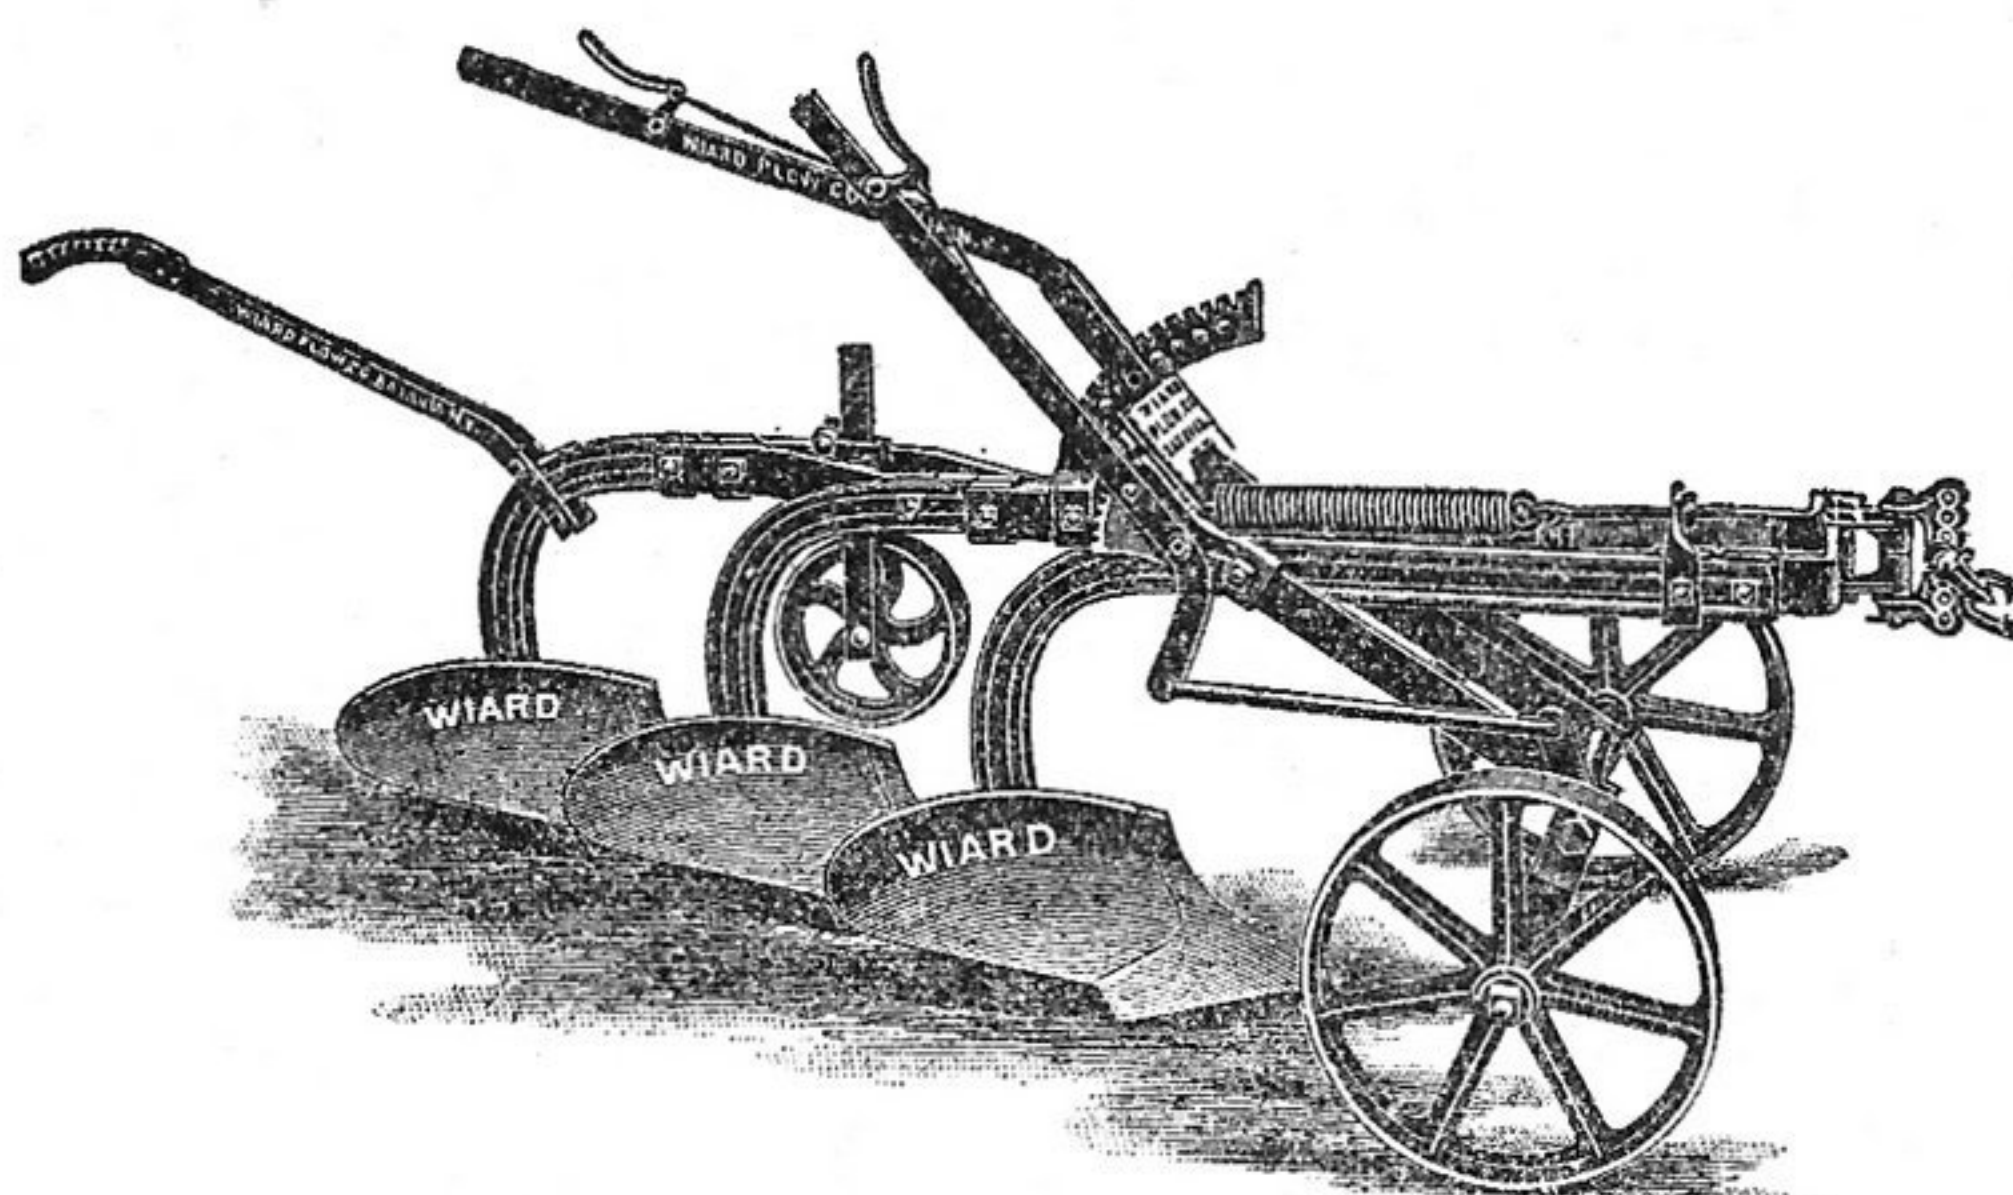

WIARD GANG PLOW NO. 245

Two or Three Furrow Right Hand for Orchard or Vineyard Cultivation

No.		
245	Two furrow, plain with Clevis and Chilled Moldboards	\$55.50
245	Three furrow, plain with Clevis and Chilled Moldboards	65.50
	Extension Clevis for 245 Gang	3.55

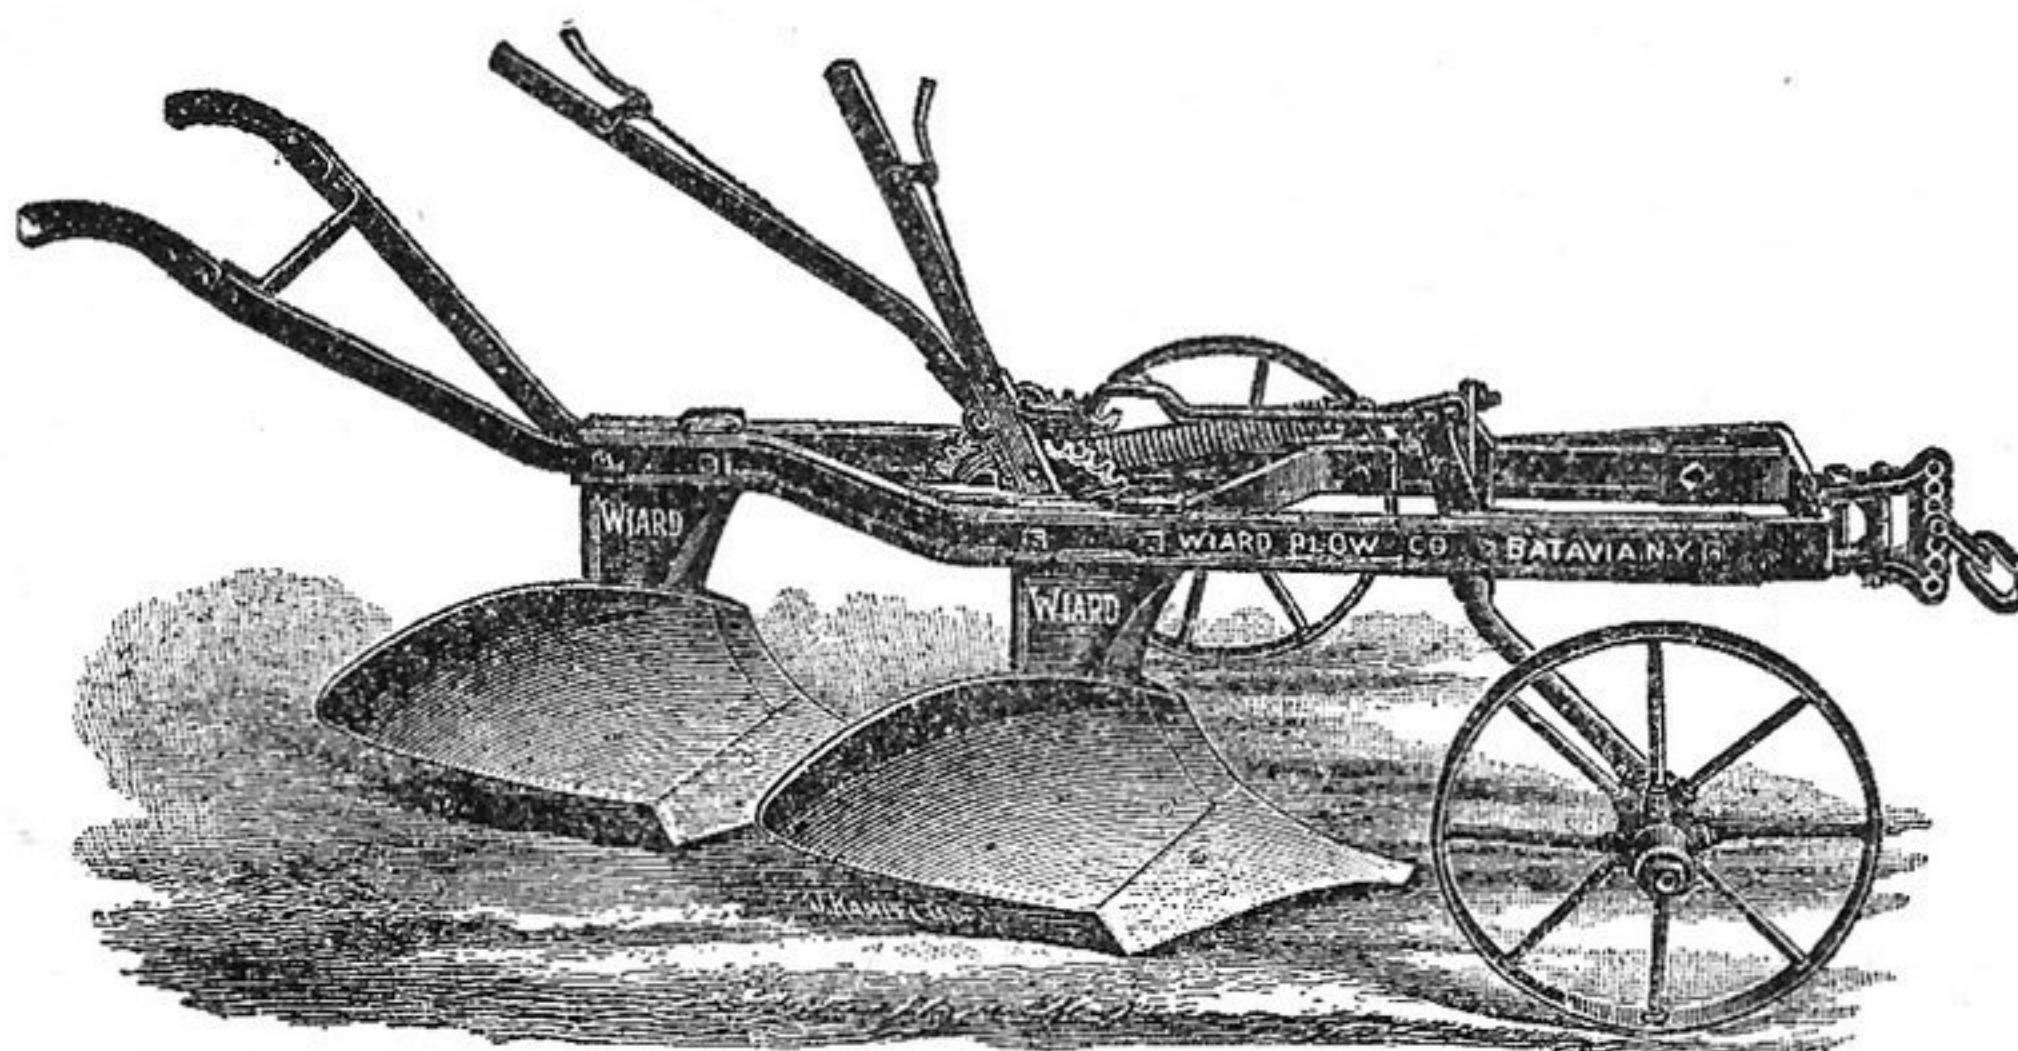 

THE WIARD WALKING GANG PLOW

Two Furrow—Right or Left Hand
Right Hand

No		
203	Two furrow, plain with Clevis and Chilled Mold	\$57.50
203	Two furrow, plain with Clevis and S. C. Steel Mold	60.50
	Left Hand	
206	Two furrow, plain with Clevis and Chilled Mold	57.50
206	Two furrow, plain with Clevis and S. C. Steel Mold	60.50


For above Gangs rigged with Jointers add \$8.50 with Colters add \$7.50.

Note—The following attachments for Gang Plows are extra and must be specified if wanted.

Three-horse Whiffletrees for Gang Plows	\$ 7.00
Four-horse Whiffletrees for Gang Plows	8.25
Four-horse Whiffletrees and Equalizers complete for Gang Plows	11.00


Above prices for Sulky and Gang Plows include wrenches and one extra Plow Point with each Plow except when Plows are equipped with Steel Points, then no extra Point is included.

 WALKING PLOWS

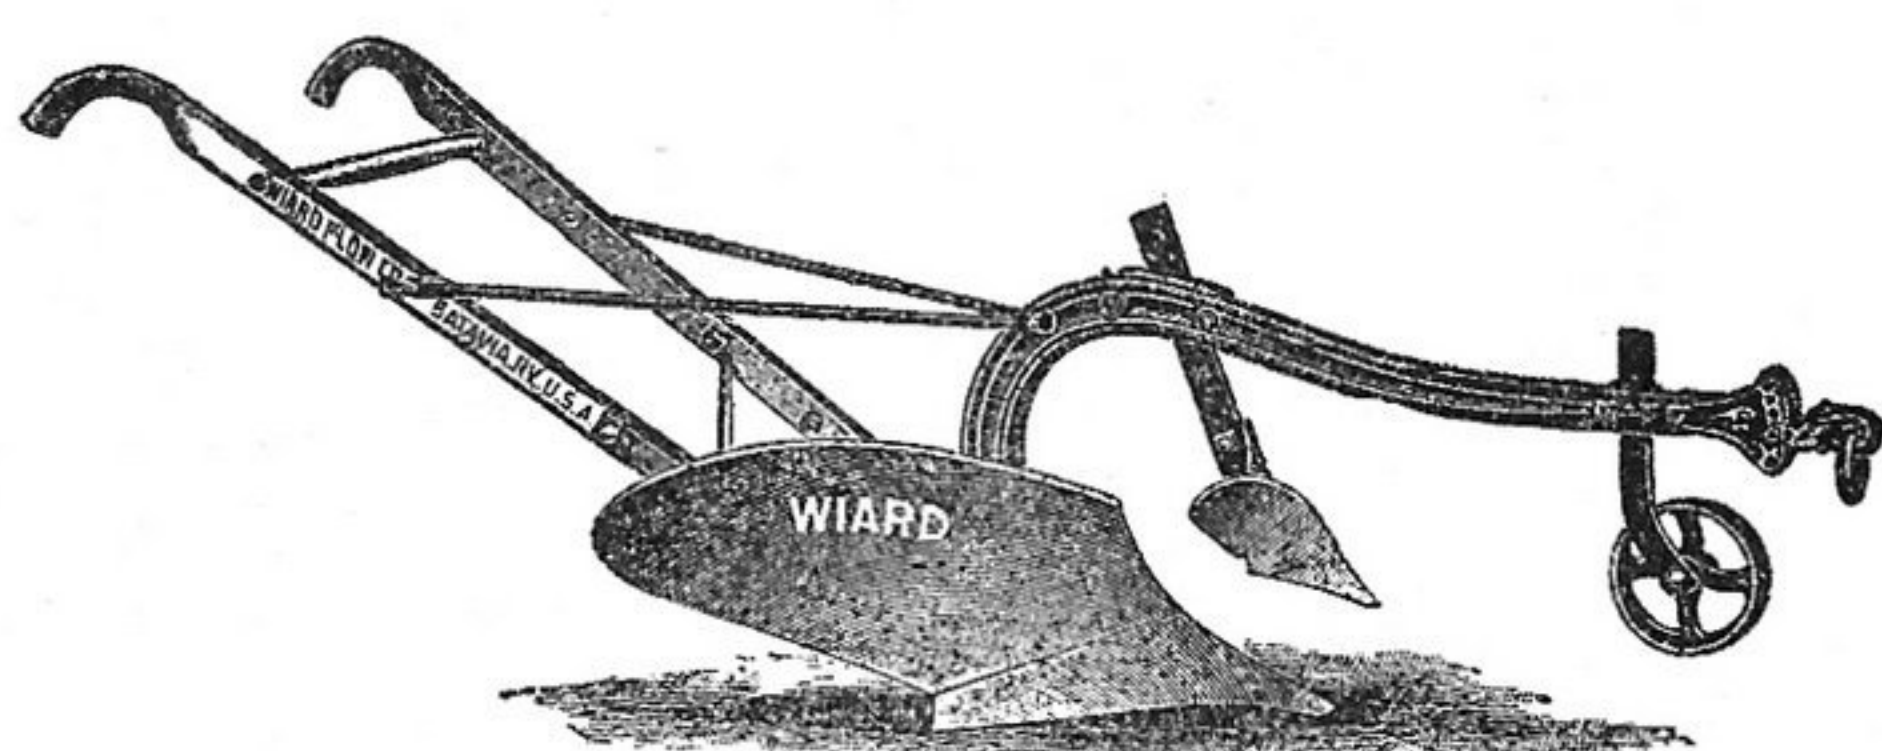

1500 Series


Left Hand	Right Hand	FLAT LAND PLOWS With Steel Beams	With Clevis	With Clevis and Wheel	Full Rig'd with Jointer
1544	1524	Two horse, chilled	20 00	21 50	25 50
1544	1524	Two horse, with S.C. steel mold	21 50	23 00	27 00
1546	1526	Two or 3-horse, chilled	22 00	23 50	27 50
1546	1526	Two or 3-horse, with S.C. steel mold	23 50	25 00	29 00
1548	1528	Three horse, with	25 00	26 50	30 50
1548	1528	Three horse, chilled. S.C Steel Mold	27 00	28 50	32 50

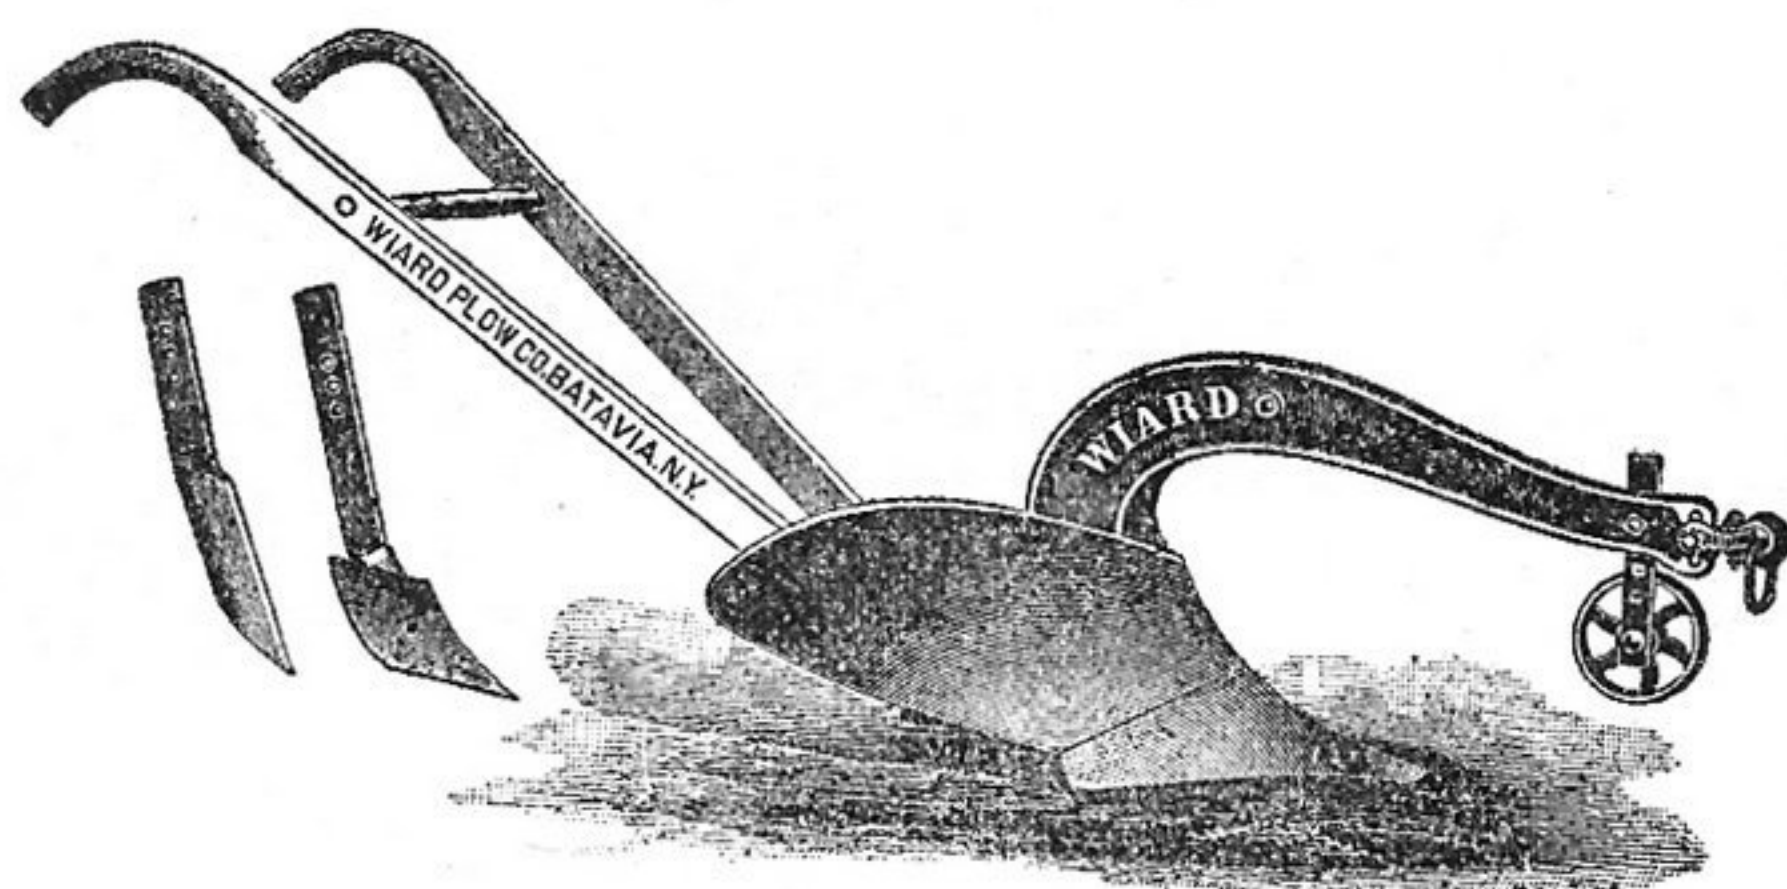 

Left Hand	Right Hand	FLAT LAND PLOWS With Cast Beams	With Clevis	With Clevis and Wheel	Full Rig'd With Jointer
1546		Two or 3-horse, chilled	20 50	22 00	26 00
1546		Two or 3-horse, with S.C. steel mold	22 00	23 50	27 50
1548		Three horse, with S.C.	23 75	25 25	29 25
1548		Three horse, child steel mold	25 75	27 25	31 25
16		Two horse, chilled	18 50	20 00	24 00
16		Two horse, with S.C. steel mold	20 25	21 75	25 75
25		Large 2-horse, chilled	20 25	21 75	25 75
25		Two horse, with S.C. steel mold	21 75	23 25	27 25
200		Two horse, cast mold-board	15 50	17 50	21 50
200		Two horse, cast mold, with cast steel beam, cast steel points	30 25	31 75	35 75


Plows with Colter 50 cents less than with Jointer.

 WALKING PLOWS

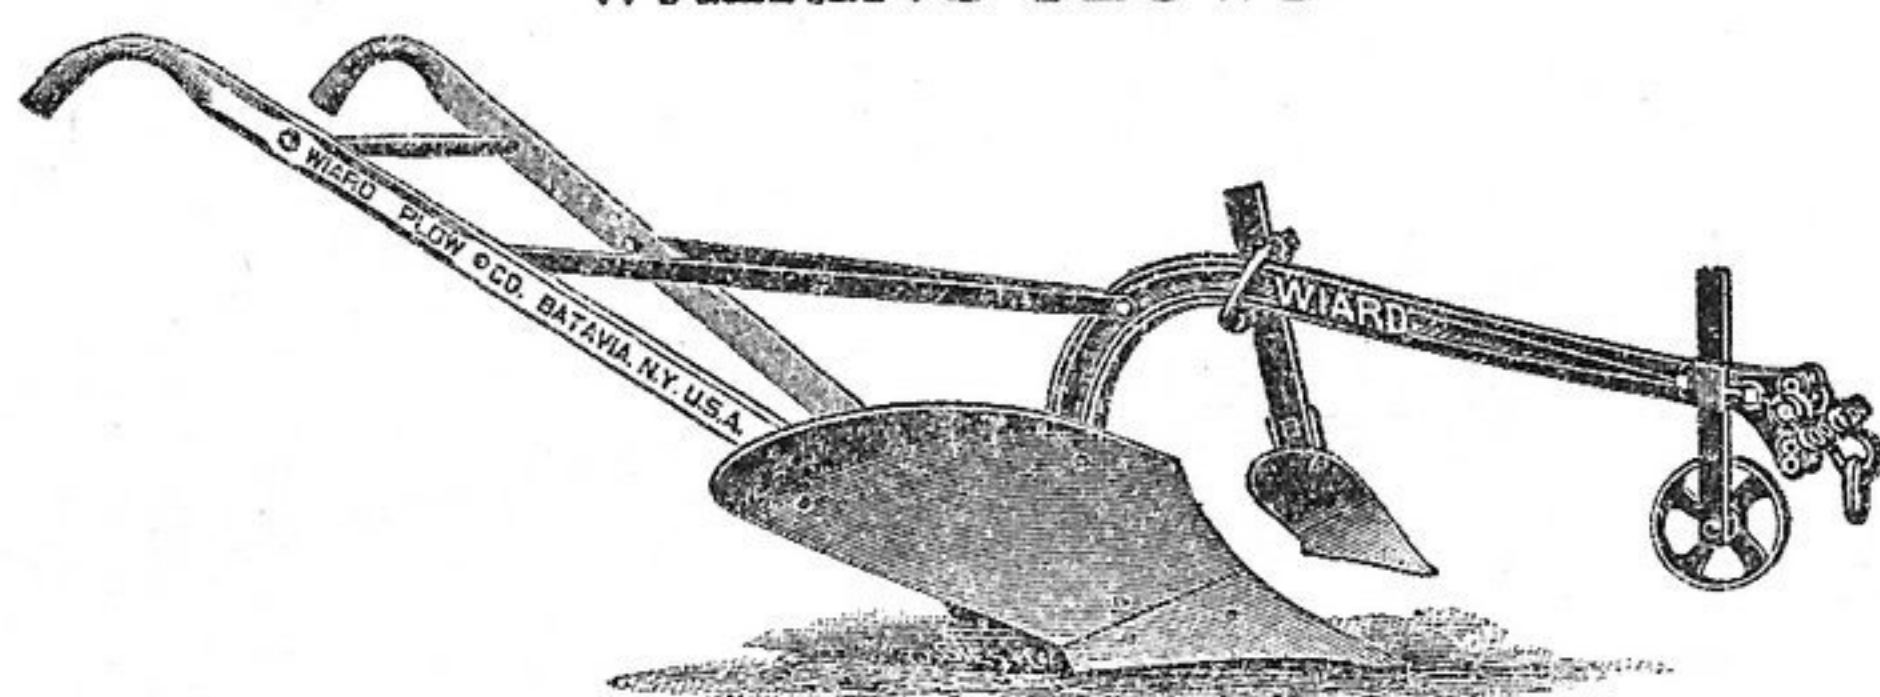

No. 40 Series

Left Hand	Right Hand	FLAT LAND PLOWS With Steel Beams	With Clevis	With Clevis and Wheel	Full Rig'd With Jointer
103	43	Two horse, chilled	20 00	21 50	25 50
103	43	Two horse, with S.C. steel mold	21 50	23 00	27 00
104	44	Two or 3-horse, chilled	22 00	23 50	27 50
104	44	Two or 3-horse, with S.C. steel mold	23 50	25 00	29 00
106	45	Three horse, chilled ..	25 00	26 50	30 50
106	45	Three horse, with S.C. steel mold	27 00	28 50	32 50

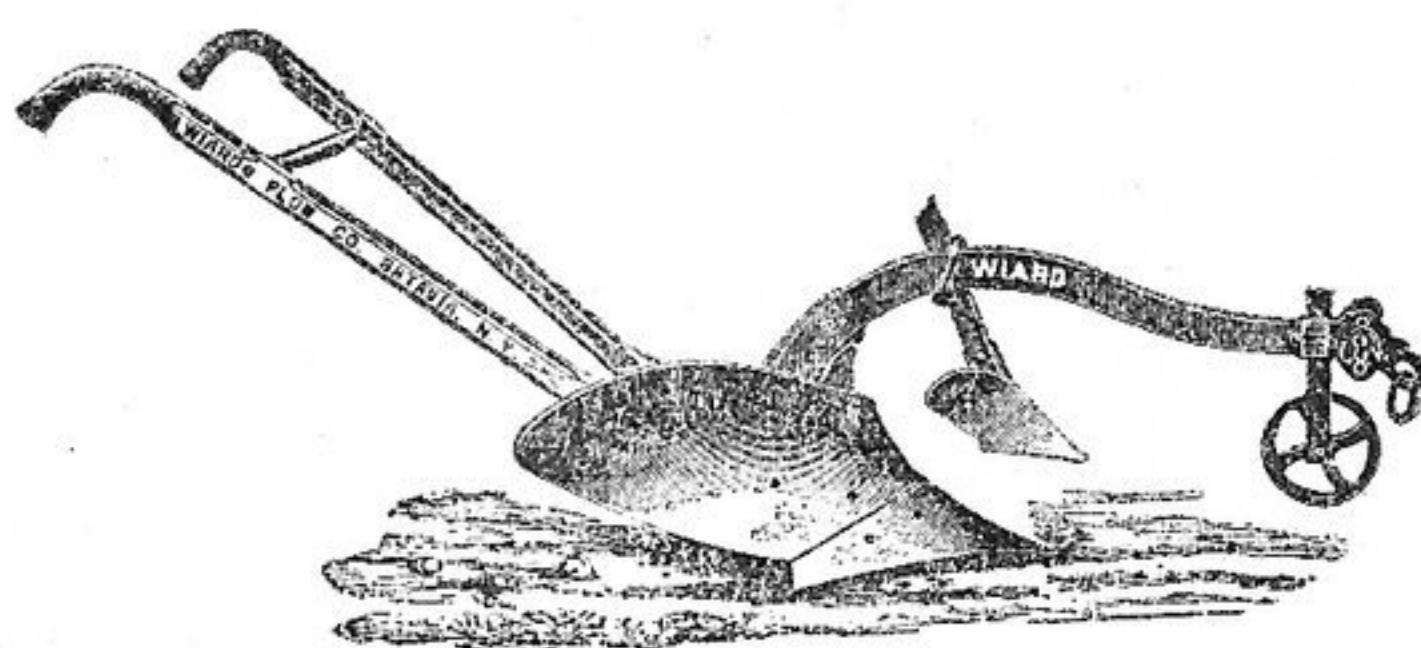 


No. 70 or 90 Series

Left Hand	Right Hand	FLAT LAND PLOWS With Steel Beams	With Clevis	With Clevis and Wheel	Full Rig'd With Jointer
	75	One horse, chilled	14 75	16 25	20 00
	75	One horse, with S.C. steel mold	16 00	17 50	21 25
	74	One horse, larger chilled	15 25	16 75	20 50
	74	One horse, larger, with S.C. steel mold	16 50	18 00	21 75
	73	Small 2-horse, chilled	17 00	18 50	22 50
	73	Small, 2-horse, with S.C. steel mold	18 75	20 25	24 25
	72	Light 2-horse, chilled	20 00	21 50	25 50
	72	Light 2-horse, with S.C. steel mold	21 50	23 00	27 00
81	91	Two horse, chilled	21 25	22 75	26 75
81	91	Two horse, with S.C. steel mold	22 75	24 25	28 25
80	90	Two or 3-horse, chilled	22 00	23 50	27 50
80	90	Two or 3-horse, with S.C. steel mold	23 50	25 00	29 00

Note—The Nos. 43, 44, 45, 80, 81, 90, 91, 95, 100, 100L, 106, 524, 526, 528, 544, 546, 548 Plows when equipped with Forged Steel points, are \$2.50 higher than above prices. No extra point furnished.


Plows with Colter 50 cents less than with Jointer.

 WALKING PLOWS

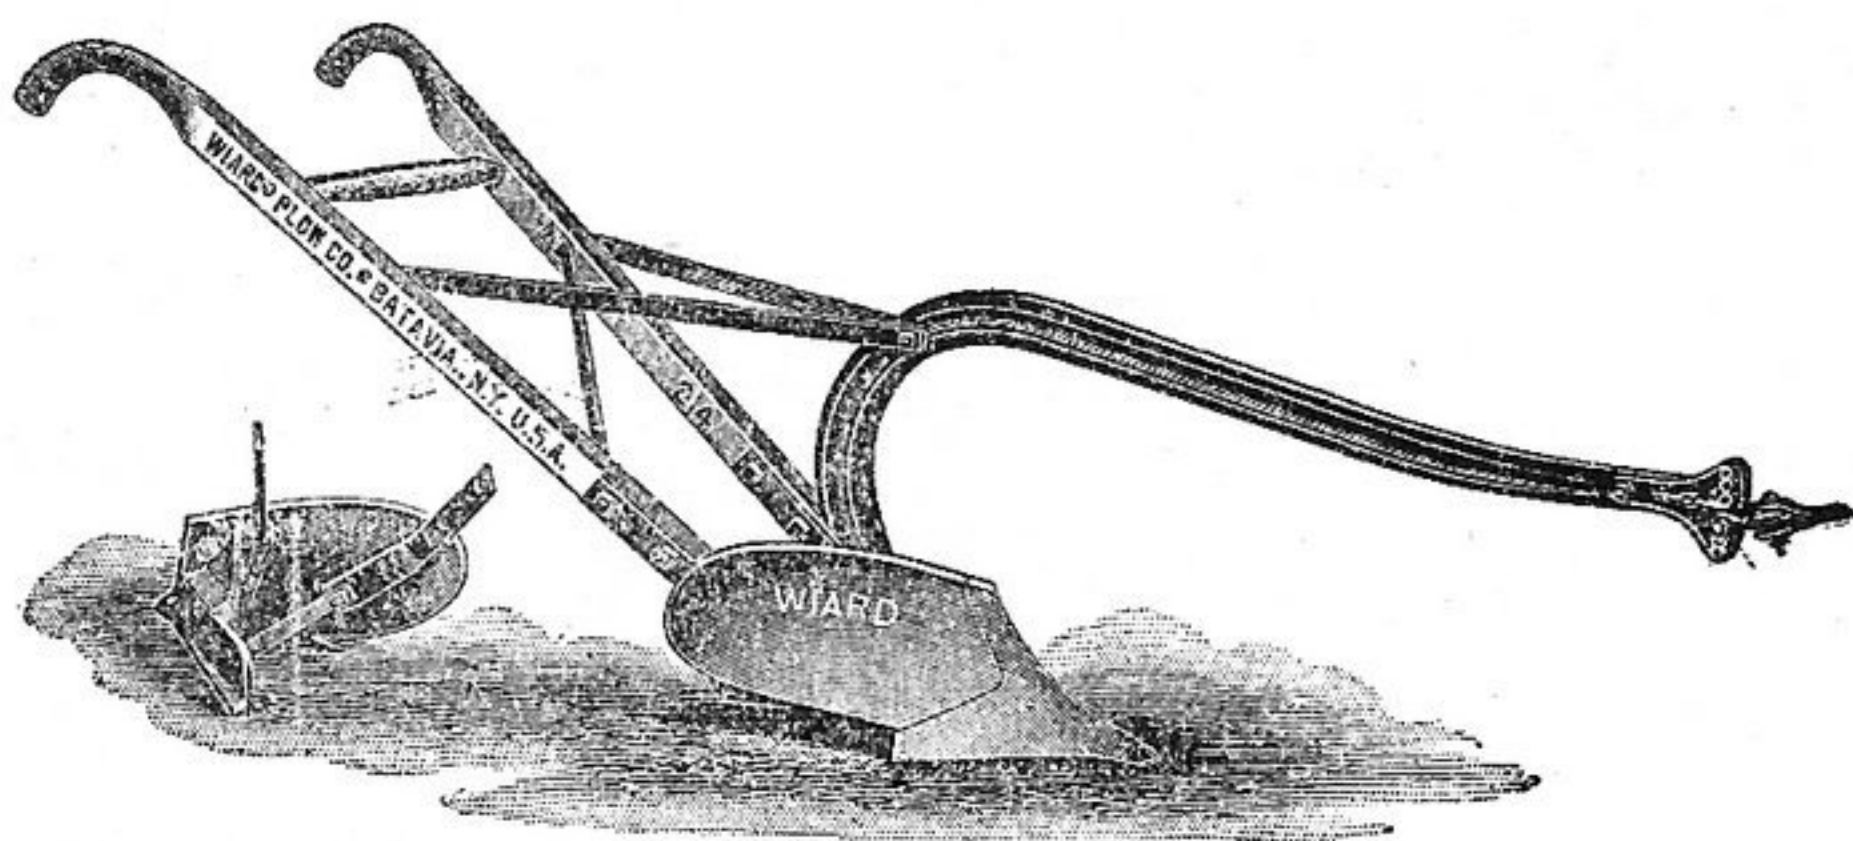


Southern Series

Left Hand	Right Hand	FLAT LAND PLOWS With Steel Beams	With Clevis	With Clevis and Wheel	Full Rig'd With Jointer
		208 Small one horse	6 75		
		209 Larger one horse	7 00		
		210 One horse, chilled.....	9 50	11 00	
		212 One horse, chilled.....	10 50	12 00	
		214 One horse, chilled	13 25	14 75	
416		215 One or 2-horse, chilled	14 75	16 25	

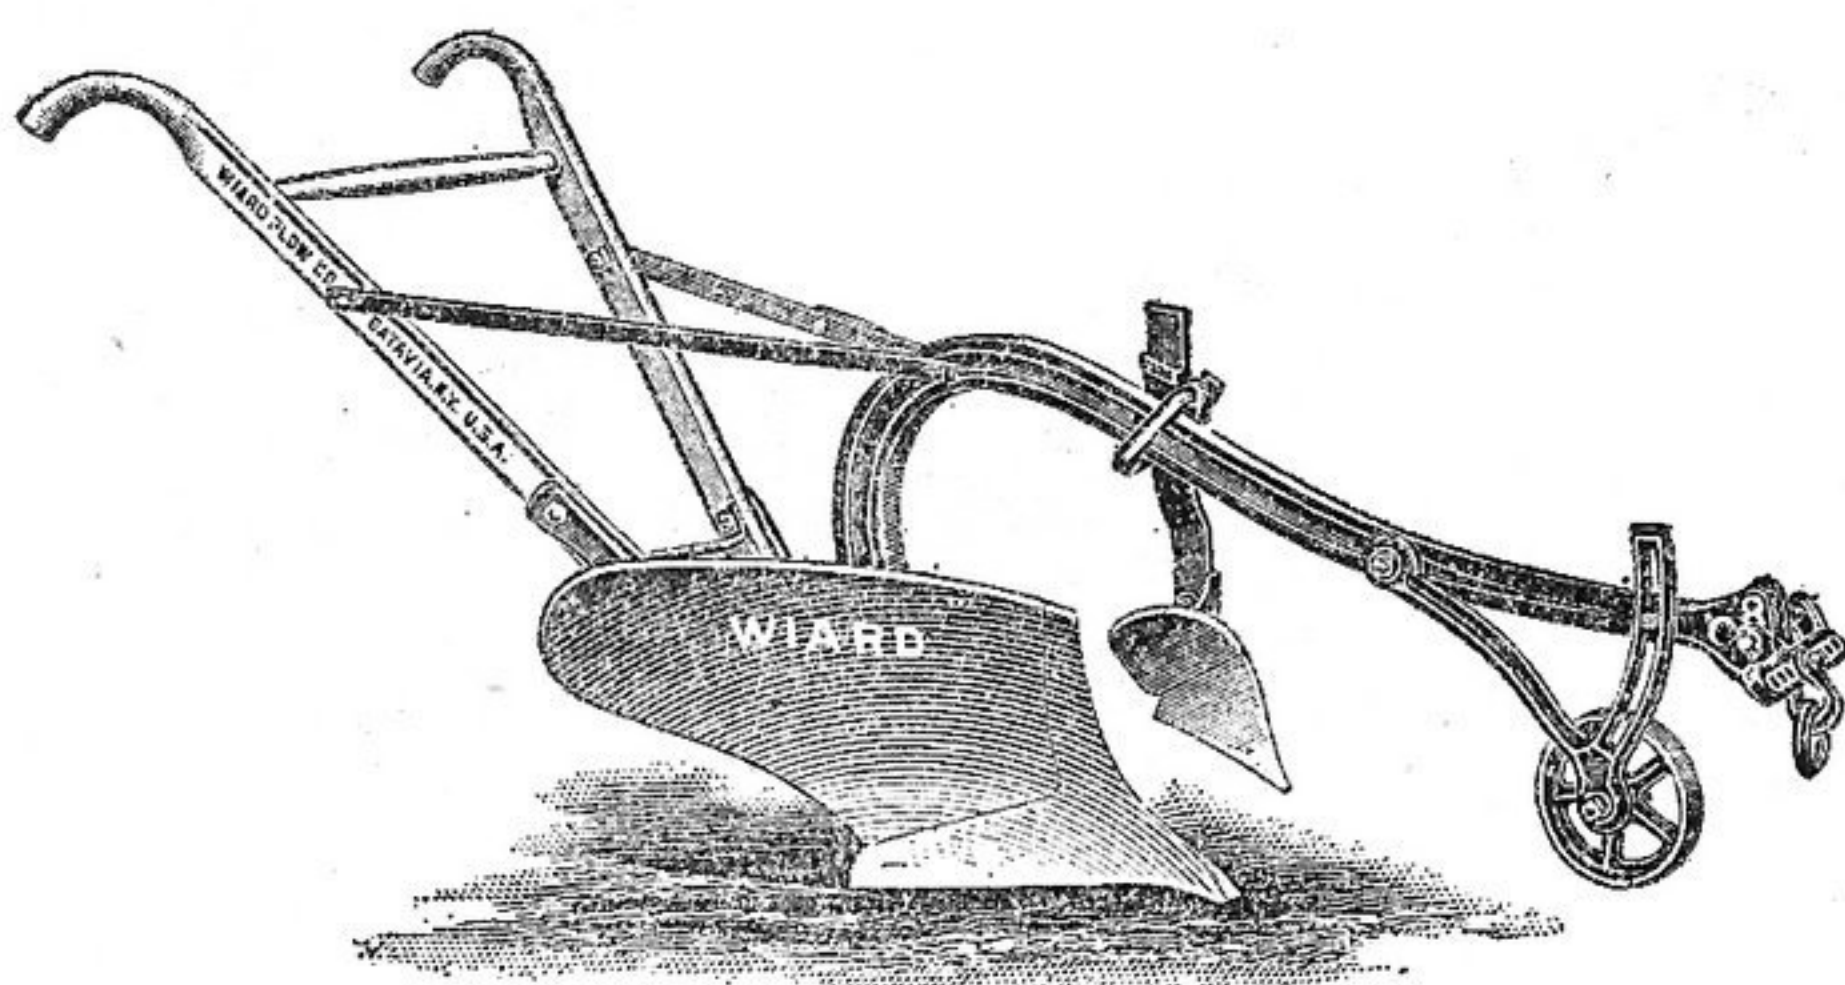 


	218 Two horse, chilled	16 25	17 75	21 75
	219 Two horse, chilled	17 75	19 25	23 25
420	220 Two horse, chilled	21 00	22 50	26 50
440	240 Two or 3-horse, chilled	22 00	23 50	27 50

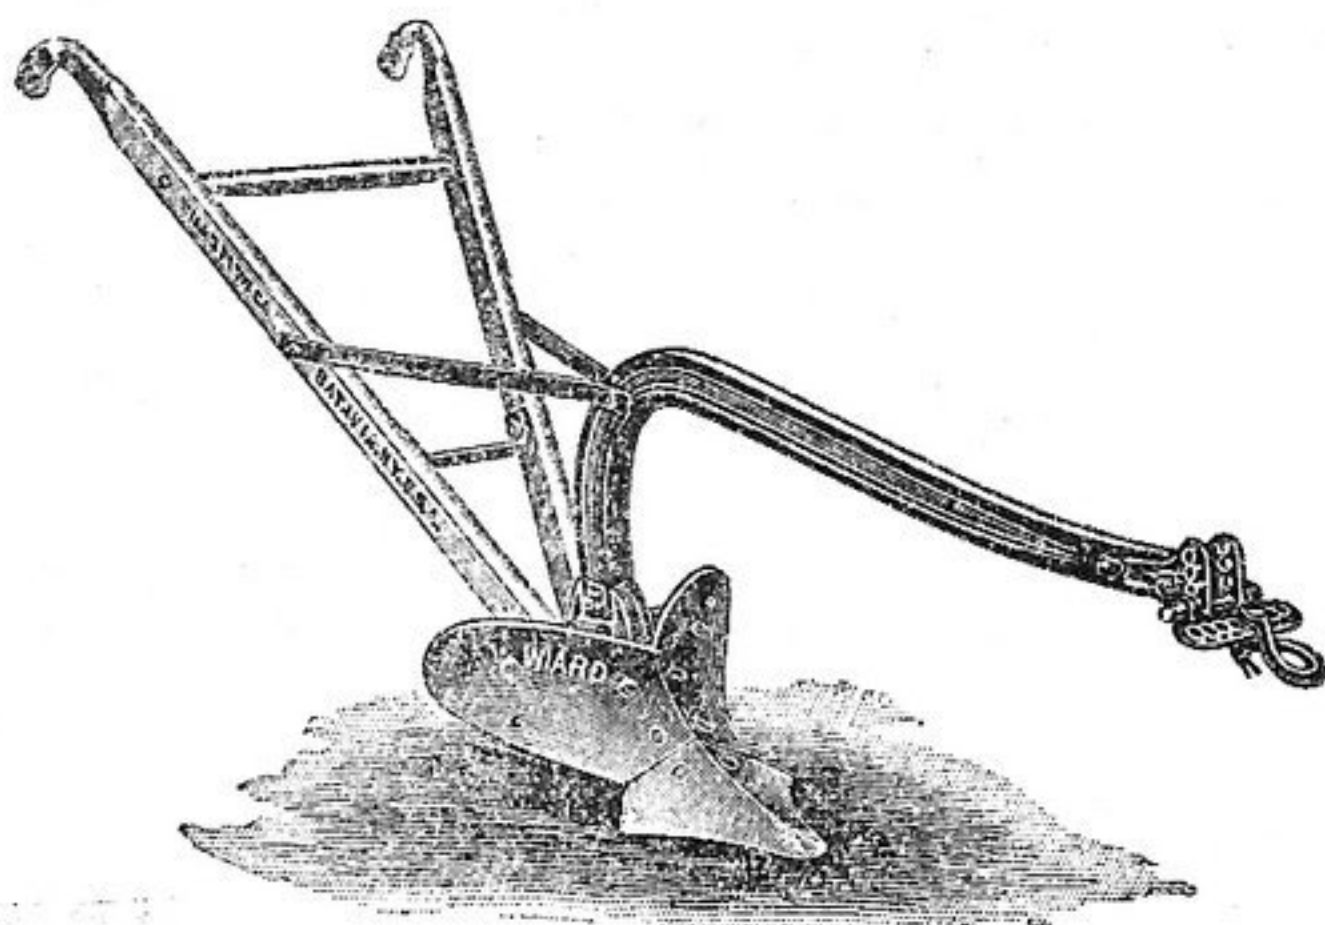 


No.	DOUBLE MOLDBOARD OR MIDDLEBREAKER PLOWS With Steel Beams	With Clevis	With Clevis and Wheel
82	Chilled or steel moldboard	14 50	16 00
83	Chilled or steel moldboard	15 25	16 75
84	Chilled or steel moldboard	16 25	17 75
86	Chilled moldboard	17 00	18 50
	With Wood Beams		
85	Two horse, chilled	17 00	18 50

 WALKING PLOWS

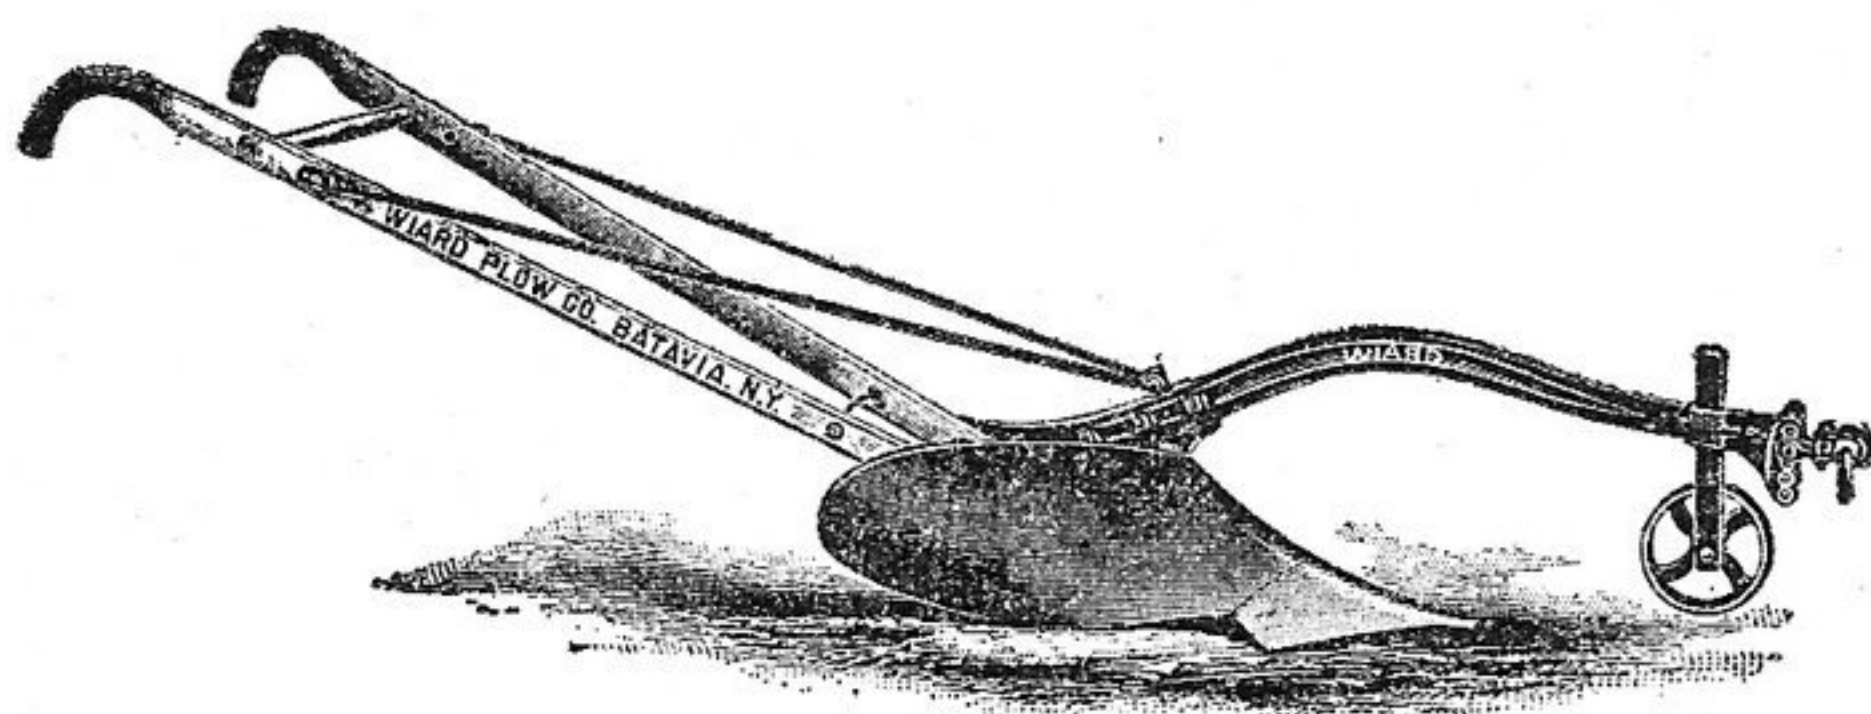


Scotch Types

	Right Hand Only	With Steel Beams	With Clevis	With Clevis and Wheel	Full Rig'd with Jointer
2		Large 2-horse, with S.C. steel mold	21 00	22 50	26 50
3		Two horse, with S.C. steel mold	19 75	21 25	25 25
8		Two horse, with S.C. steel mold	20 50	22 00	26 00

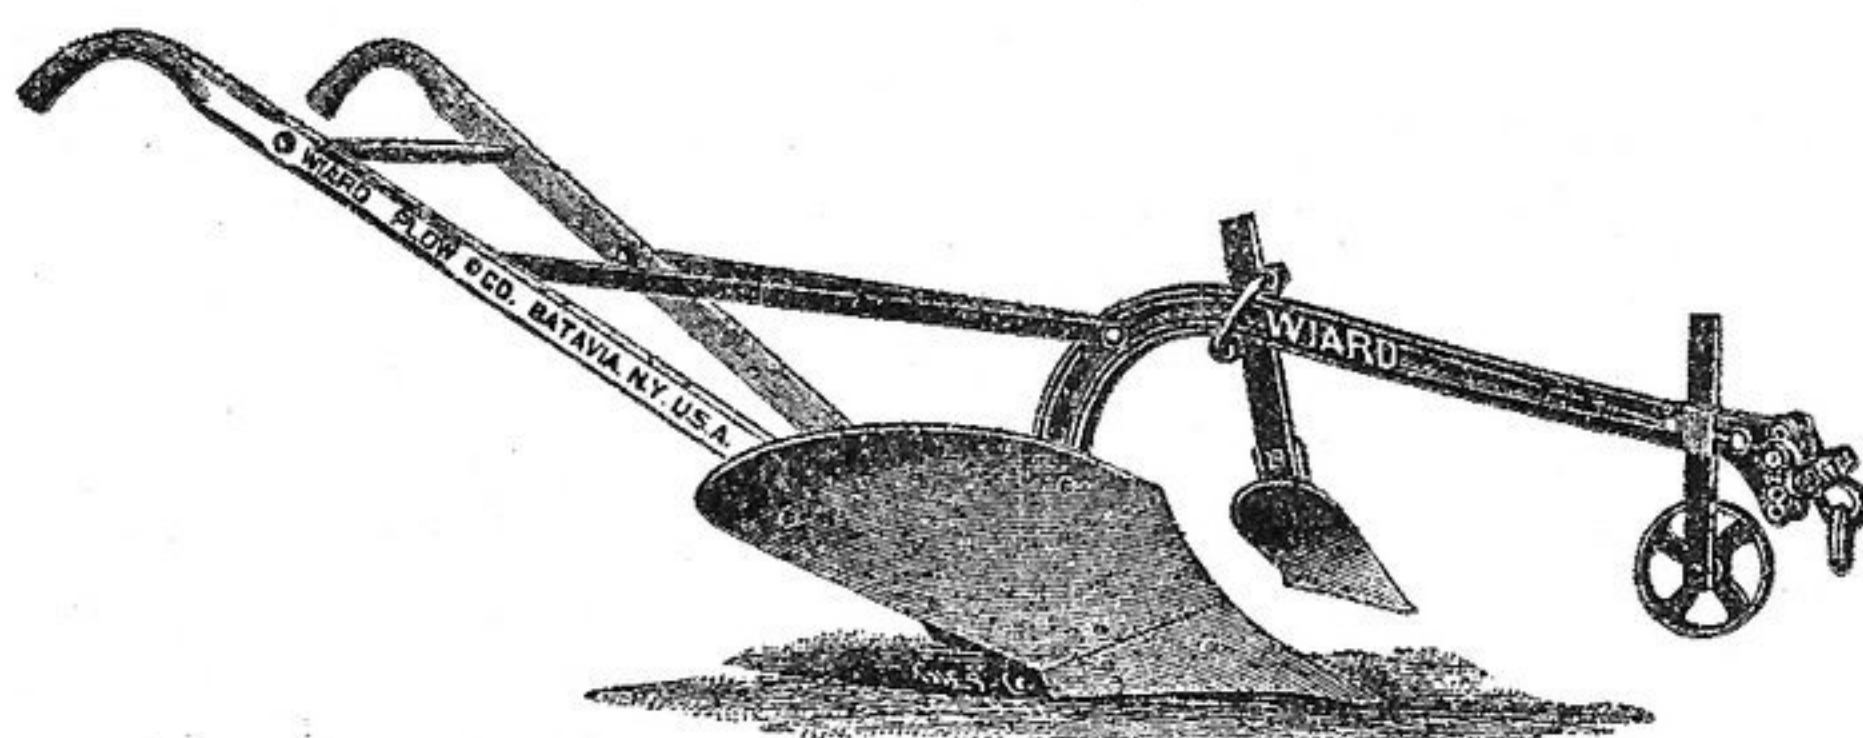 

No. 100 Series


Left Hand	Right Hand	With Steel Beams	With Clevis	With Clevis and Wheel	Full Rig'd with Jointer
95	100	Two or 3-horse, with S.C. steel mold.....	23 50	25 00	29 00
	100L	Two or 3-horse, longer with S.C. steel mold	24 50	26 00	30 00

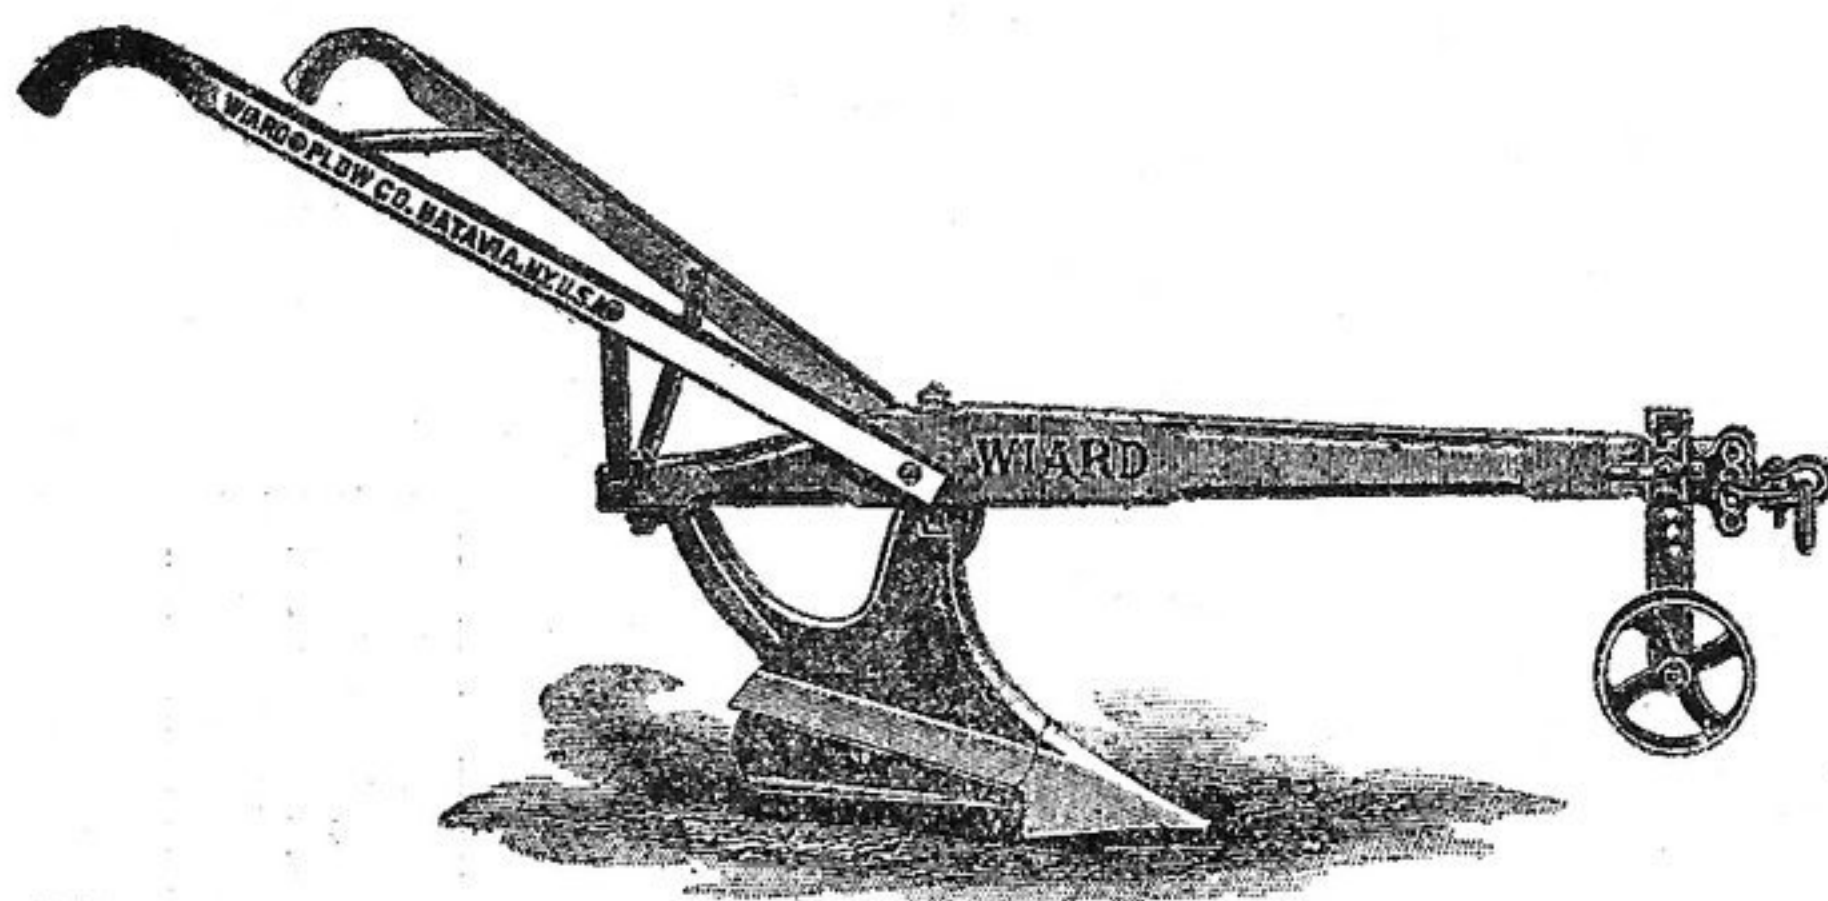 

Wiard Sub-soil or Ditching Plow and Sugar Beet Puller


S.S. Sub - soil plow, with wood beam	21 00	22 50	
--	-------	-------	--

 WALKING PLOWS

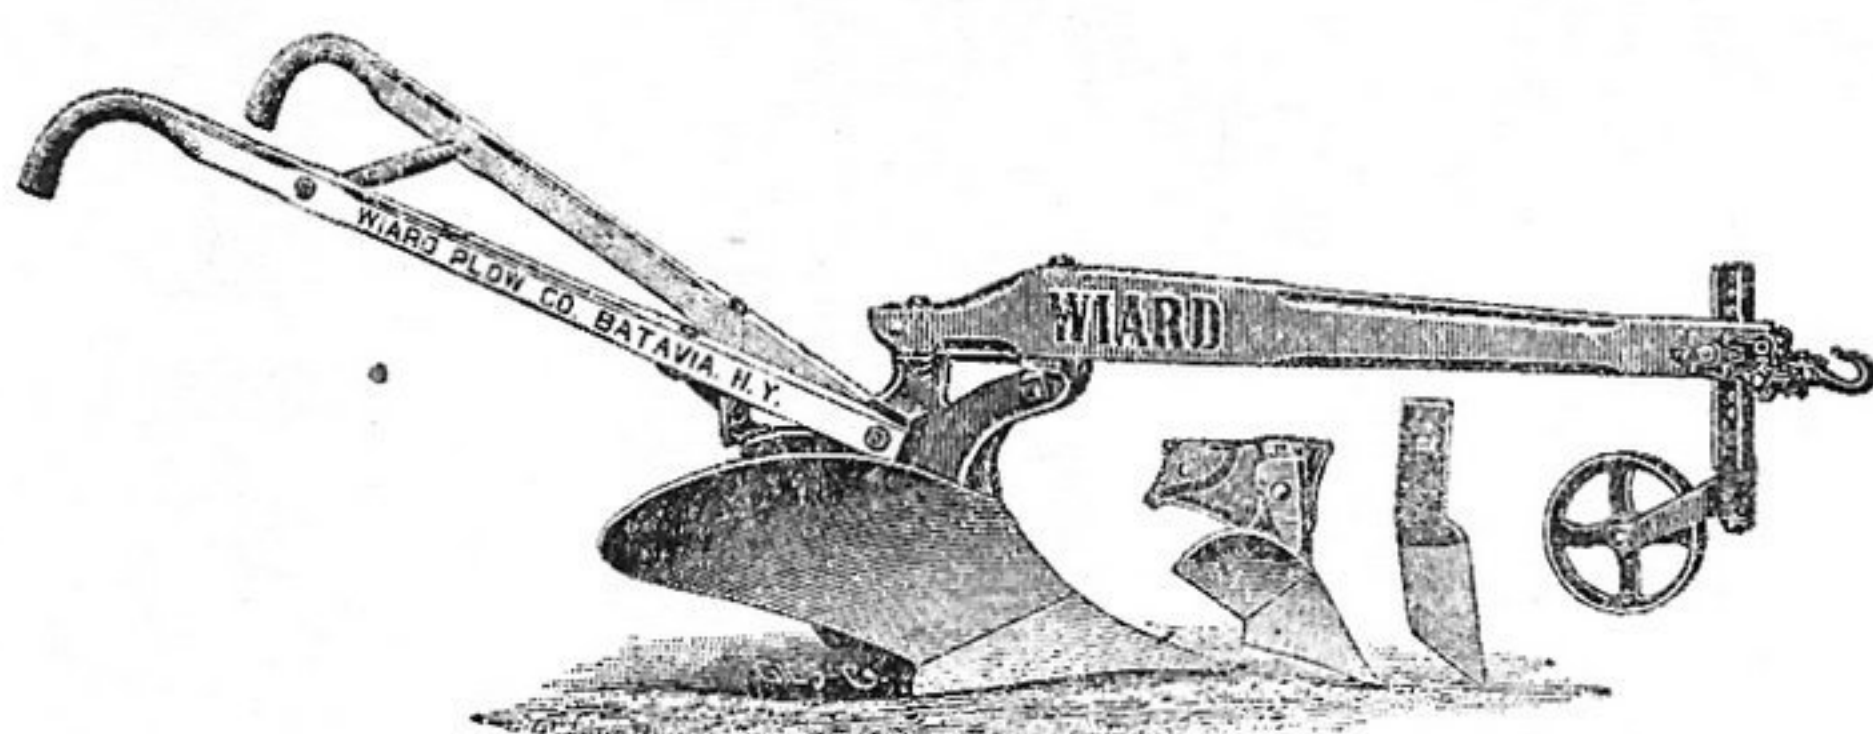


No. 10C

Right Hand	ONE HORSE GARDEN AND VINEYARD PLOWS With Wood Beams	With Clevis	With Clevis and Wheel	Full Rig'd with Jointer
10c	One horse, chilled.....	14 25	15 75	19 00

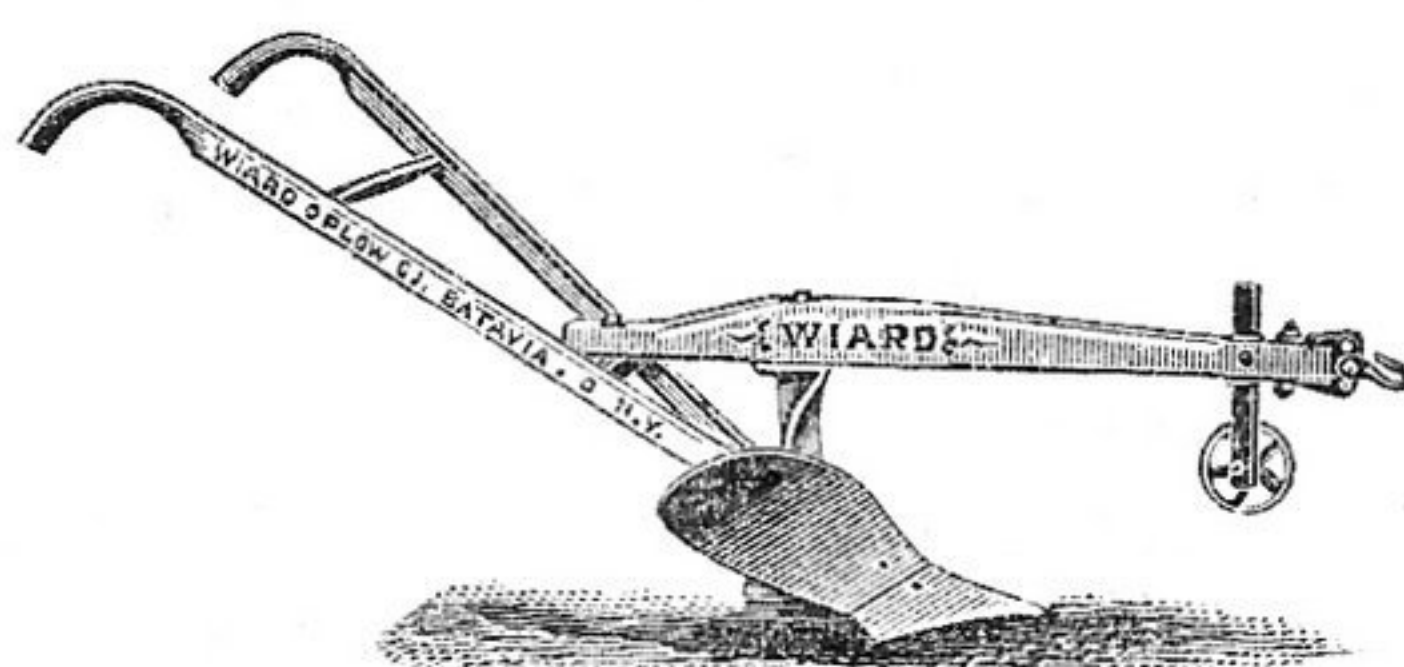 


Right Hand	ONE HORSE PLOWS With Wood Beams	With Clevis	With Clevis and Wheel
62	Small 1-horse, cast	8 50	10 00
13	Light, 1-horse, chilled	10 00	11 50
13	Light, 1 - horse, with steel moldboard	11 50	13 00

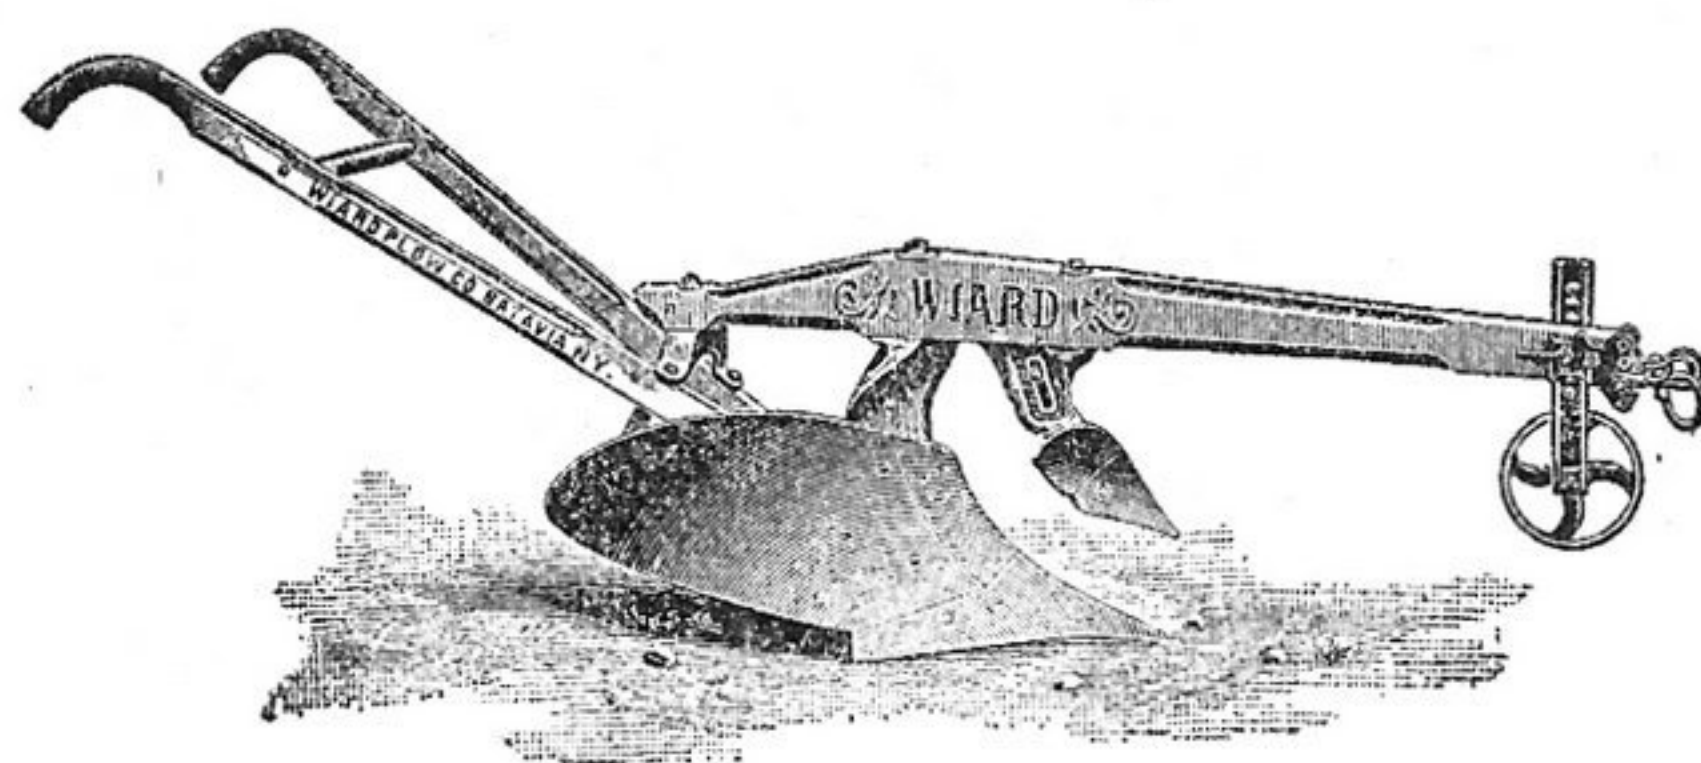 


Left Hand	Right Hand	TWO HORSE PLOWS With Wood Beams	With Clevis	With Clevis and Wheel	Full Rig'd with Jointer
28	26	Two or 3-horse, chilled	22 00	23 50	27 50
28	26	Two or 3-horse, with S.C. steel moldboard	23 50	25 00	29 00
27	26½	Two horse, chilled ..	21 00	22 50	26 50
27	26½	Two horse, with S.C. steel moldboard	22 50	24 00	28 00
	144	Two or 3-horse, chilled	22 00	23 50	27 50

 ROAD OR CONTRACTORS' PLOWS

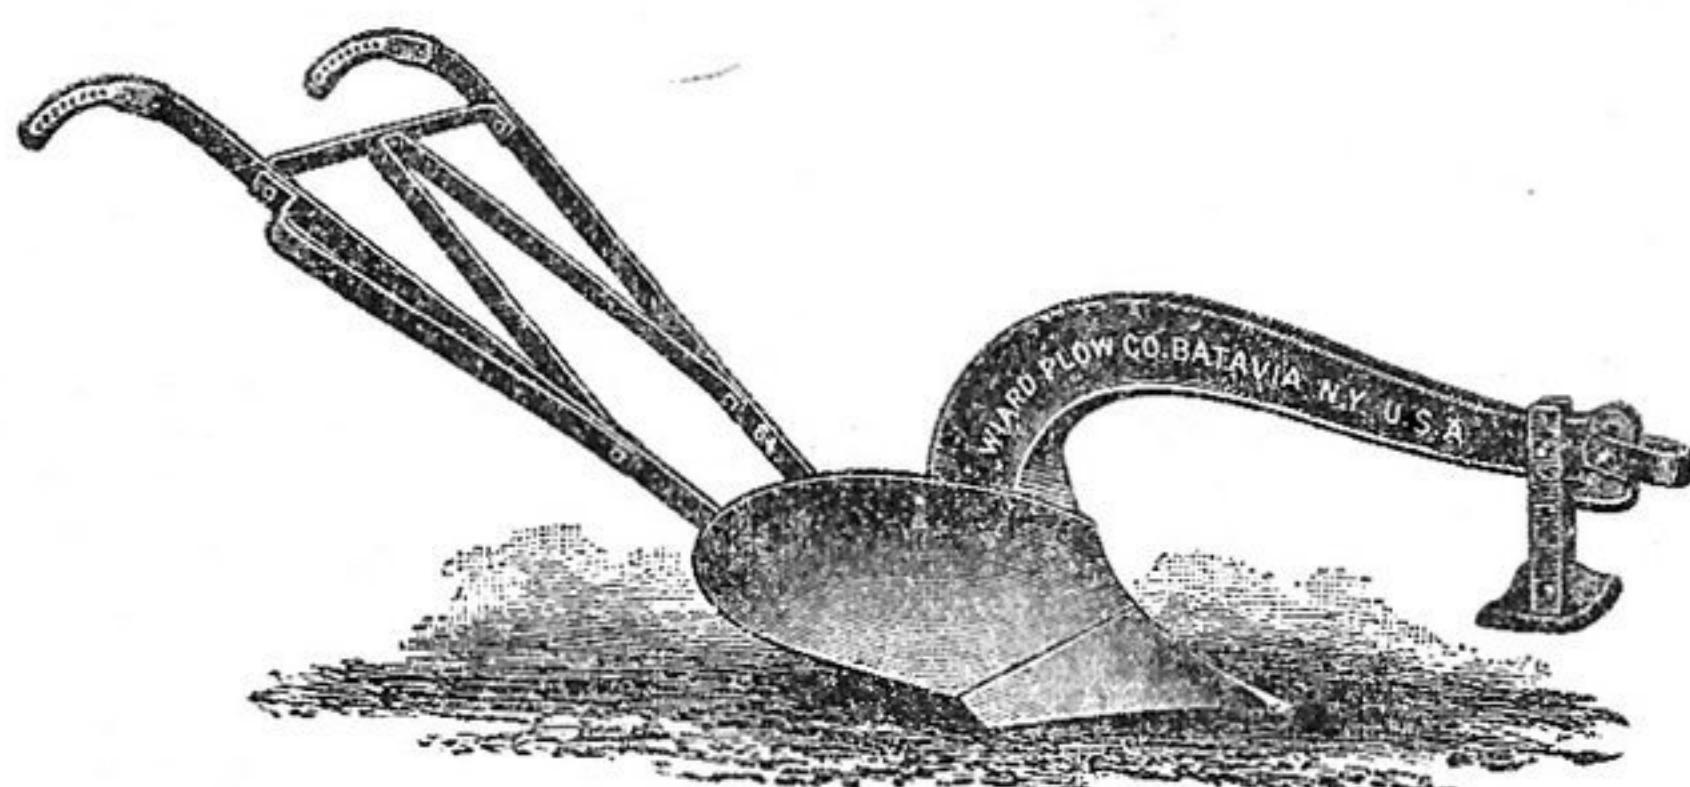


No. 64 Steel Beam, 160 lbs.

No.	STEEL BEAM PLOWS	With Clevs	With Clevs and Wheel	With Clevs and Shoe
64	With cast iron point	34 50		36 75
64	With forged steel points ..	38 25		40 50

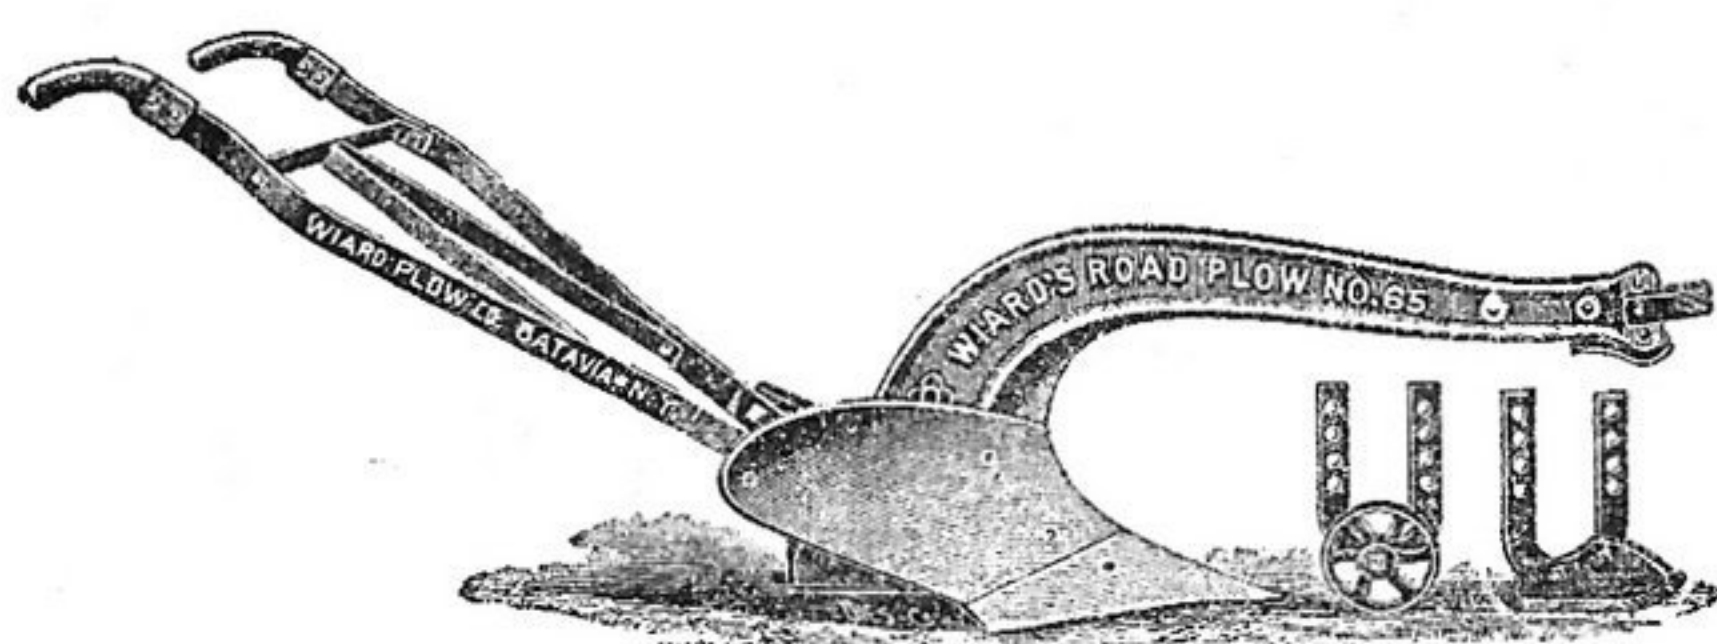 

No. 65 Steel or Cast Beam, 200 lbs.

No.	CAST BEAM PLOWS	With Clevs	With Clevs and Wheel	With Clevs and Shoe
65	With cast iron point	29 00	32 00	32 00
65	With forged steel point	34 00	37 00	37 00
	STEEL BEAM PLOWS			
65	With cast iron point	43 00	46 00	46 00
65	With forged steel point	48 25	51 25	51 25

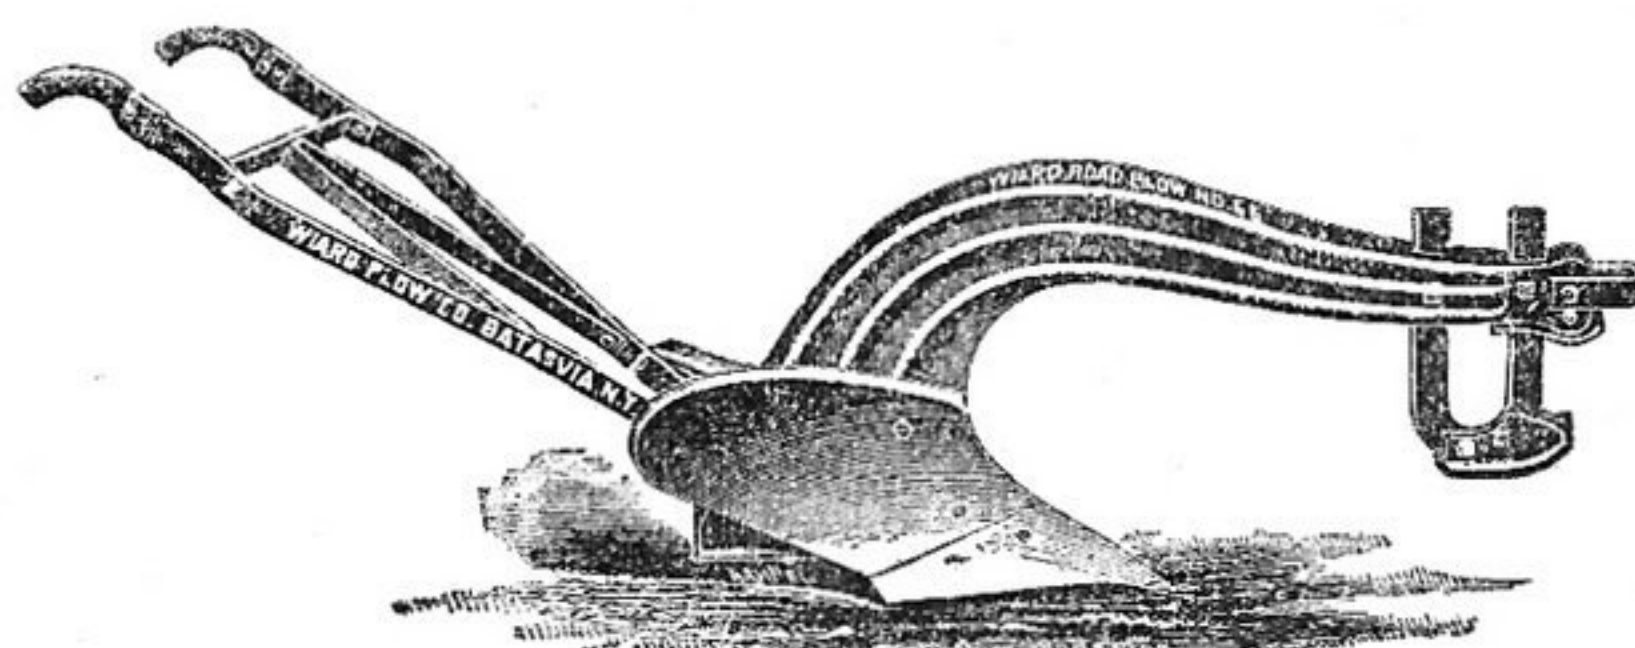 


No. 66 Steel or Cast Beam, 250 lbs.

No.	CAST BEAM PLOWS	With Clevs	With Clevs and Wheel	With Clevs and Shoe
66	With cast iron point	33 25	36 25	36 25
66	With forged steel point	38 50	41 50	41 50
	STEEL BEAM PLOWS			
66	With cast iron point	50 00	53 00	53 00
66	With forged steel point	55 00	58 00	58 00


When plows are fitted with Cast Iron Points an extra Point and Wrench are furnished; when fitted with Steel Points no extra Point is furnished.

 ROAD OR CONTRACTORS' PLOW

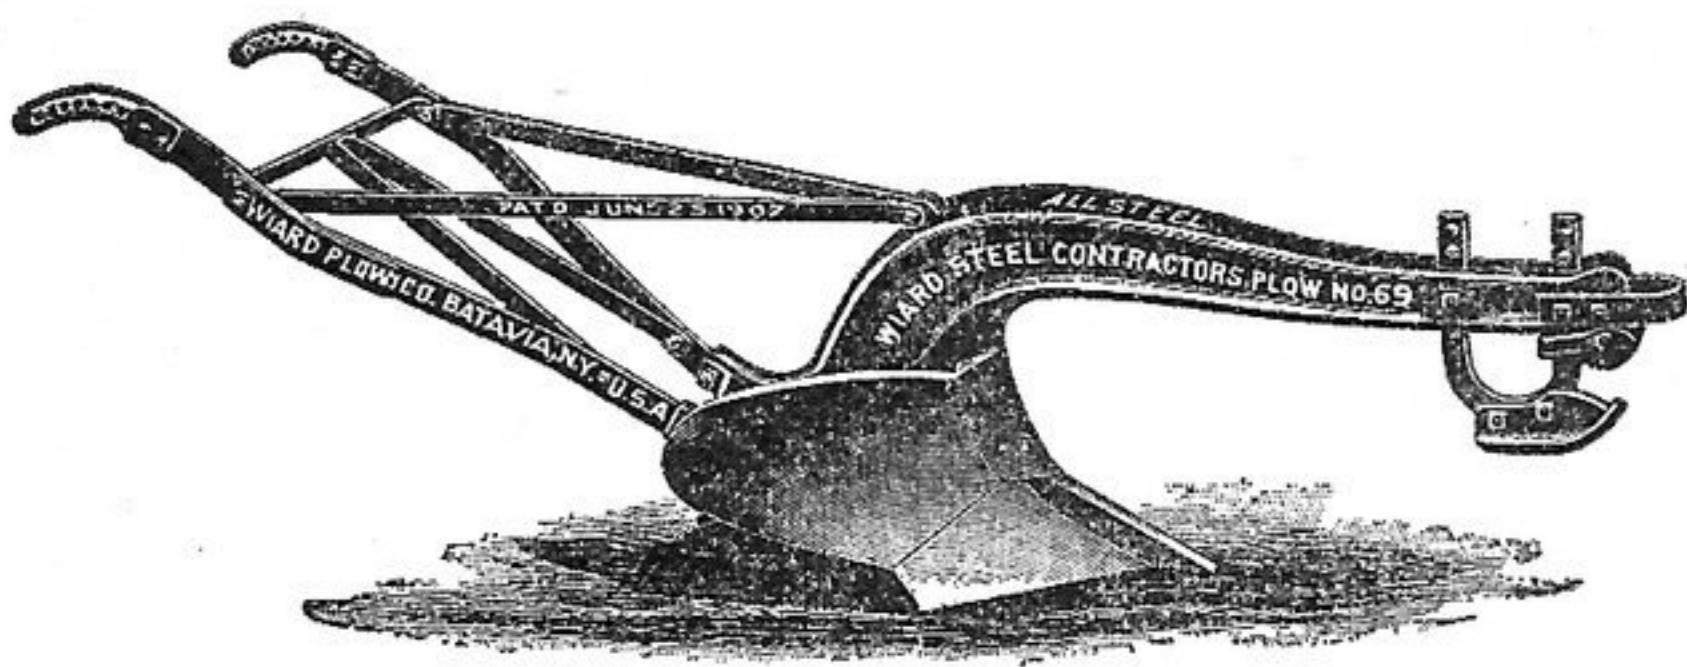


No. 69 (All Steel) Combination Rooter and
Furrow Plow, 315 lbs.

- | | | |
|----|---|---------|
| 69 | Steel Plow with Clevis only | \$64.00 |
| 69 | Steel Plow with Clevis and Wheel or Shoe | 67.00 |

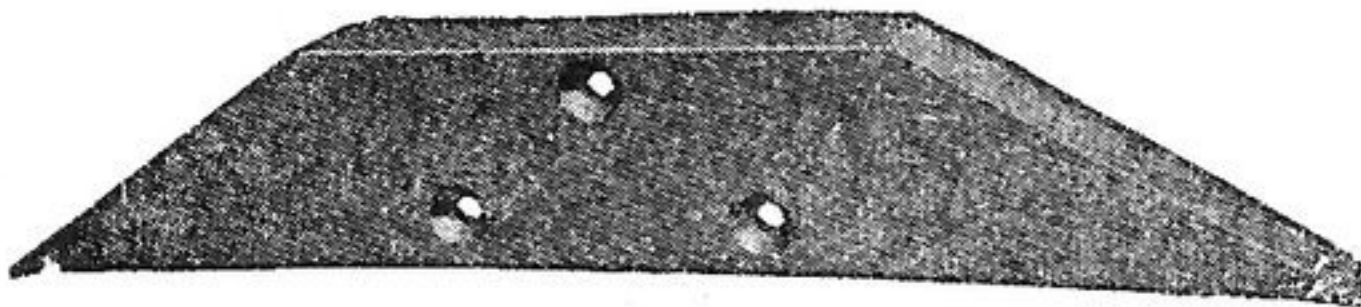 

No. 69 Main Point
Reversible

 A solid bar of forged steel 1 1/4 x 5 x 33" long.

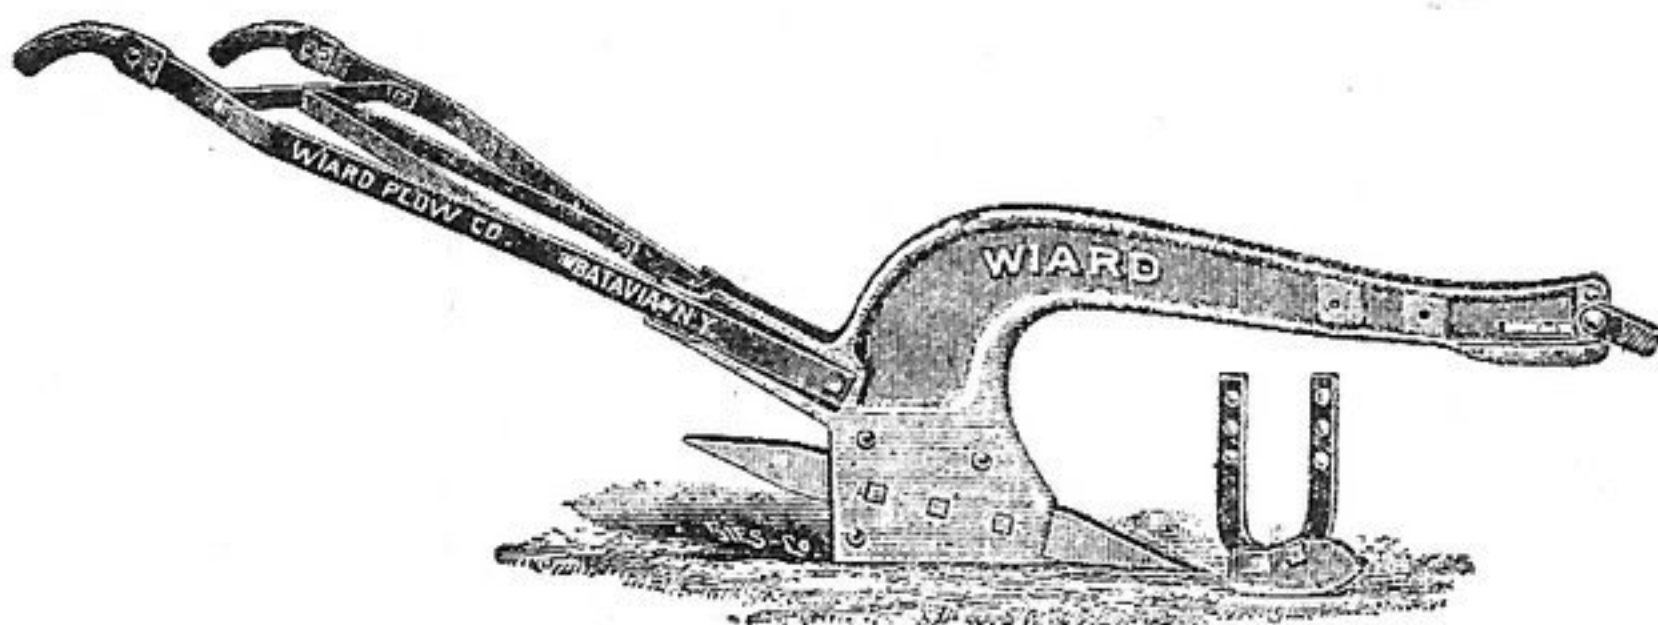

No. 67 Steel or Cast Beam, 260 lbs.

ROOTER PLOWS


- | | | |
|----|---|---------|
| 67 | Cast Beam Plow, with Clevis | \$32.00 |
| 67 | Cast Beam Plow, with Clevis and Gauge Shoe
or Wheel | 35.00 |
| 67 | Steel Beam Plow, with Clevis | 55.00 |
| 67 | Steel Beam Plow, with Clevis and Gauge Shoe
or Wheel | 58.00 |
| | Chain Attachments, extra | 5.00 |

Rooter Plows are equipped with Reversible Forged Steel Points, which are adjustable.


WIARD PATENT SWIVEL PLOWS

Opposite page shows prices of all Wood Beam Swivel Plows with Different Equipment.

 
THE MOST COMPLETE LINE OF SWIVEL PLOWS MANUFACTURED

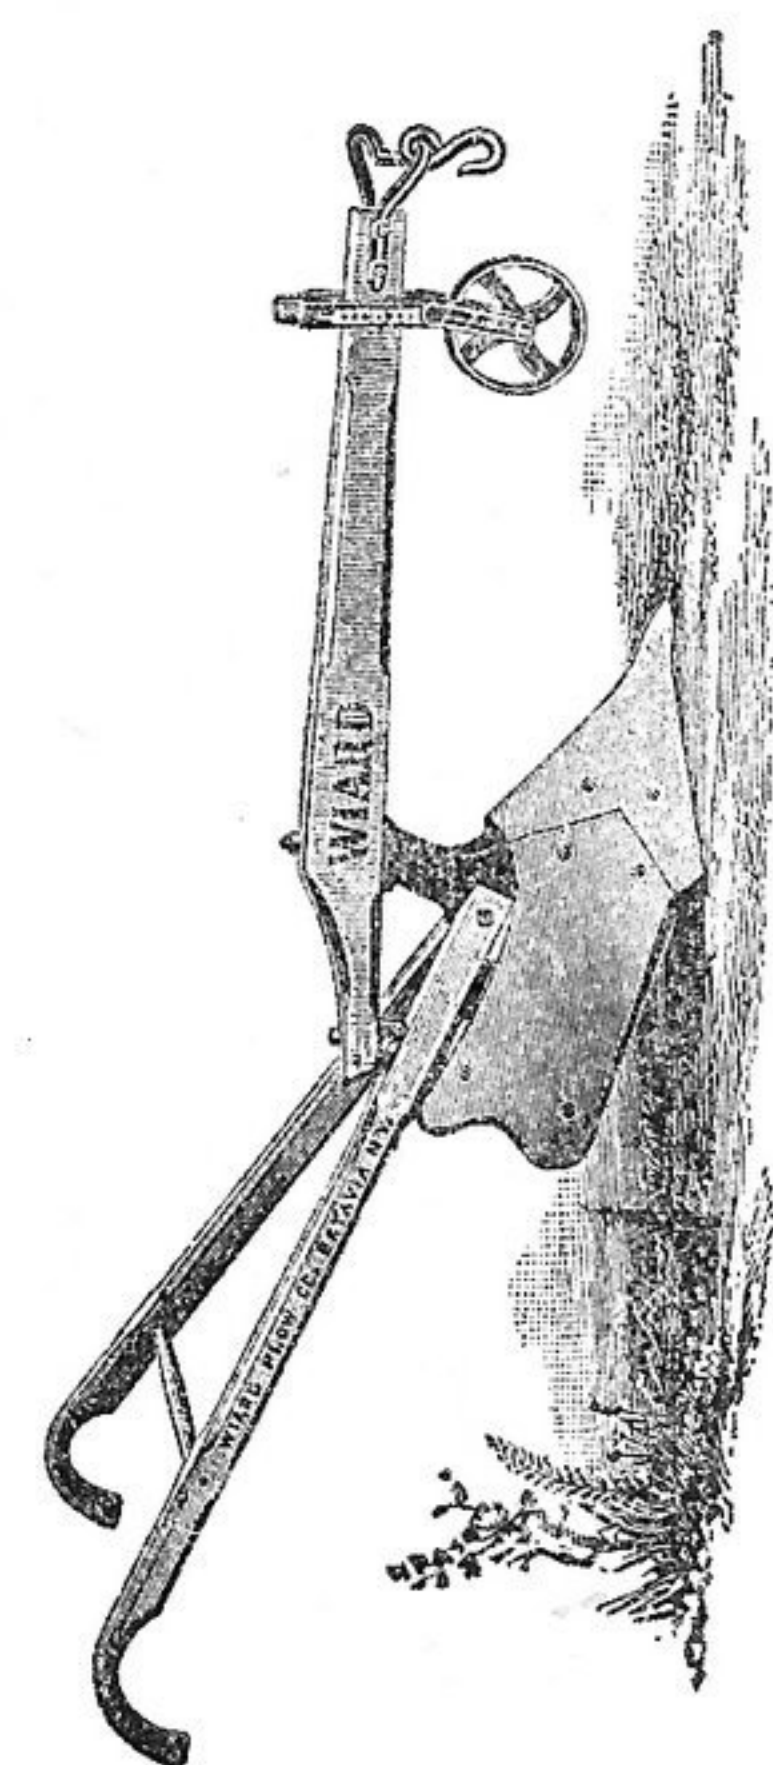


Illustrating Nos. 21 and 22

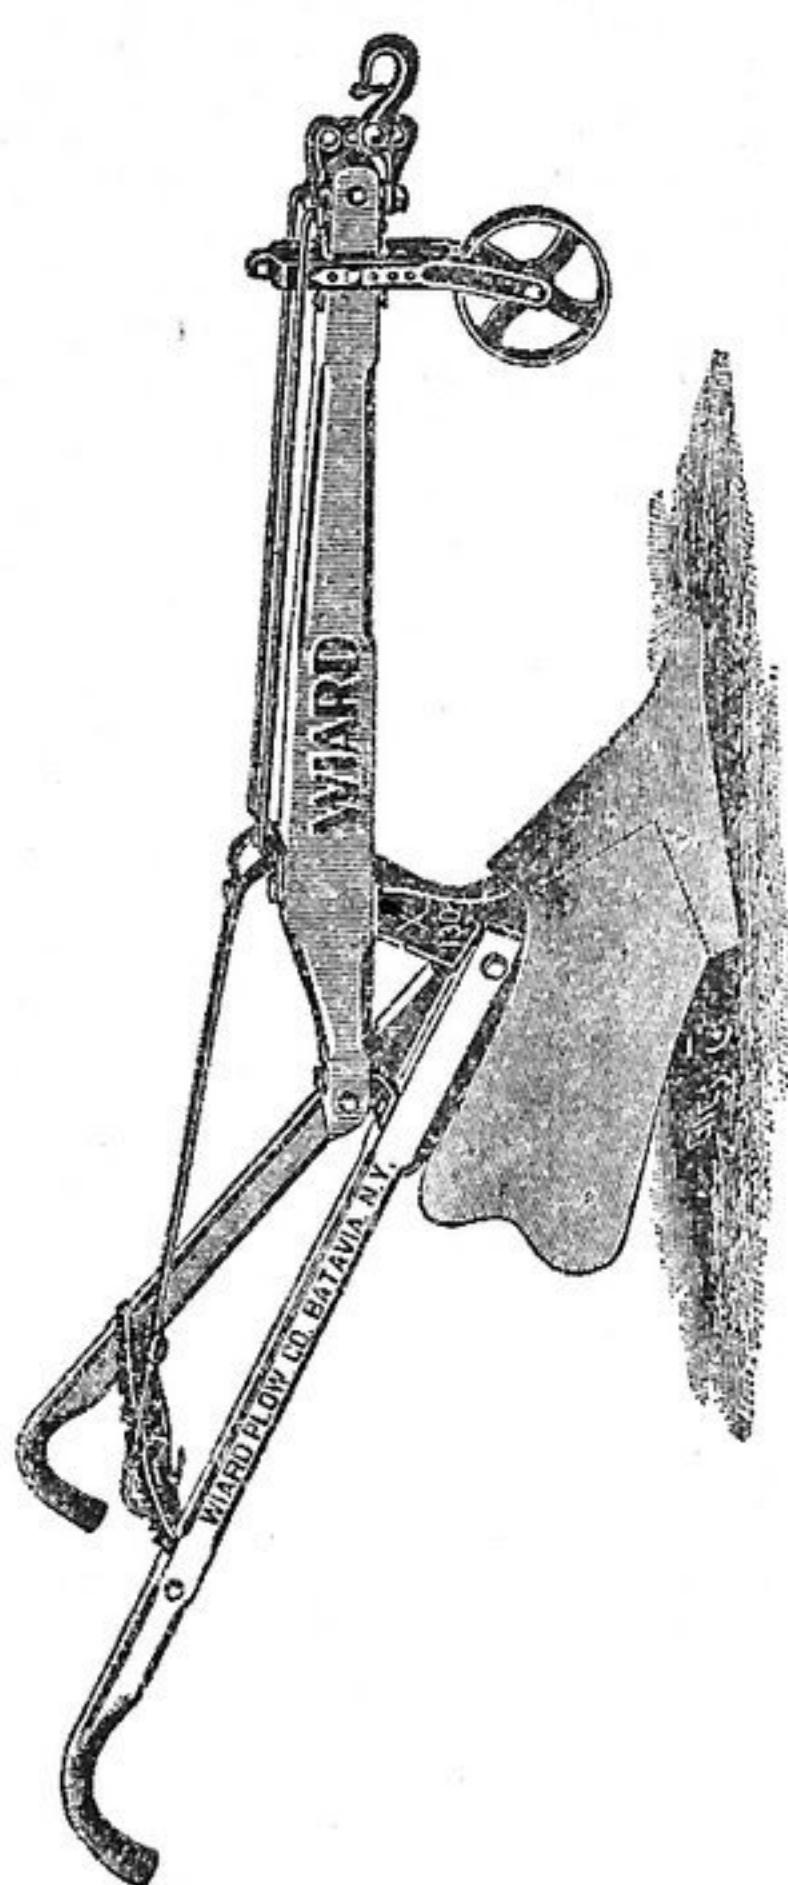 

 Illustrating No. 130X. Can be equipped with Adjustable Clevis, Wheel and Colter.

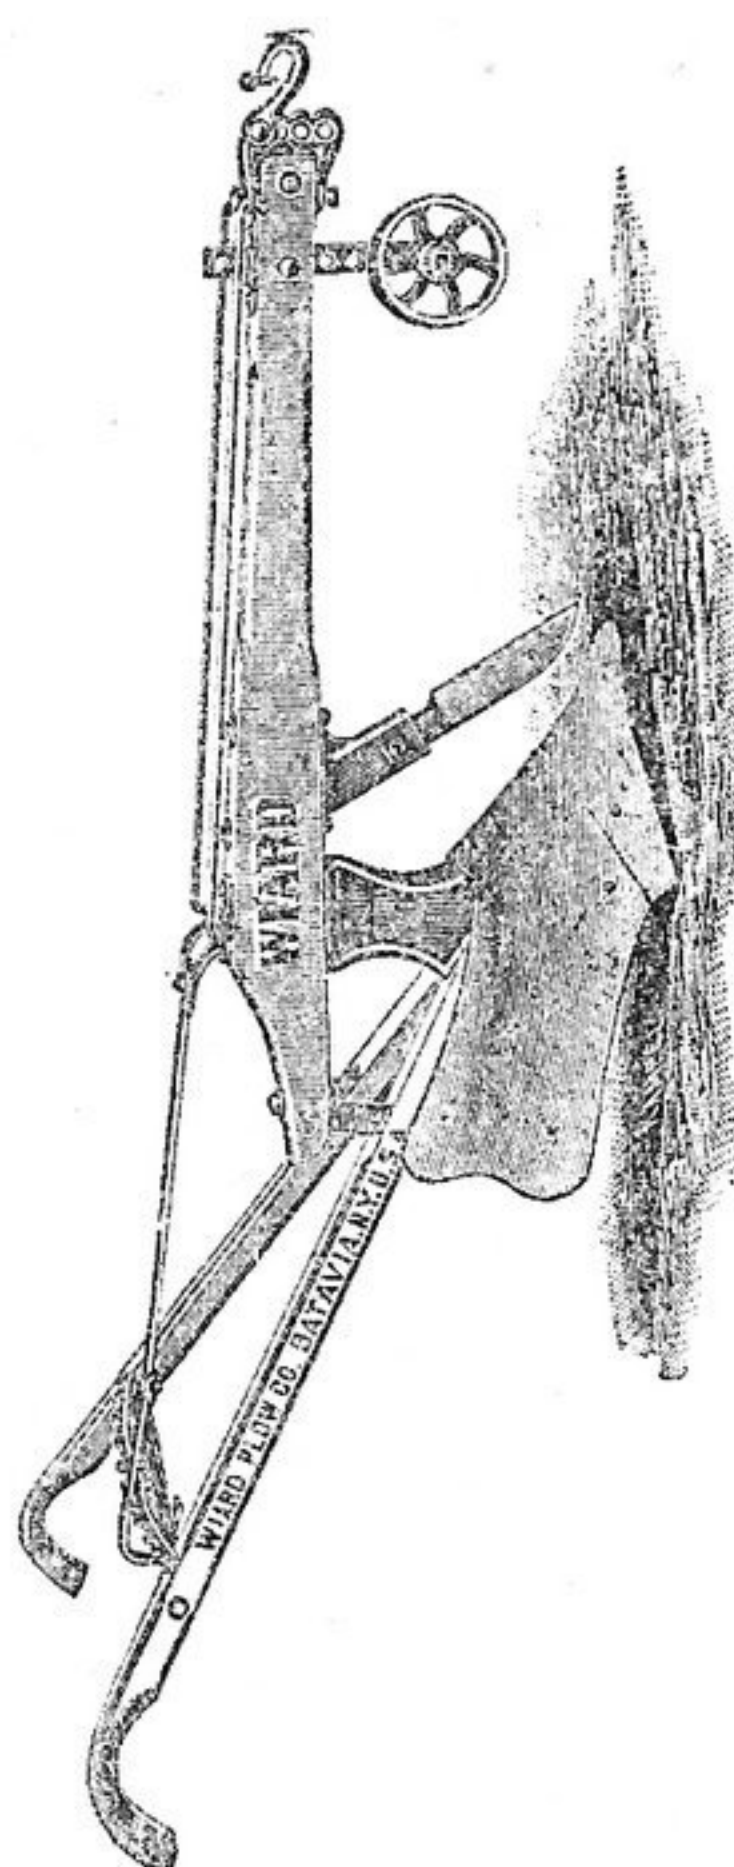

 Illustrating No. 20 with Adjustable Clevis, Wheel and Colter

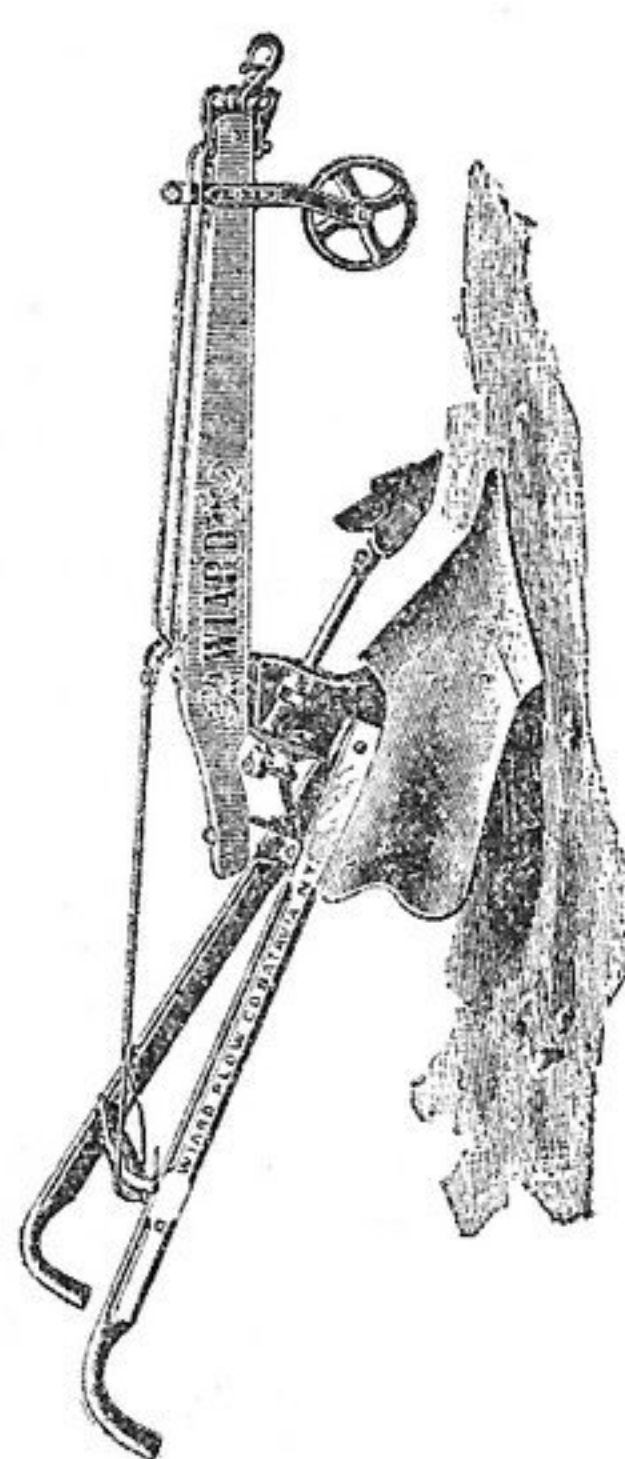

Illustrating No. 140 with Adjustable Clevis, Wheel and Jointer.

Swivel Plows with Steel Molds are always shipped with the Common Length Mold unless the Long Steel Mold is specified.

Points, Molds, Y Braces, Mold Locks and Saddles are alike for 115X, 130X, 120 and 140 Plows; Shoes for 115X, 130X and 300 Plows are alike; Shoes for 120 and 140 Plows are alike.


WIARD PATENT SWIVEL PLOWS

RETAIL PRICE LIST WIARD SWIVEL OR HILL-SIDE PLOWS		In Ordering Always Specify Whether the Common or Adjustable Clevis is Wanted.							
		With Com- mon Clevis Only	With Ad- justable Clevis Only	With Com- mon Clevis and Wheel	With Ad- justable Clevis and Wheel	With Com- mon Clevis and Wheel and Jointer	With Adjus. Clevis and Wheel and Jointer	With Com- mon Clevis and Wheel and Colter	With Adjus. Clevis and Colter
With Wood Beams									
22	Small 1-horse, with Cast Moldboard	12 50		14 00				20 50	21 80
22	Small 1-horse, with Steel Moldboard	14 00		15 50				22 00	23 30
21	One-horse, with Cast Moldboard	13 50		15 00				24 00	25 30
21	One-horse, with Steel Moldboard	15 00		16 50				25 50	26 80
20	Small 2-horse, with Cast Moldboard	16 00	17 30	17 50	18 80			26 80	28 30
20	Small 2-horse, with Steel Moldboard	17 50	18 80	19 00	20 30			27 00	
130X	Medium 2-horse, with Cast Mold	19 00	20 30	20 50	21 80			27 30	
130X	Medium 2-horse, with S. C. Steel Mold	20 50	21 80	22 00	23 30	26 00		28 80	
140	Medium 2-horse, with Cast Mold	20 50	21 80	22 00	23 30	27 50			
140	Medium 2-horse, with S.C. Steel Mold	22 00	23 30	23 50	24 80				


WIARD PATENT SWIVEL PLOWS

Opposite page shows prices of all Steel and Cast Beam Swivel Plows with Different Equipment.

 THE MOST COMPLETE LINE OF SWIVEL PLOWS MANUFACTURED

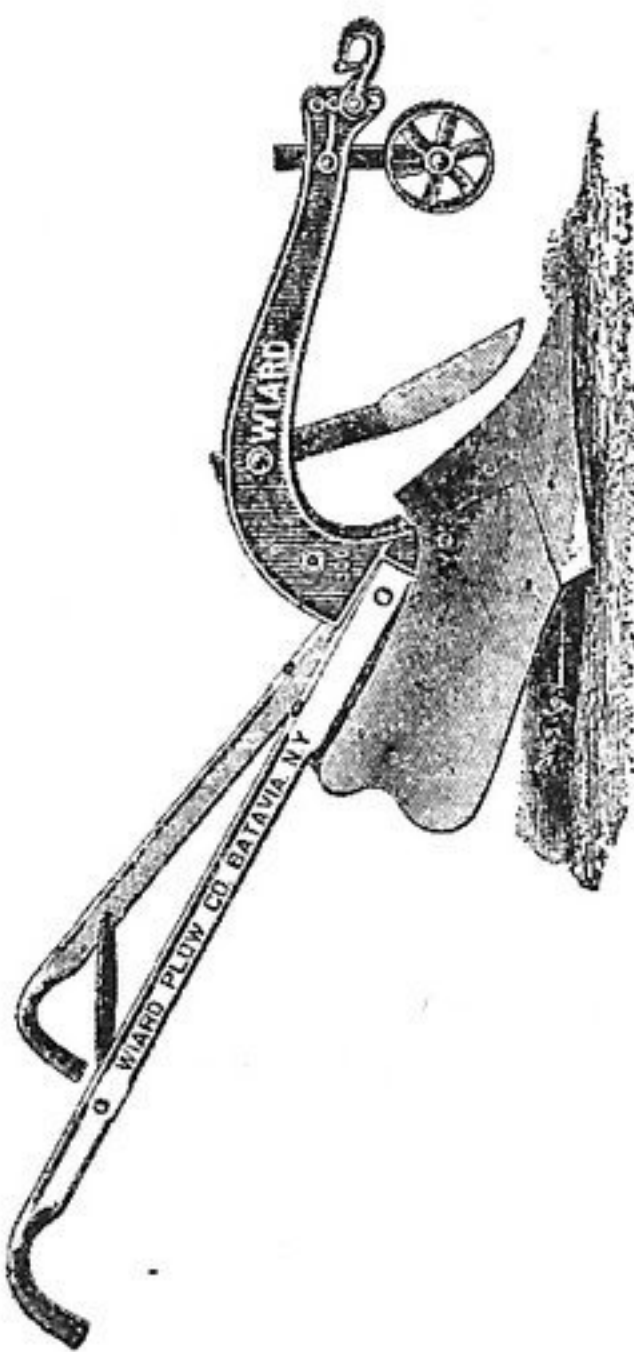

 
Two-horse Cast Beam Plow, with
Clevis, Wheel and Colter.

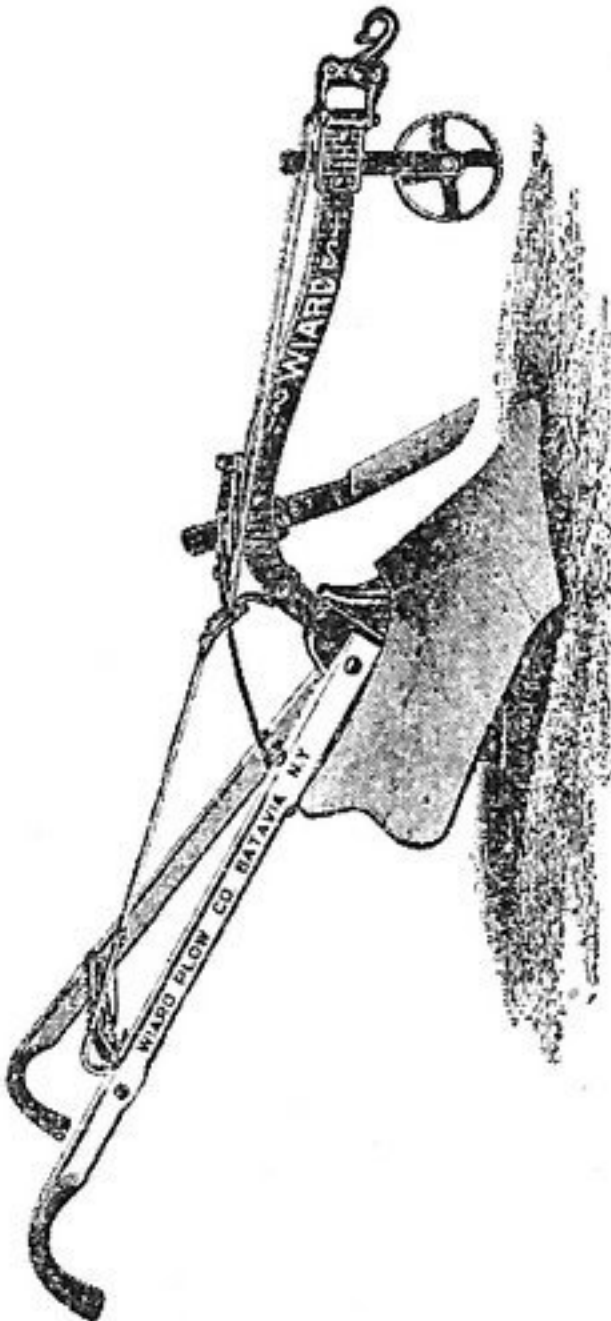


Two-horse Steel Beam Plow Adjusta-
ble Clevis, Wheel and Colter.



 
Two-horse Cast Beam Plow; Adjusta-
ble Clevis, Wheel and Jointer.

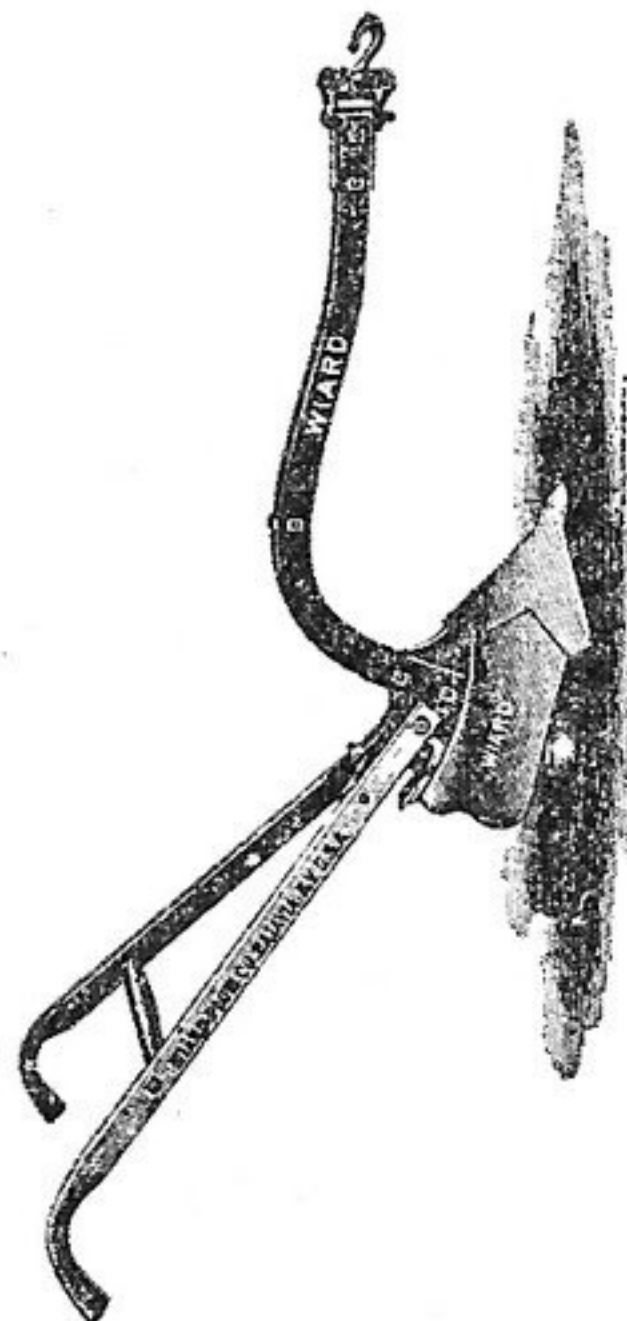

 One-horse Steel Beam Plow with Plain
Clevis.

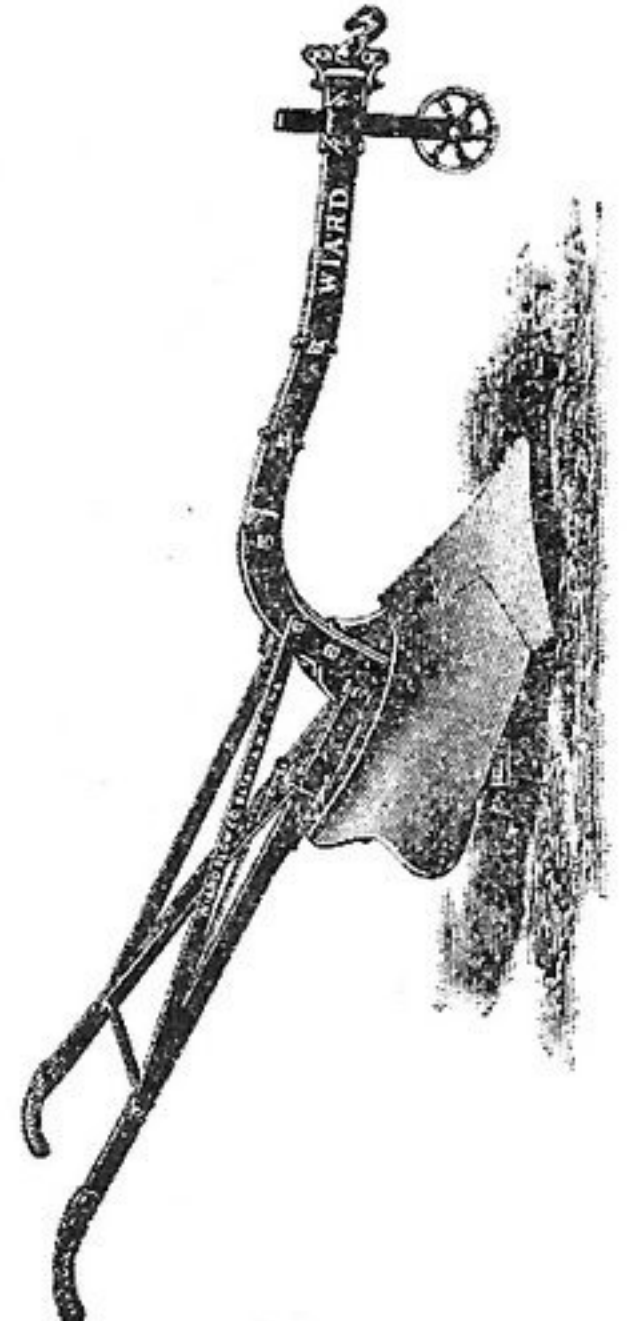

 Two-horse Steel Beam Plow, Clevis,
Wheel and Steel Handles

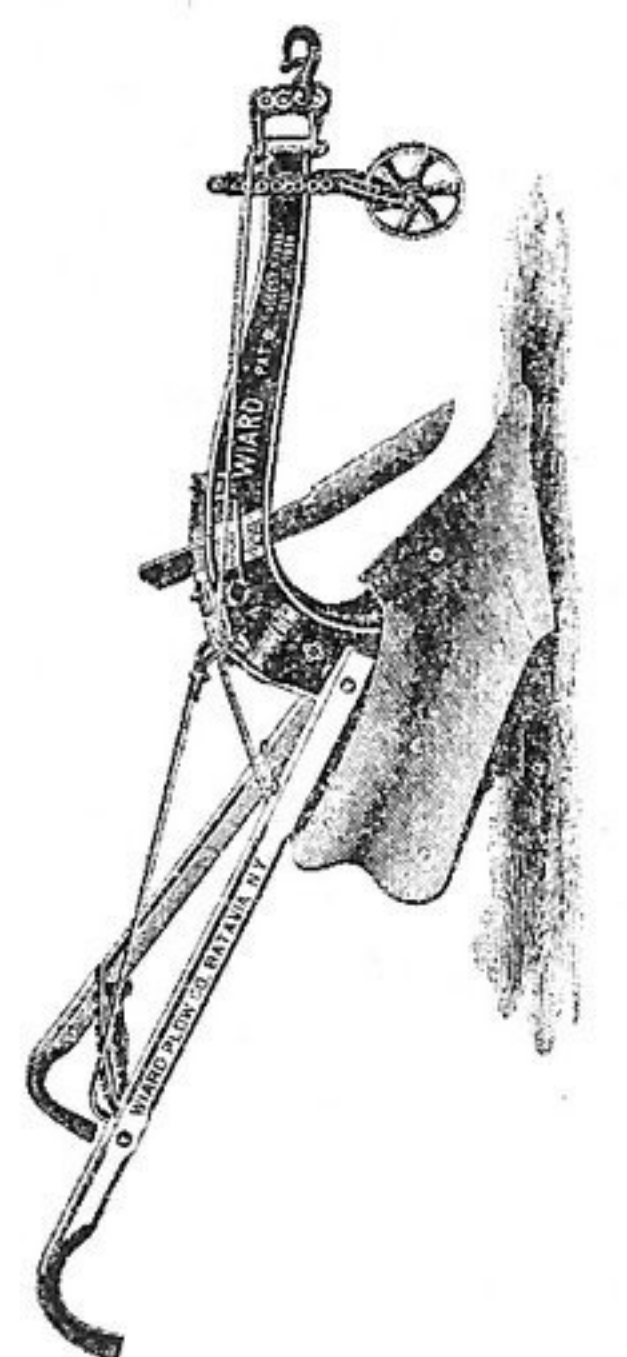

Two-horse Cast Beam Plow; Adjusta-
ble Clevis, Wheel and Colter.

Swivel Plows with Steel Molds are always shipped with the Common Length Mold unless the Long Steel Mold is specified.

Points, Molds, Y Braces, Mold Locks and Saddles are alike for 115X, 130X, 120 and 140 Plows; Shoes for 115X, 130X, and 300 Plows are alike; Shoes for 120 and 140 Plows are alike.


WIARD PATENT SWIVEL PLOWS

RETAIL PRICE LIST WIARD SWIVEL OR HILL-SIDE PLOWS.		With Com- mon Clevis Only	With Ad- justable Clevis Only	With Com- mon Clevis, and Wheel	With Ad- justable Clevis and Wheel	With Com- mon Clevis, Wheel and Jointer	With Ad- justable Clevis and Wheel and Jointer	With Com- mon Clevis Wheel and Colter	With Ad- justable Clevis and Wheel and Colter
With Steel Beams									
124	Small 1-horse, with Cast Mold	12 50		14 00					
124	Small 1-horse, with Steel Mold	14 00		15 50					
125	One-horse, with Cast Moldboard	15 00	16 30	16 50	17 80			20 00	21 30
125	One-horse, with Steel Mold	16 50	17 80	18 00	19 30			21 50	22 80
127	Light 2-horse, with Cast Mold	16 75	18 05	18 25	19 55			21 75	23 05
127	Light 2-horse, with S. C. Steel Mold	18 50	19 80	20 00	21 30			23 50	24 80
120	Medium 2-horse, with Cast Mold	21 75	23 05	23 25	24 55	27 25	28 55	26 75	28 05
120	Medium 2-horse, with S. C. Steel Mold	23 25	24 55	24 75	26 05	28 75	30 05	28 25	29 55
126	Two-horse, with Cast Mold	22 25	23 55	23 75	25 05	27 75	29 05	27 25	28 55
126	Two-horse, with S.C. Steel Mold	23 75	25 05	25 25	26 55	29 25	30 55	28 75	30 05
With Cast Iron Beams									
300	Two-horse, with Cast Moldboard	17 75		19 25				22 75	
300	Two-horse, with S. C. Steel Mold	19 25		20 75				24 25	
126X	Two-horse, with Cast Moldboard	21 00	22 30	22 50	23 80	26 50	27 80	25 75	27 05
126X	Two-horse, with S. C. Steel Mold	22 50	23 80	24 00	25 30	28 00	29 30	27 25	28 55
116	Two-horse, with Cast Moldboard	21 00	22 30	22 50	23 80	26 50	27 80	25 75	27 05
116	Two-horse, with S. C. Steel Mold	22 50	23 80	24 00	25 30	28 00	29 30	27 25	28 55

In Ordering Always Specify Whether the Common or Adjustable Clevis is Wanted.

STAR DISC HARROW

 New Type

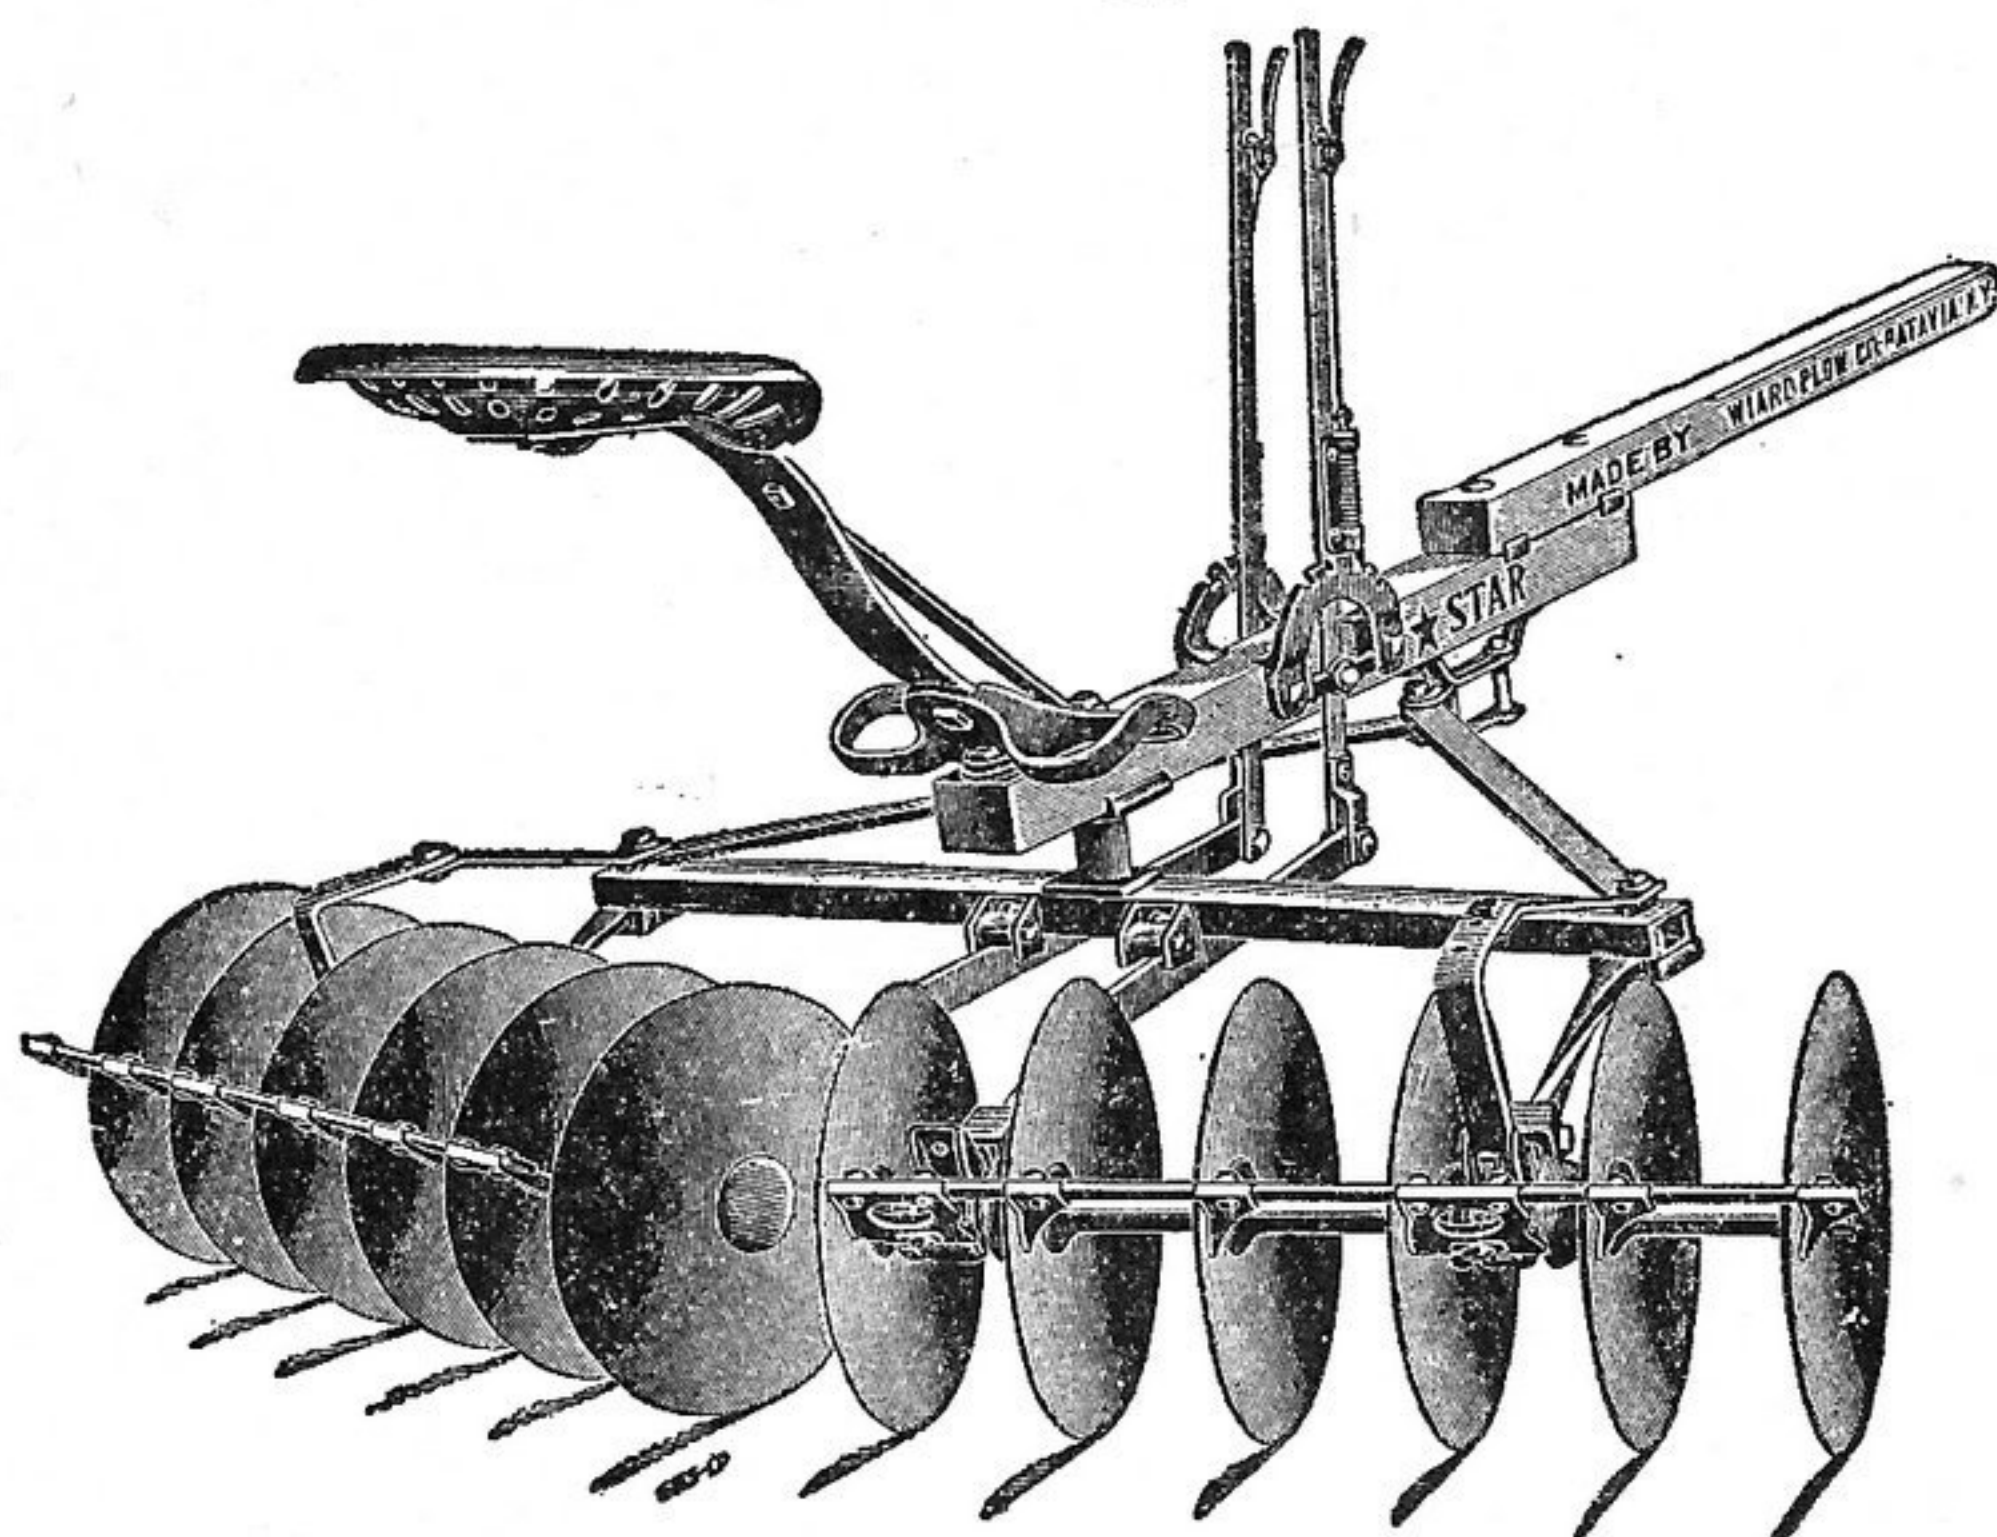

Out-Throw

With Long Pole and Scrapers without Weight-boxes,
Neckyoke or Foretruck

No. 1	3 ft.	6—16 in.	Disk	1 Horse\$43.75
No. 2	4 ft.	8—16 in.	"	2 Horse 46.50
No. 3	5 ft.	10—16 in.	"	2 Horse 48.00
No. 4	6 ft.	12—16 in.	"	2 or 3 Horse	56.00
No. 5	7 ft.	14—16 in.	"	2 or 3 Horse	62.75
No. 6	8 ft.	16—16 in.	"	2 or 3 Horse	68.25
No. 6½	4 ft.	8—18 in.	"	2 Horse 49.50
No. 7	5 ft.	10—18 in.	"	2 Horse 54.75
No. 8	6 ft.	12—18 in.	"	2 or 3 Horse	60.80
No. 9	7 ft.	14—18 in.	"	2 or 3 Horse	68.25
No. 10	8 ft.	16—18 in.	"	3 or 4 Horse	74.75

For 20-inch Disks, add to price of 18-inch, per
blade50

For Scalloped or Cut-Out Disks, add per blade40

Extension Frame Orchard Disk Harrows

No. 3X	7½ ft.	10—16 in.	Disk	2 Horse \$55.00
No. 4X	9 ft.	12—16 in.	"	2 or 3 Horse	63.00
No. 5X	10 ft.	14—16 in.	"	3 Horse 69.75
No. 8X	9 ft.	12—18 in.	"	3 Horse 67.80
No. 9X	10 ft.	14—18 in.	"	3 Horse 75.25

Extra Equipment

For Weight-boxes, per Harrow, for 3' and 4', add	3.00
For Weight-boxes, per Harrow, for 5' and 6', add	3.50
For Weight-boxes, per Harrow, for 7' and 8', add	4.50
For Neckyoke	1.30
For larger Hitch than specified	3.00
For Foretruck instead of Long Pole	8.35
For Foretruck sent separately	10.50
For Heavy Wheel Transports, Star Disk and Tractor Harrows, pair	14.00
For Medium Wheel Transports, Star Disk or Spading Harrows, pair	9.25
For Shoe Transports, all Harrows, pair	8.50
For Offset for 3-horse hitch with Pole onlyno charge

Allowance

For Long Pole\$ 2.50
For Hitch 2.50
For Scrapers or Cleaners, per Blade or set of Spades40

 
WIARD PLOW CO. RETAIL PRICE LIST NO. 52

Instructions to Salesmen

In ordering, give full description, size and number of Harrow wanted. Also specify any extra equipment wanted, such as Foretruck, Weight-boxes, etc.


Retail List of Harrow Parts sent on application.

THE MORGAN PATENT SPADING HARROW

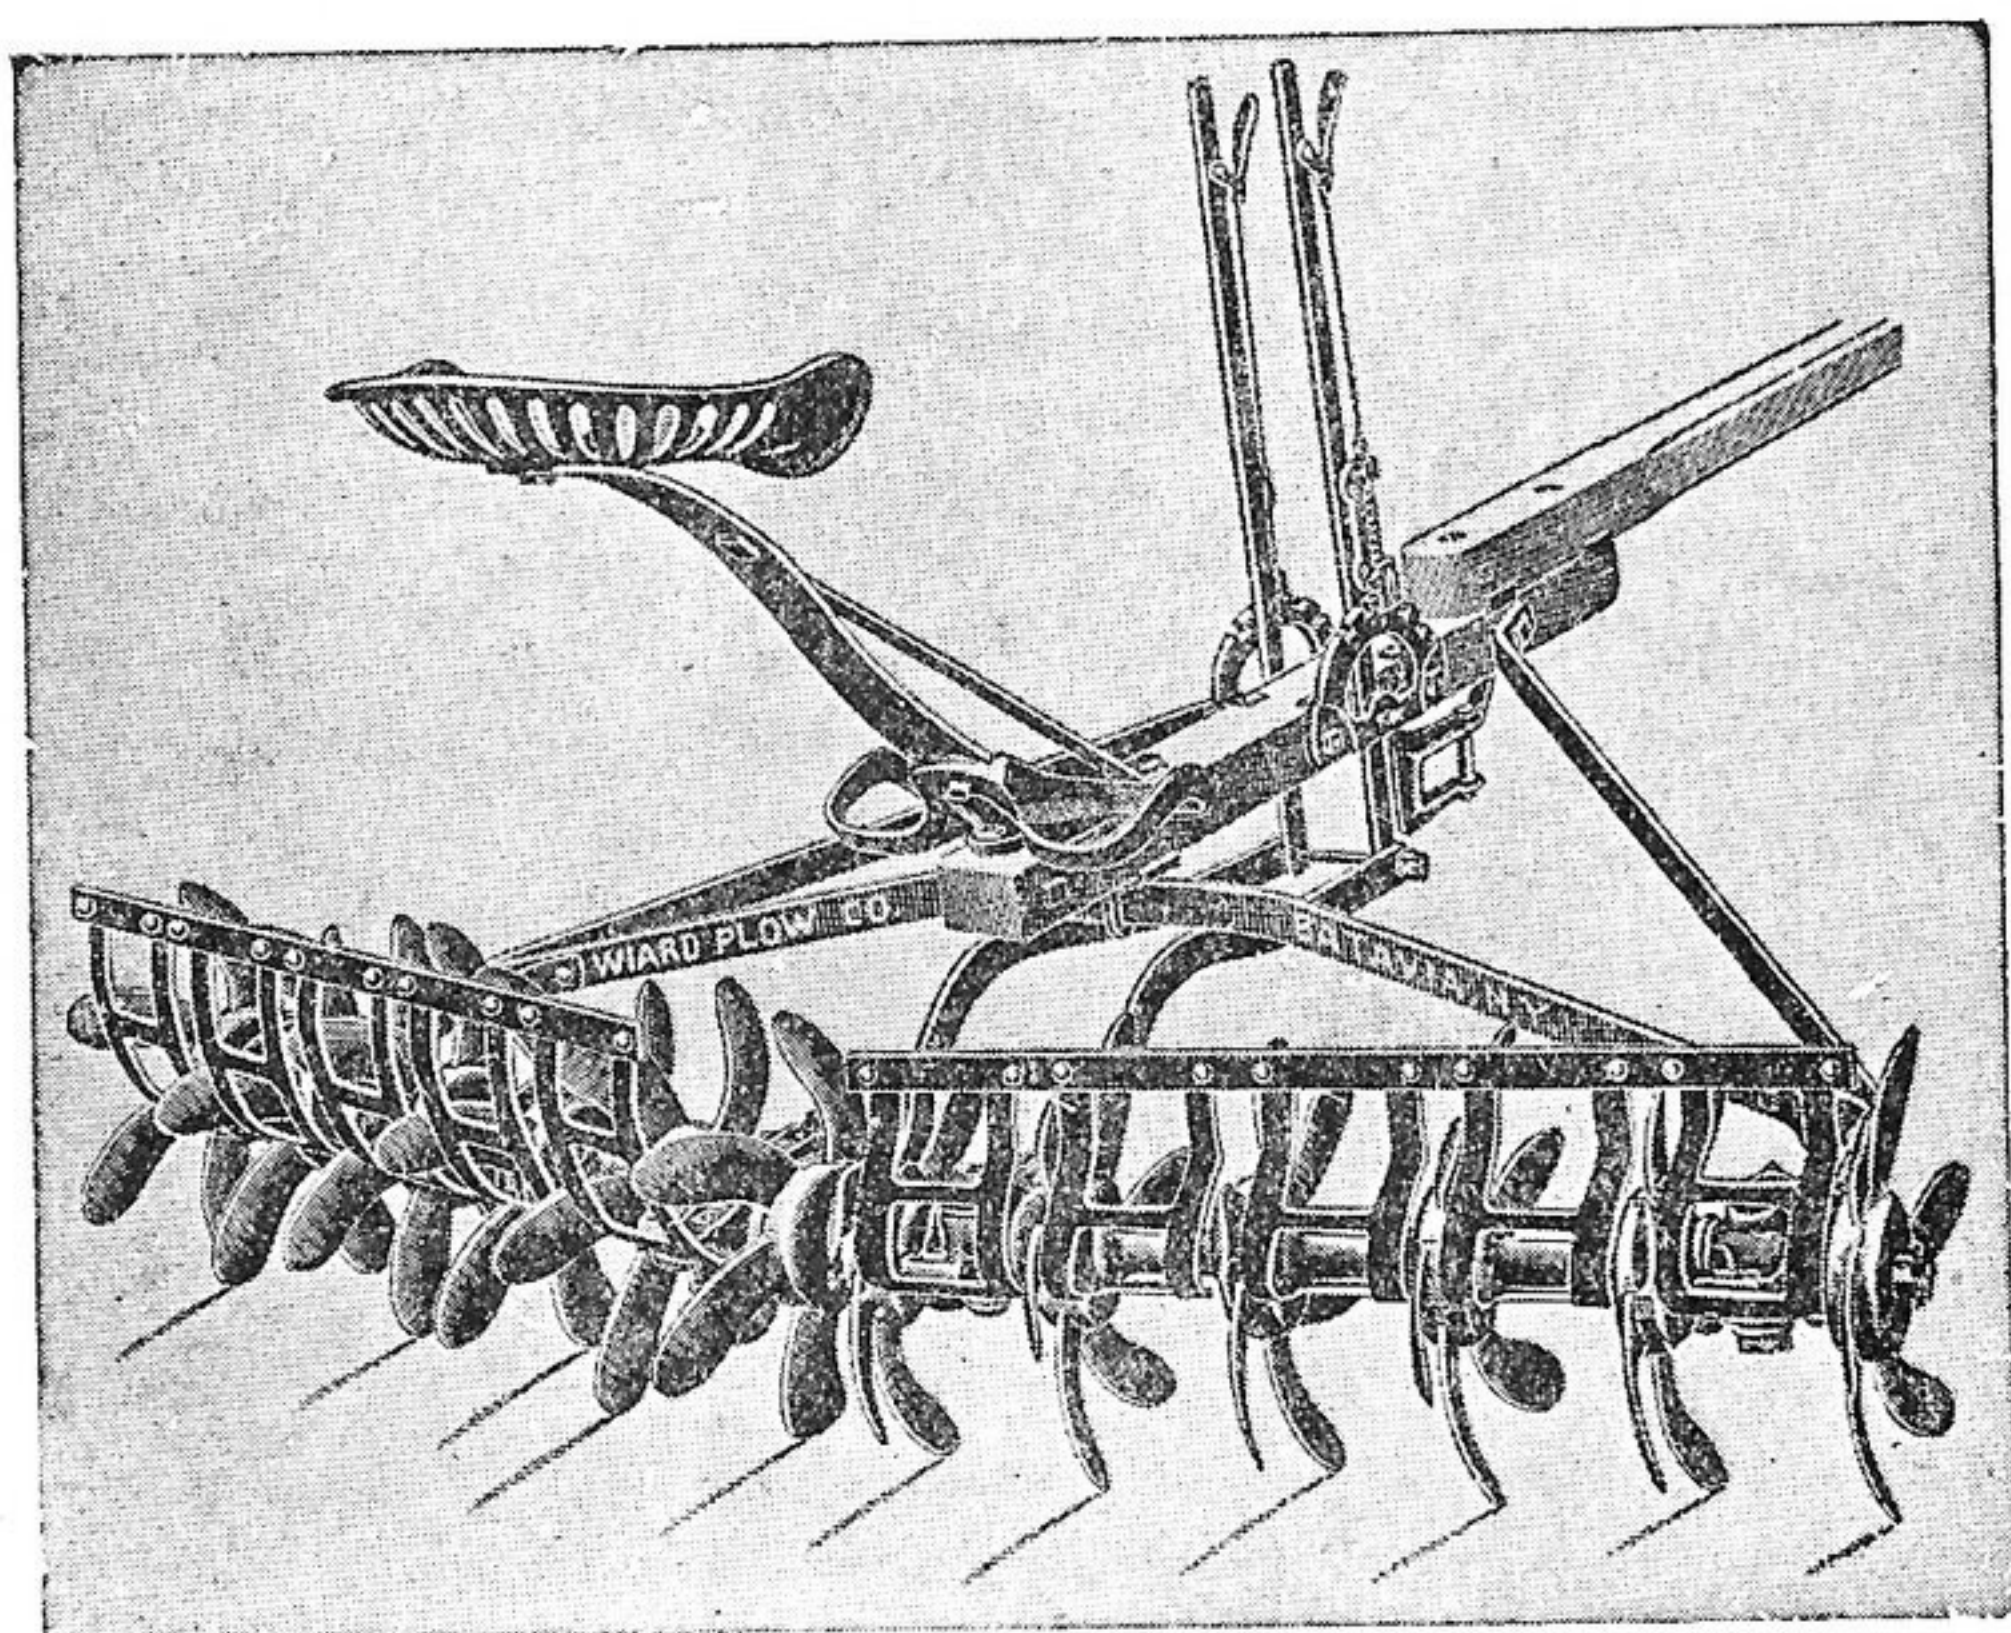

Priced with Long Pole and Cleaners; without Weight-boxes, Neckyoke or Foretruck

A	3 ft.	8 sets	2x16 in.	Spades	1 Horse\$43.75
A	4 ft.	8 sets	2x16 in.	"	2 Horse 46.50
A	5 ft.	10 sets	2x16 in.	"	2 Horse 48.00
A	6 ft.	12 sets	2x16 in.	"	2 or 3 Horse	56.00
A	7 ft.	14 sets	2x16 in.	"	2 or 3 Horse	62.75
A	8 ft.	16 sets	2x16 in.	"	2 or 3 Horse	68.25
C	4 ft.	8 sets	2 1/4 x 18 in.	"	2 Horse 49.50
C	5 ft.	10 sets	2 1/4 x 18 in.	"	2 Horse 54.75
C	6 ft.	12 sets	2 1/4 x 18 in.	"	2 or 3 Horse	60.80
C	7 ft.	14 sets	2 1/4 x 18 in.	"	2 or 3 Horse	68.25
C	8 ft.	16 sets	2 1/4 x 18 in.	"	3 or 4 Horse	74.75

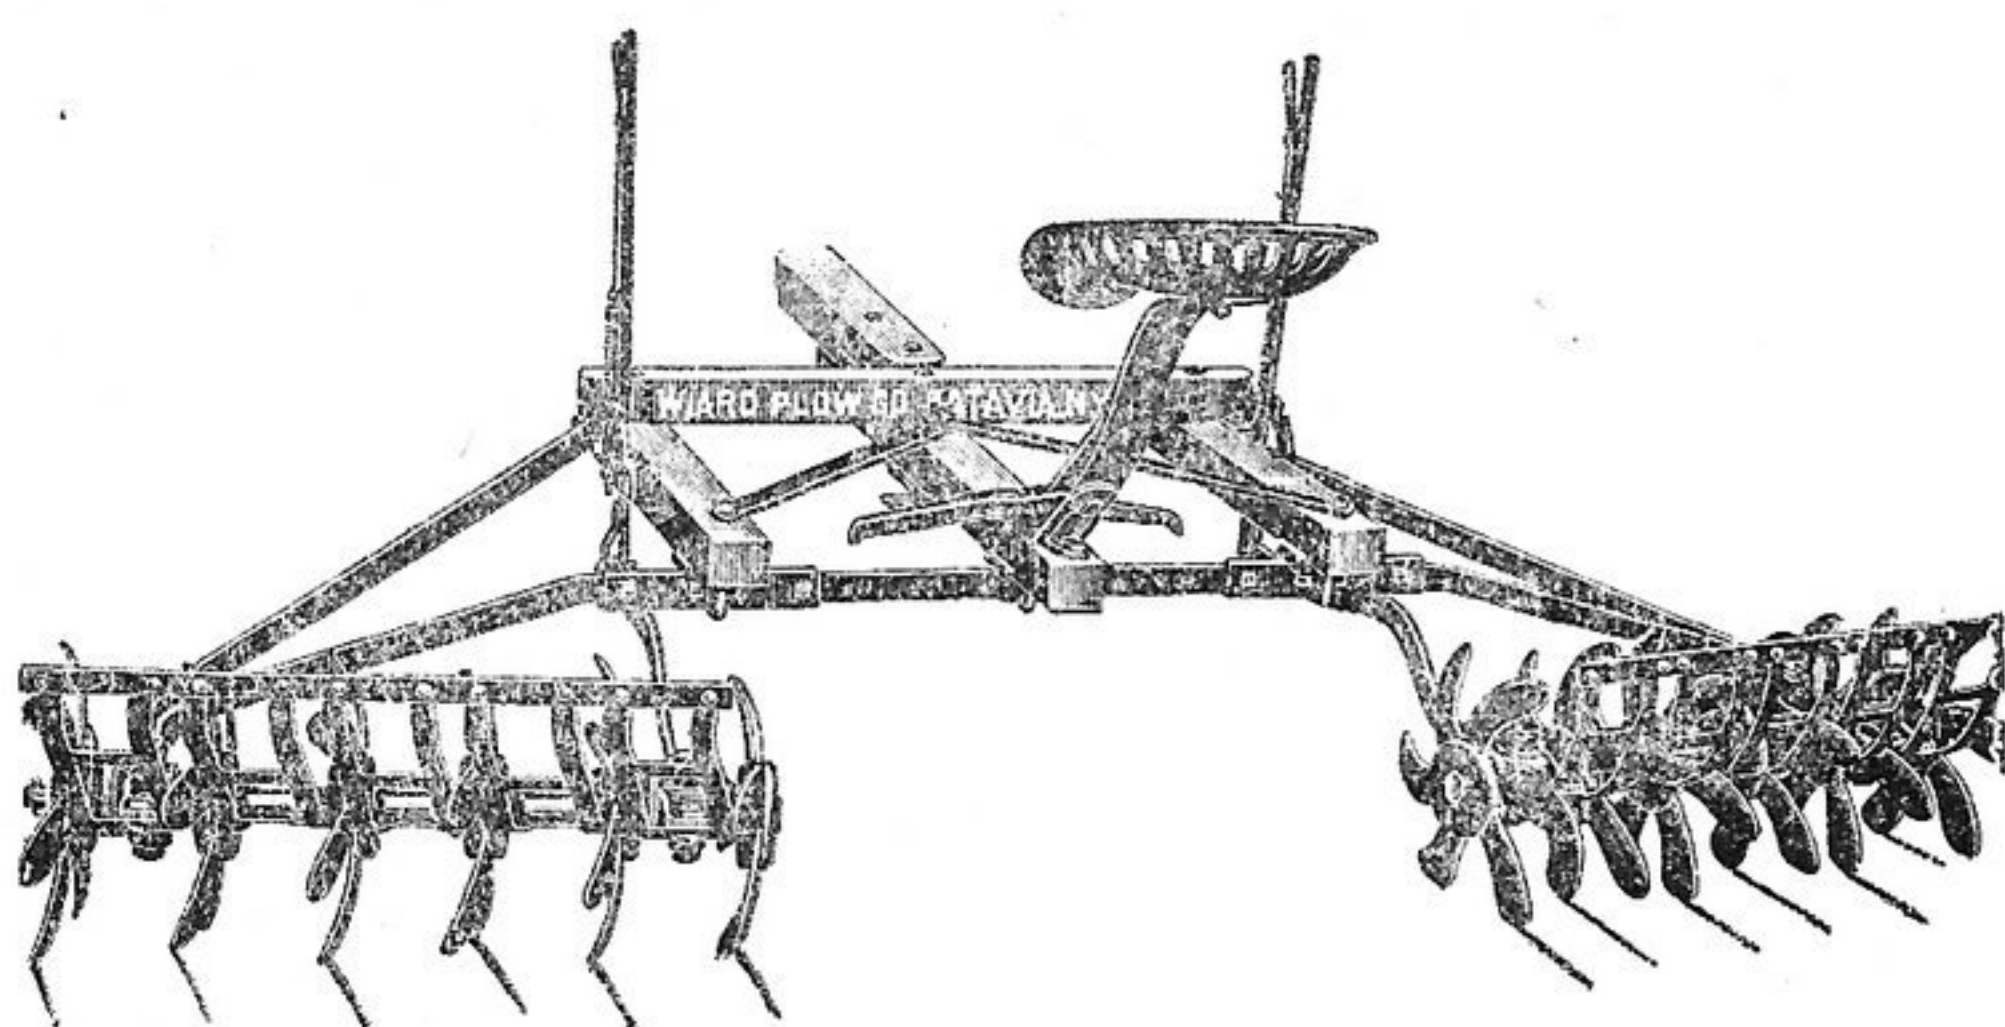 

EXTENSION FRAME MORGAN SPADING HARROW

Or New Star Disk Harrow.


A	7 1/2 ft.	10 sets	2x16 in.	Spades	2 Horse\$55.00
A	9 ft.	12 sets	2x16 in.	"	2 or 3 Horse	63.00
A	10 ft.	14 sets	2x16 in.	"	3 Horse 69.75
C	9 ft.	12 sets	2 1/4 x 18 in.	"	3 Horse 67.80
C	10 ft.	14 sets	2 1/4 x 18 in.	"	3 Horse 75.25

Extra Equipment and Allowance

Same as for Star Disk Harrows.


Reverse Irons for 5 and 6 ft. regular, and 7 1/2 and 9 ft. Orchard Harrows, per set\$ 8.00

 GIANT SPRING TOOTH HARROW

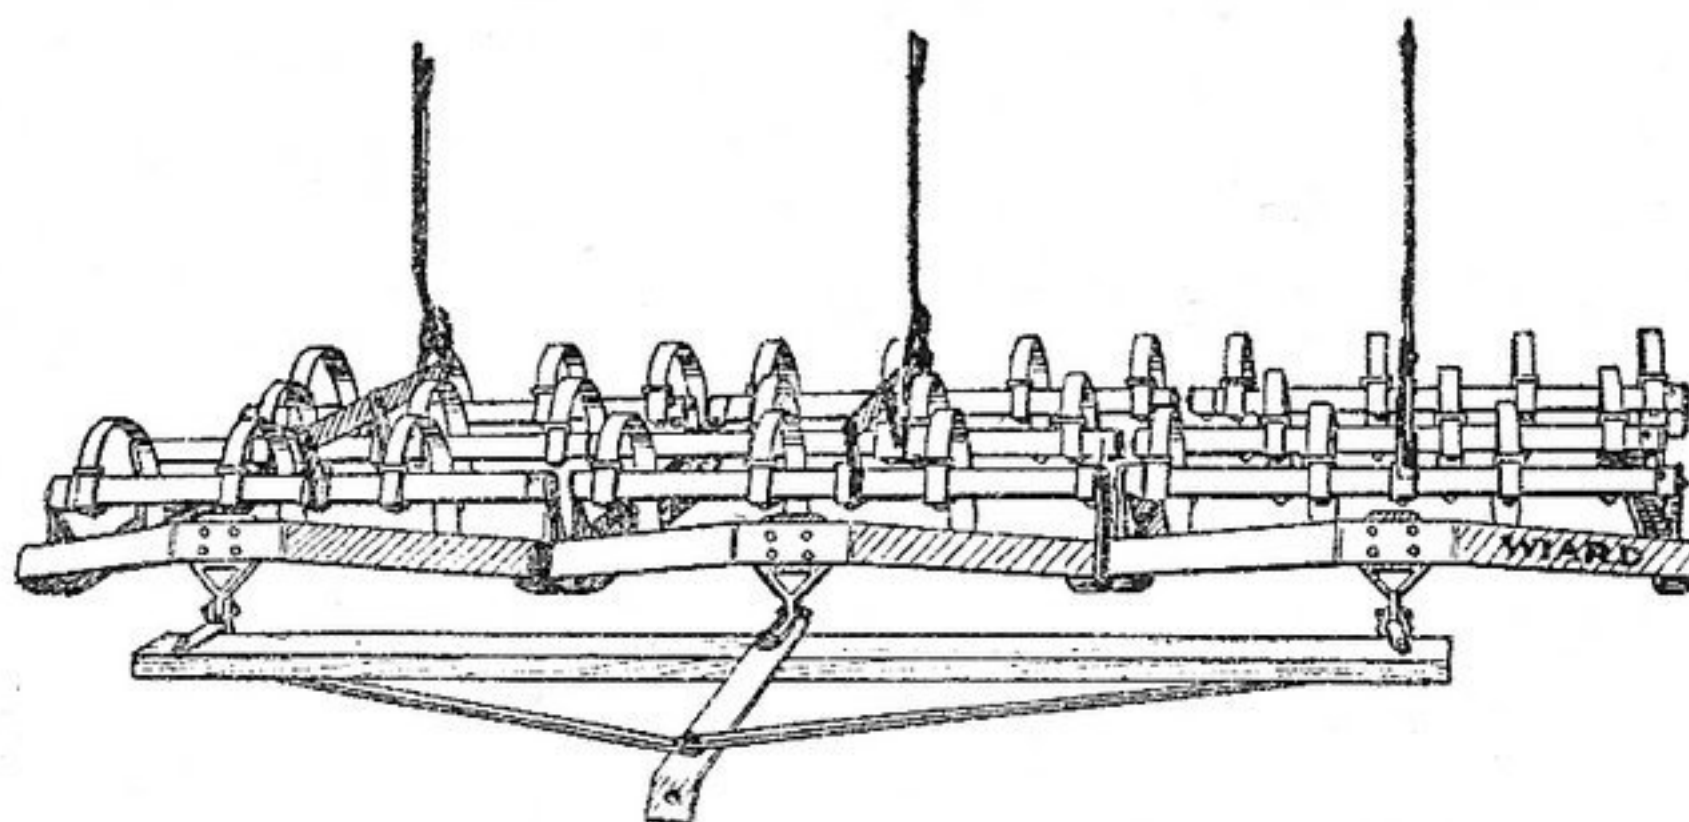

Shoe Runner or Wheel Types


2—10-tooth Sections, with Drawbar	\$ 52.00
3—10-tooth Sections, with Drawbar	77.50
4—10-tooth Sections, with Drawbar	104.00
Single Sections, only	24.00
Double Pointed Teeth, per section, add	2.00
Two section Drawbars, each	4.50
Three section Drawbars, each	5.85
Four section Drawbars, each	7.40

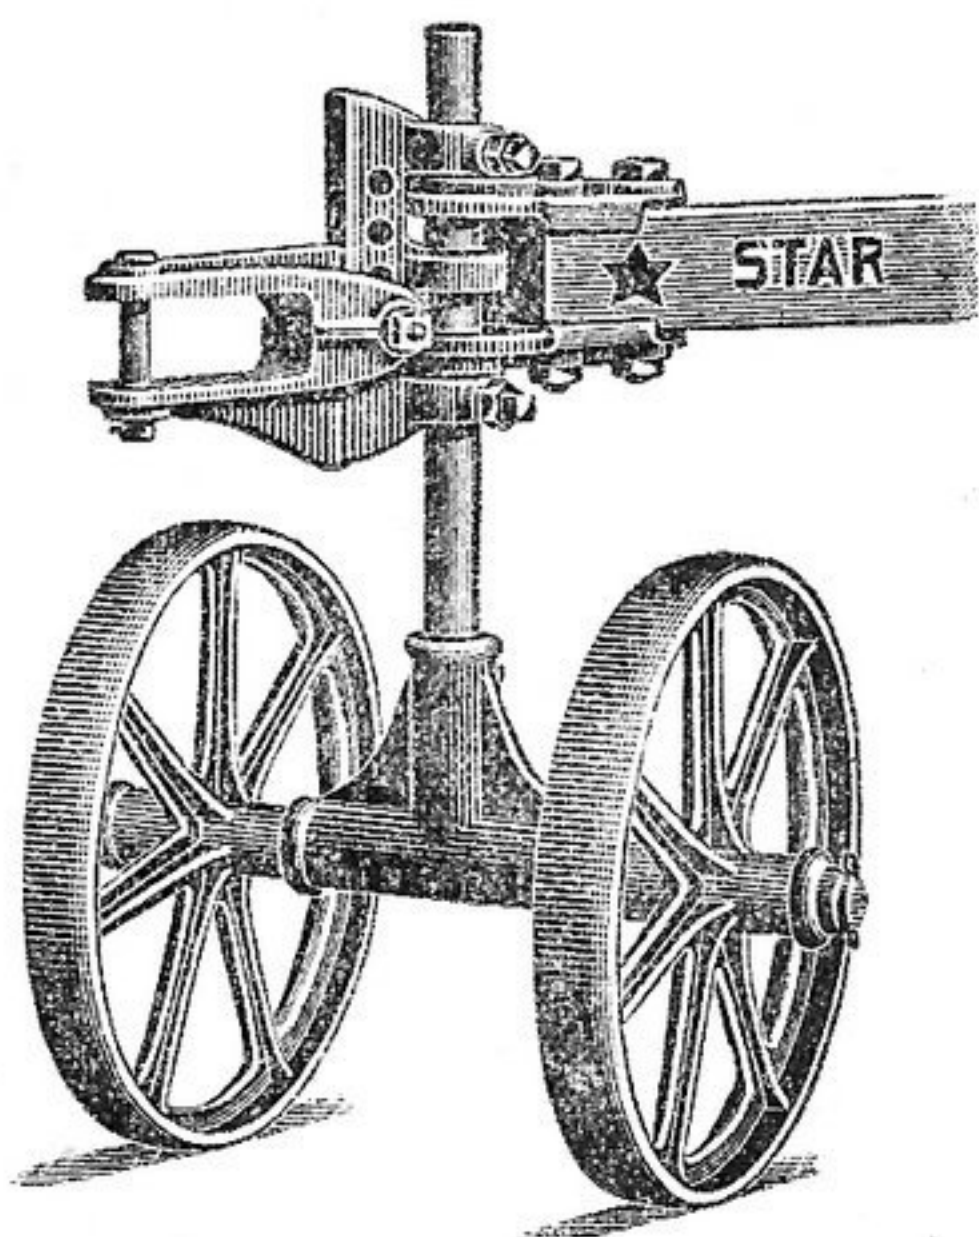 

SWIVEL FORETRUCK

This can be attached to any of our Disk, Spading or Cut-outhorse-drawn Harrows, or other Harrows.

 List Price\$10.50

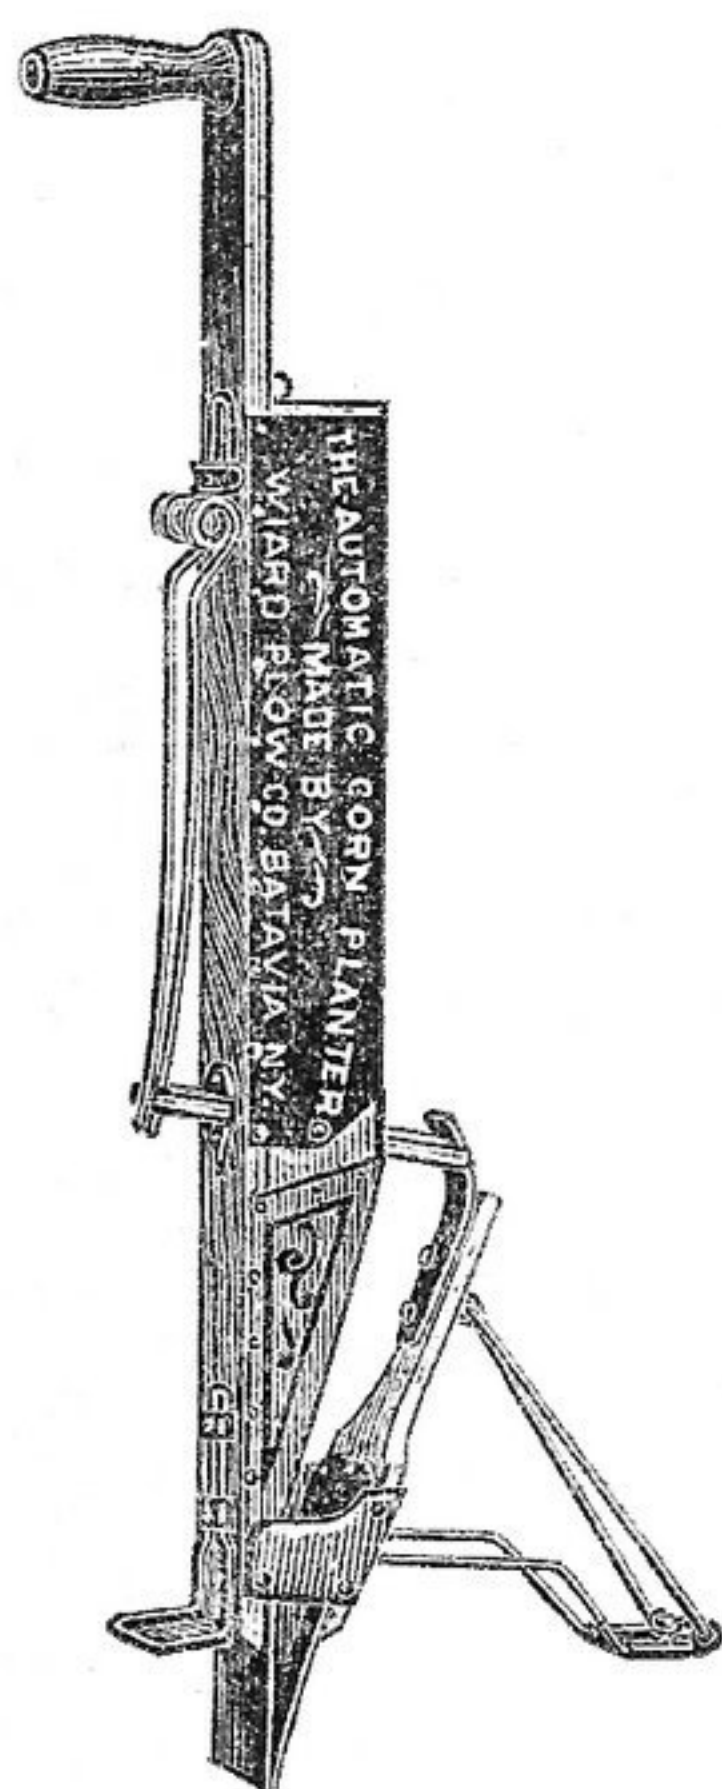


AUTOMATIC HAND CORN PLANTERS


\$35.50 per doz.

Parts price list of Giant Harrow, Foretruck and Corn Planter upon application.

 RIDING AND WALKING WEEDERS

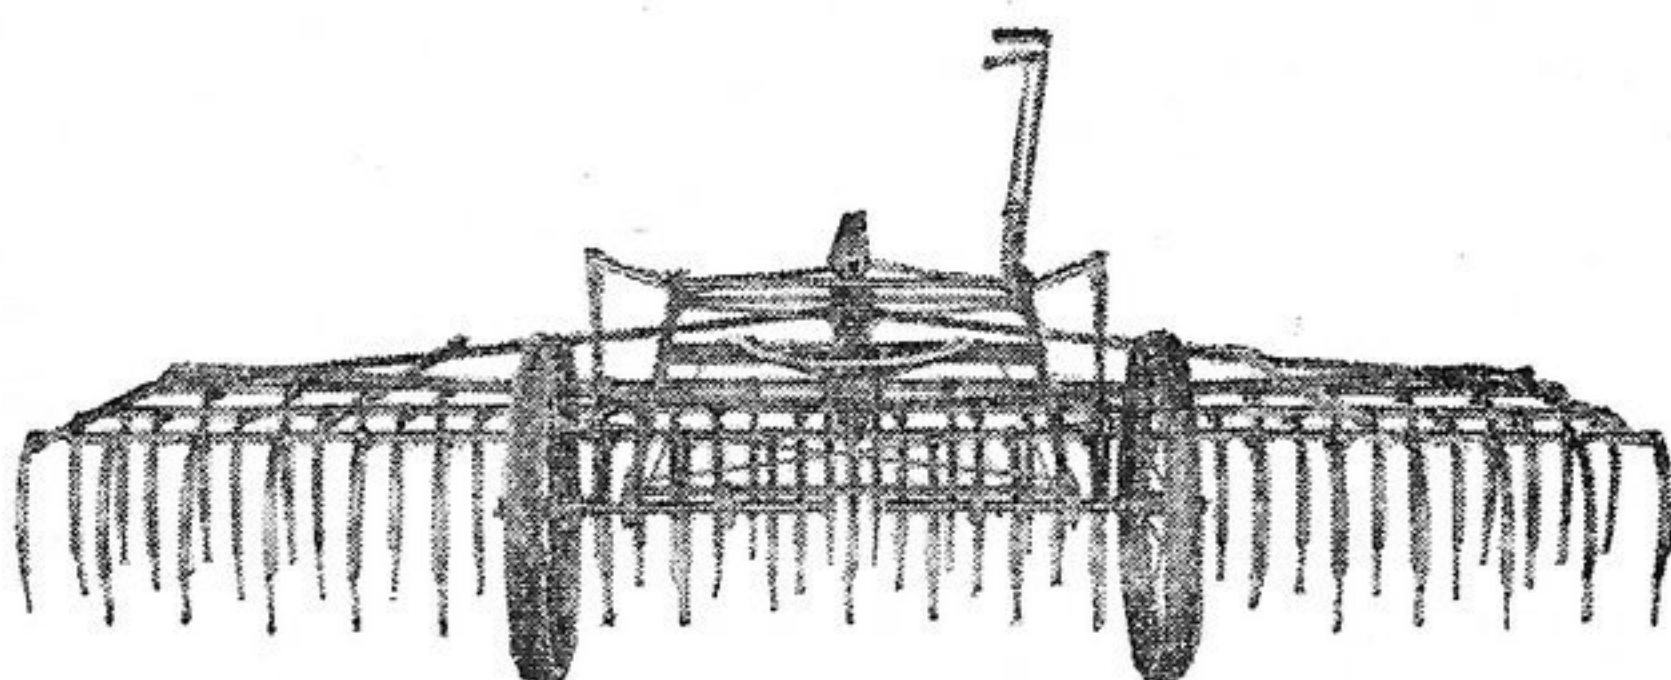

 
No. 12 12 ft. Adjustable Riding Weeder\$49.00

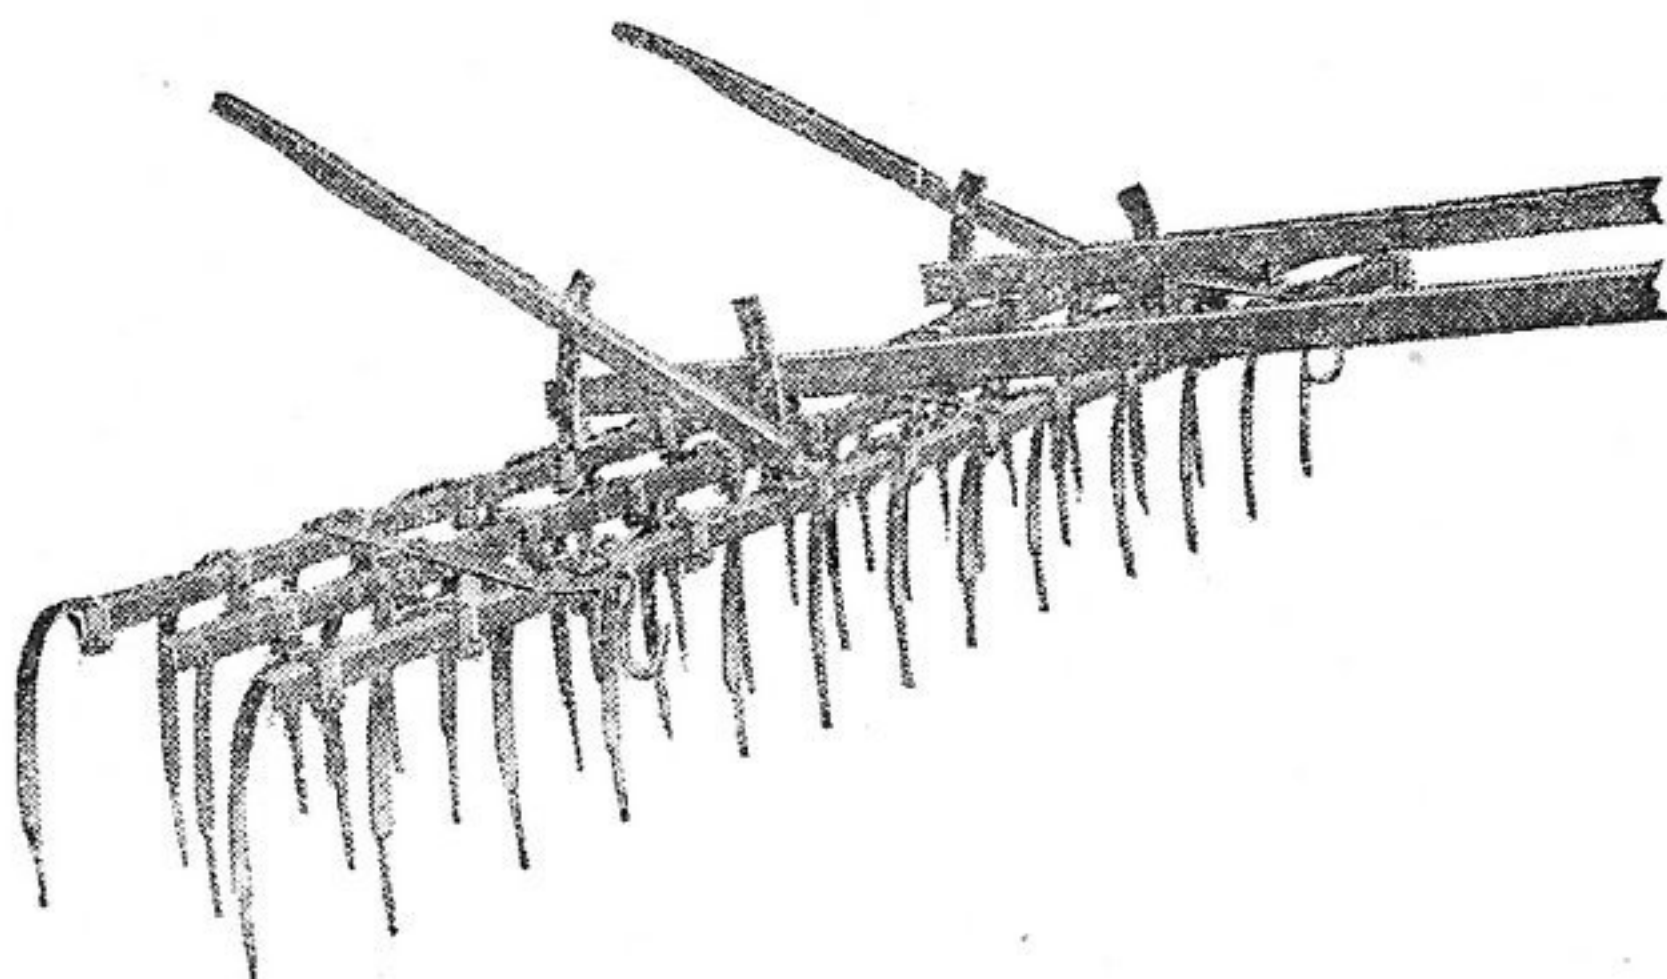

No. 8 7 1/2 ft. Walking Weeder for one-horse... \$14.25


No. 10 11 ft. Walking Weeder for one-horse.... 18.75

 GRADE RIPPER

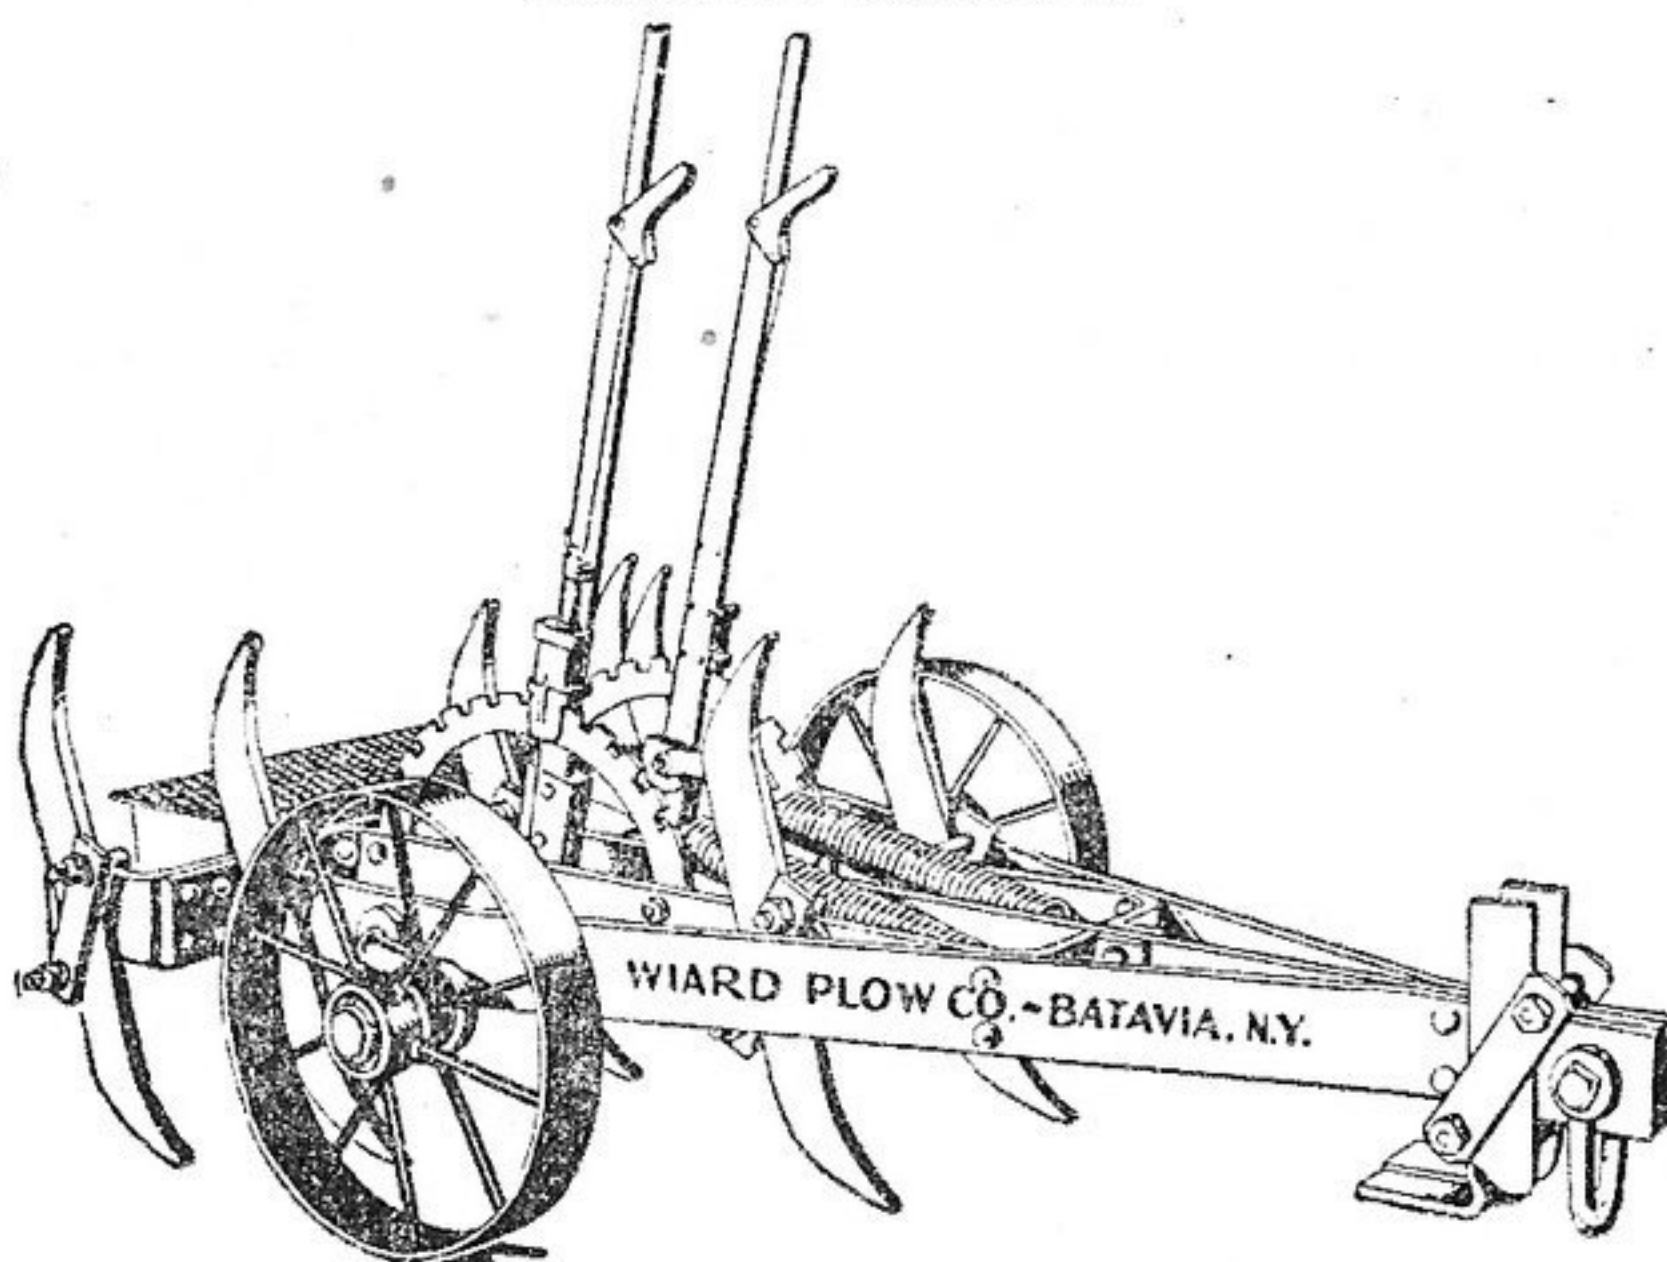

Grade Ripper or Scarifier, with 7 teeth
Weight 1325 lbs.\$210.00

 
LIME SOWER

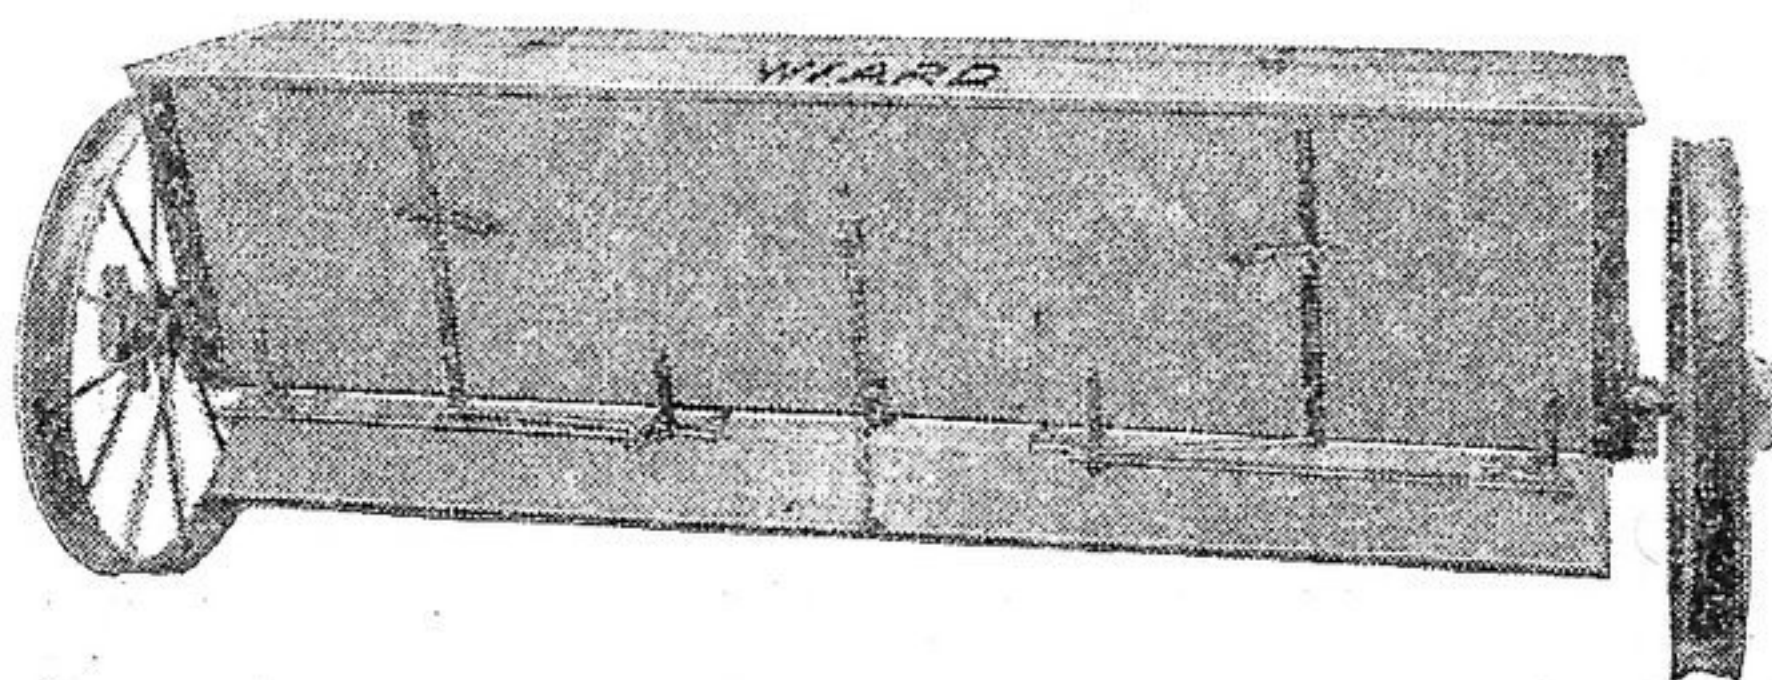

No. 815 8 ft. 15 bu., wt. 460 lbs, with two
screens\$62.00

Parts Lists of Weeders, Grade Ripper and Lime Sower
sent on application.

 
UNIVERSAL BEAN HARVESTER

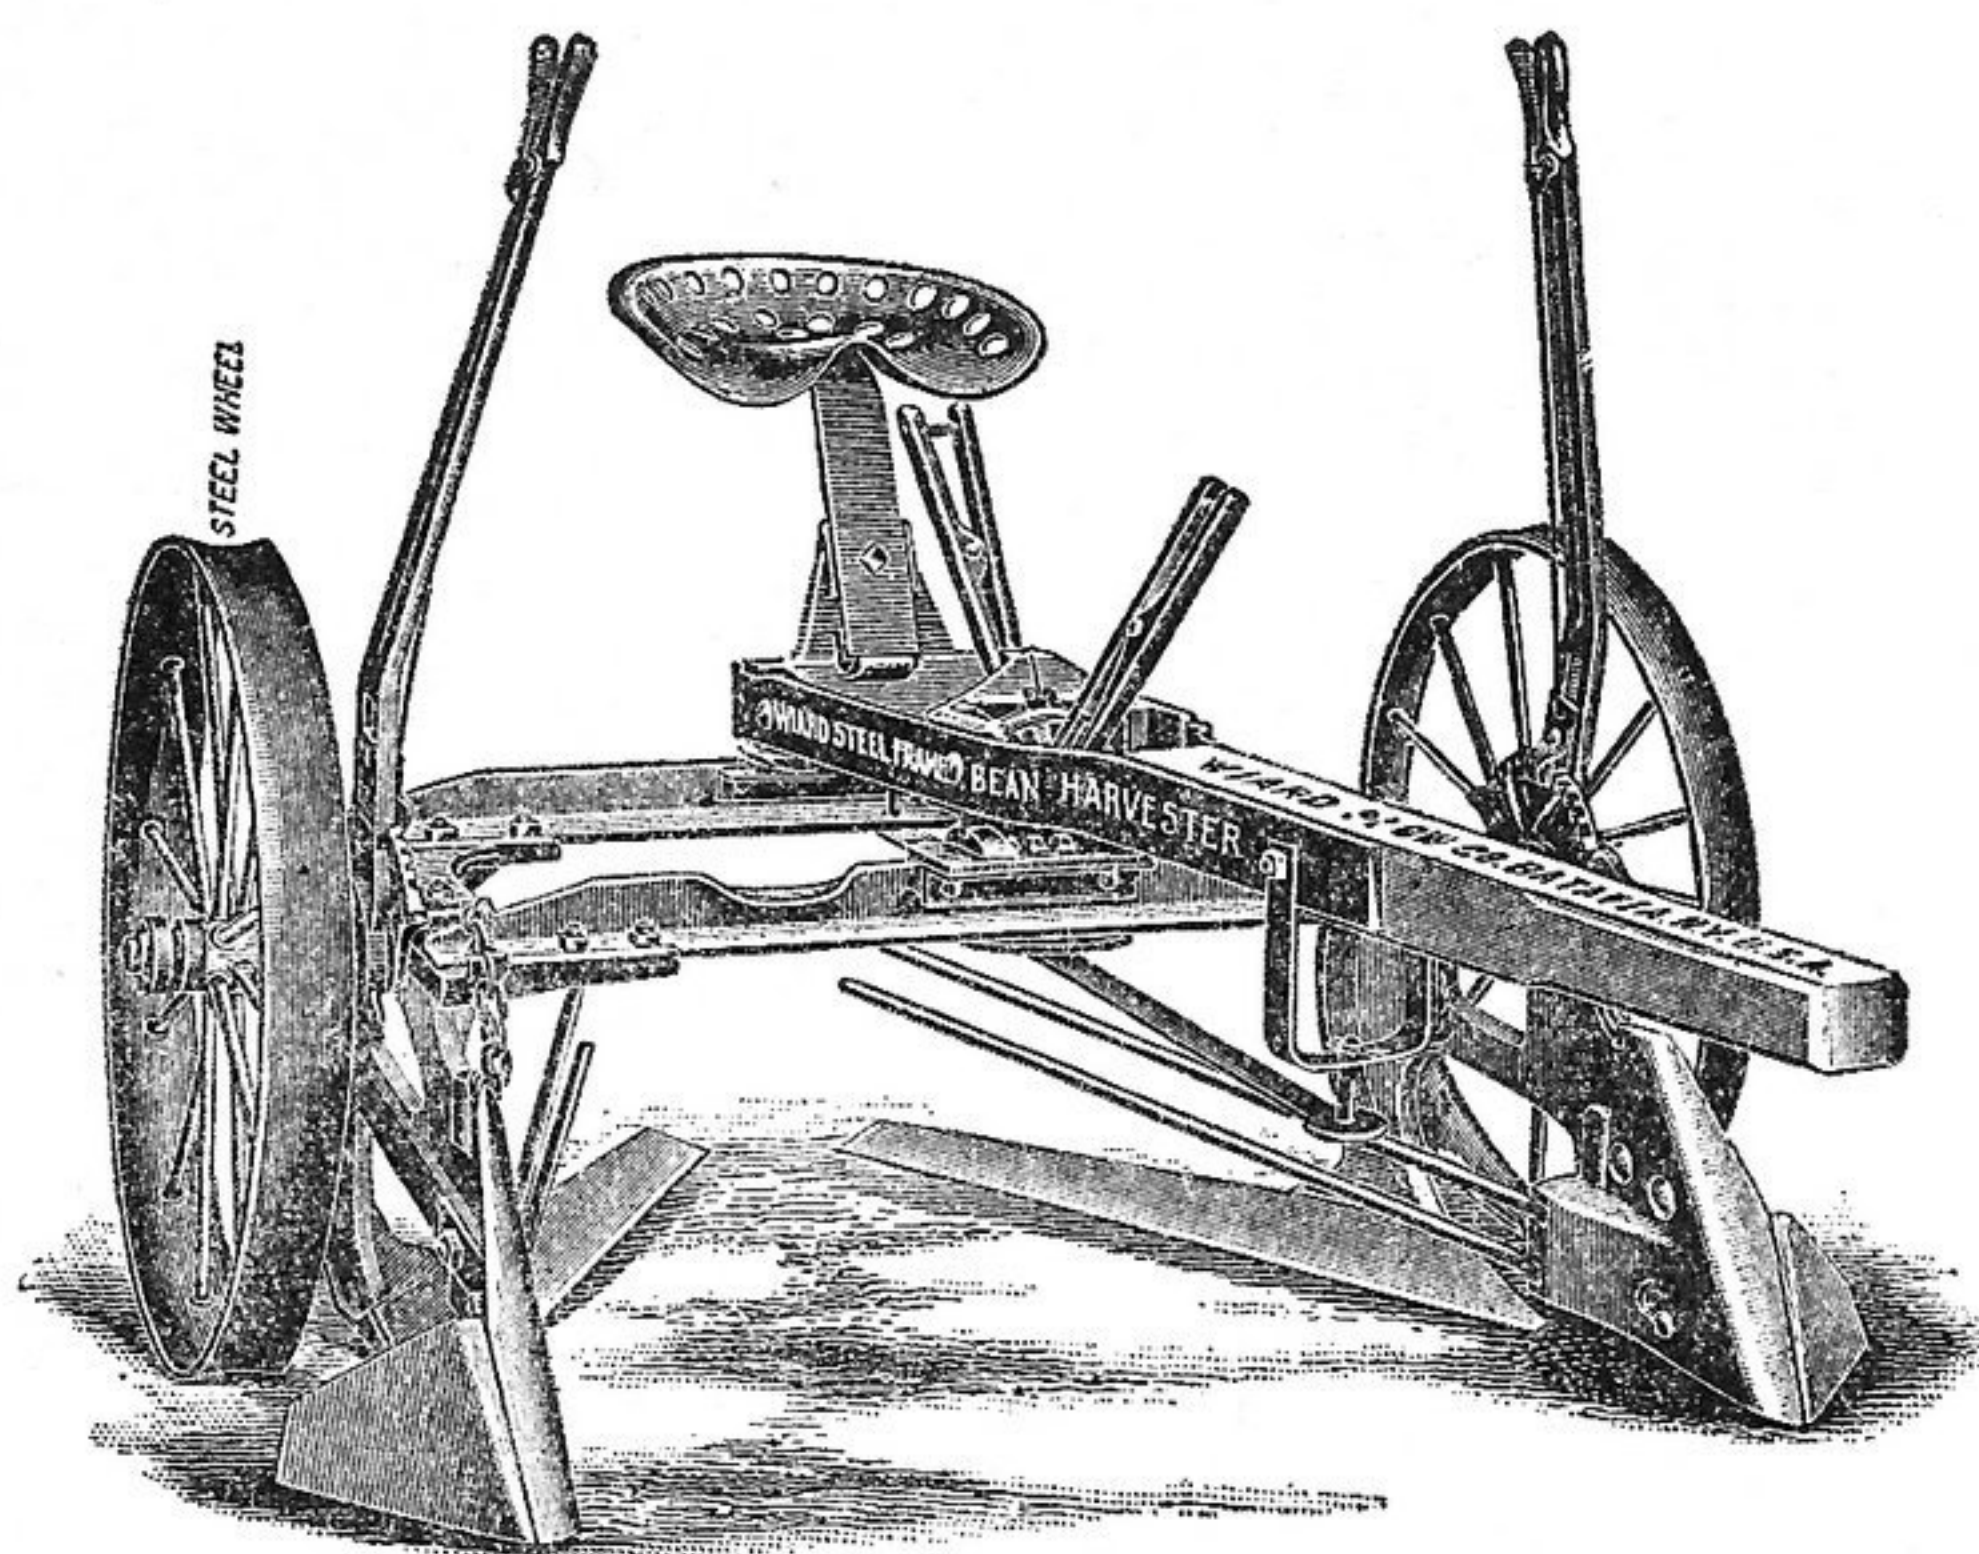

With Wood or Steel Frames, Steel or Cast Wheels;
with Hard Oil Grease Cups, Evener and Neckyoke.

Complete \$51.32

 WIARD YANKEE HORSE RAKES

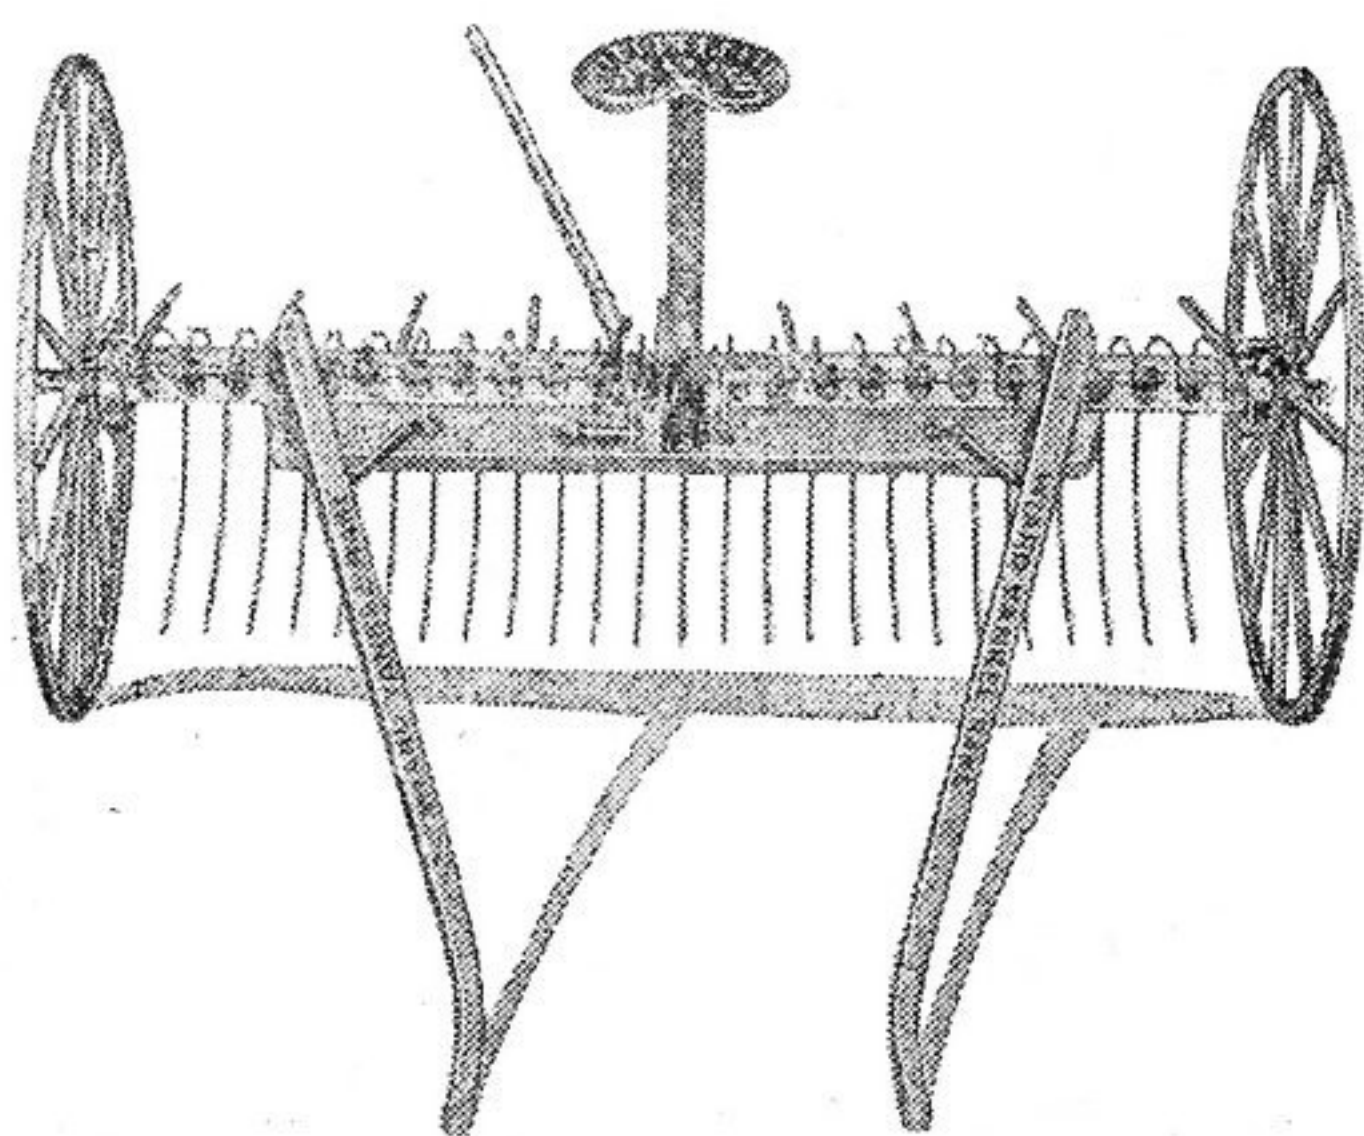

All Rakes have Wood Frames, Wood Wheels, Thills
for one-horse, and Hooks to prevent hay from rolling.

25 Tooth \$49.35

31 Tooth 52.65

Parts price lists of Bean Harvester and Rake furnished
upon application.

BEAMS, WOOD

No. 1 BC, 2BC and 188 Beams	3 60
No. 3 BC Beam	3 85
No. 35, Swivel Beam and A and D Beams	6 00
No. 62, One-horse	2 50
Nos. 10, 10B, 10C, 10D, 13, 21, 22, 63, 121, 122, 123 and 213 Beams	3 60
No. 85 Beam	4 75
Nos. 16, 19, 20 and 130 Beams.....	4 00
Nos. 17, 18, 26, 26½, 27, 28, 29, 140, 144 and Sub-soil Beams	4 75

BEAMS, CAST IRON

Nos. 7, 16, 200 and 300 Cast Iron	9 00
No. 25, Cast Iron	10 50
Nos. 115, 116, 126, 115x and 126x, Swivel, Cast..	9 50
Nos. 546 and 1546, Left Hand	10 50
Nos. 548 and 1548, Left Hand	12 00
No. 65 Beam for Road Plow, Cast Iron	14 00
No. 66 Beam for Road Plow, Cast Iron	20 00
No. 67 Beam for Rooter Plow, Cast Iron	25 75

BEAMS, STEEL

Trussed Steel Beams complete, for Nos. 120SB and 126SB Swivel Plows	8 75
Trussed Steel Beam Sides, for Nos. 120SB and 126SB Swivel Plows, each	3 50
Trussed Steel Beam complete, for No. 124 Swivel..	5 60
Trussed Steel Beam Sides, for No. 124 Swivel, each	2 50
Trussed Steel Beams complete for Nos. 125 or 127	6 90
Trussed Steel Beams Sides, for Nos. 125 or 127, ea.	2 75
Steel Beam for Nos. 208, 209	4 00
Steel Beam for Nos. 210 and 212	4 25
Steel Beams for Nos. 214, 216, 218 and 416.....	4 50
Steel Beams for Nos. 70, 71, 72, 80, 81, 90, 91 Hand Plows and Nos. 2 and 3 Scotch	5 50
Steel Beams for Nos. 73, 74 and 75 Plows	5 00
Steel Beams for Nos. 82, 83, 84, 109, 520, 522, 524, 1524 and 1544 Plows	5 50
90 or 91 Steel Beams only, for Sulky	6 00
Steel Beams for Nos. 4, 43, 44, 45, 85, 86, 95, 100, 103, 104, 105, 106, 113, 114, 219, 220, 240, 420, 440, 524, 526, 528, 546, 548, 1526, 1528 and 1546 Hand Plows	6 00
Steel Beams for Nos. 4, 5, 6, 43, 44, 45, 95, 100, 105 Sulky Plows	7 00
Steel Beam Sides for No. 68 Plow, each	6 00
Steel Beam complete, for No. 68 Plow	17 25
Steel Beam for No. 64 Plow	27 50
Steel Beam for No. 65 Plow	34 50
Steel Beam for No. 66 Plow	41 00
Steel Beam for No. 67 Plow	55 00
Steel Beam for No. 69 Plow	48 25
No. 126 Cast Steel Beam	20 00
No. 200 Cast Steel Beam	25 00

HANDLES, WOOD

Handles for Nos. 82, 83, 84, 85 or 86 Plows, each	85
Handles for Nos. 62 and 63 Plows, fitted, each	70
Handles for Nos. 62 and 63 one-horse Plows, complete, per set	1 85
Handles complete with Hinges, for Nos. 1BC and 2BC, per set	3 75
Handles for all other one-horse Plows, each	75
Handles, complete, for Nos. 82, 83, 84, 85 and 86 Plows, per set	2 25
Handles for all other one-horse and No. 73 two-horse Plows, complete, per set	2 25
Handles for Nos. 1, 2, 3, 4, 5, 6, 7, 8, 9 OS and Nos. 2, 3 and 4 Scotch fitted, each	1 55
Handles for Nos. 1, 2, 3, 4, 5, 6, 7, 8, 9 OS and Nos. 2, 3 and 4 Scotch, complete, per set	3 75
Handles, complete, per set, Wood only, for Nos. 123, 124, 208, 209, 210, 212 and 213	2 00
Handles, single, for Nos. 123, 124, 208, 209, 213 ..	75
Handles, wood, set, complete with Rub Irons for No. 65	6 00
Handles for all other two or three horse Plows, fitted, each, right or left	1 10
Handles for all other two- or three horse Plows, complete, per set	2 50
Handle Rounds, wood, each	25
Handle Rods, iron, each	30
Handles in Rough, bent only, one-horse, wood	60
Handles in Rough, bent only, two-horse, wood	70
Handles in Rough, bent only for Scotch Plows	80

HANDLES, STEEL

Steel Handles, complete, per set, for No. 64 Plow..	8 25
Steel Handles, complete, per set, for Nos. 65, 66 67, 68 and 69 Plows	9 75
Steel Handles, right, for 64 Plow	2 75
Steel Handles, left, for No. 64 Plow, with Rub Iron	3 50
Steel Handles for Nos. 65, 66, 67, 68 and 69 Plows, right or left, each	3 50
No. 67 Grips, each	50
Steel Handles for No. 109	3 00

For additional Handle Parts, see pages 39 and 40

POINTS OR SHARES FOR WIARD PLOWS

Points are put up six in a bundle.

Plow No. or Name	Plain Points	Stony Points	Cutter Points	Slip Nose Points	Alfalfa Points	Forged Steel Points	Jointer Points
1A fits 1BC	60						
*2A fits 2BC	65			80			
2A Scotch	80		95				25
2W Scotch, wide ..	85						25
3 BC	65					4 25	25
3A or 8 Scotch	80		95	95			25
3W Scotch	85						
4W Scotch	85		1 00	1 00			25
7 Scotch	85		1 00	1 00			25
5 or 6 or 2A	80	80	95				25
5 or 6 or 2W	85			1 00			25
10, 10B, 10C, 10D	60	60	70				25
13 fits 213	50		60	60		2 60	25
16	65	65	75	75		4 00	25
17	75	75	90	90			25
18	75	75	90	90			25
19	65	65	75	75		4 00	25
20 Swivel	70					4 25	
21, 121, 125 or 129	60					4 00	
22 or 122 Swivel ..	75					4 00	
23	90						25
24	95						25
25, 26, 26½, 60....	70	70	85	85	3 00	3 50	25
27	75	75	90	90			25
28	75	75	90	90			25
29	80						25
35 same as 126	95					5 00	25
43	75	75	90	90	3 00	3 50	25
43 or 44W or wide	85						25
44	75	75	90	90	3 00	3 50	25
45	80	80	95	95	3 00	4 00	25
62	50						
63	50						
64	1 05					5 00	
65	1 15					5 75	
66	1 25					5 75	
67						5 00	
*68						8 50	
*69						8 50	
70	75	75	90	90		3 50	25
71	75	75	90	90		3 50	25
72	70	70	85	85		3 50	25
73	65		80			3 00	40
74	65		80			2 60	40
75	65		80			2 60	40
80	75	75	90	90			25
81	75	75	90	90			25
82	60					1 00	
83	65					1 50	
84	70					1 75	
85 or 86 nine inch	65					2 25	
85 or 86 ten inch	70					3 00	
90	75	75	90	90	3 00	3 50	25
91	75	75	90	90	3 00	3 50	25
95 or 105	75	75	90	90	3 00	3 50	25
95, 105W or wide	85						25
100	75	75	90	90		3 50	25
100W or wide	85						25
103	75	75	90	90	3 00	3 50	25
104	75	75	90	90	3 00	3 50	25

POINTS OR SHARES FOR WIARD PLOWS

Points are put up six in a bundle.

(Continued from Page 27)

Plow No. or Name	Plain Points	Stony Points	Cutter Points	Slip Nose Points	Forged Steel Points	Jointer Points
103 or 104 W	85					
105	80	80	95	95	3 50	25
106	80	80	95	95	4 00	25
109	70				2 60	
113	1 30					25
114	1 30					25
116 Swivel	95	95				25
115, 120, 130, 140 and 300 alike	85	85			4 75	25
121, 129 Swivel.....	60				4 00	
122,	75				4 00	
123 or 124	45				3 25	
125	60				4 00	
126	95	95			5 00	
127	70				4 25	
144 and 240	80					25
200	75		90			40
202 and 203	80		95		3 50	25
205 and 206	80		95		3 50	25
208	25					
209	25					
210	30					
212	35					
213 same as 13	50		60	60	2 60	25
214	40					
215	40					25
216	50					25
218	55					25
219	70			1 00		25
220	70			1 00		25
240 and 144	80			1 00		25
313	1 30					25
314	1 30					25
416	60			75		25
420	70			1 00		25
440	80					25
A two- or three horse	95		1 10			25
D	90		1 05			25
F	85		1 00	1 00		25
520	65	65	80	80	3 00	25
522	65	65	80	80	3 00	25
524 or 544	70	70	85	85	3 50	25
526 or 546	75	75	90	90	3 50	25
528 or 548	80	80	95	95	4 00	25
1524, 1544	70	70	85	85	3 50	25
1526, 1546 hand plow ..	75	75	90	90	3 50	25
1528, 1548 hand plow ..	80	80	95	95	4 00	25
1526, 1546 tractor plow	90	90	1 05	1 05	3 50	25
1528, 1548, tractor plow	95	95	1 10	1 10	4 00	25
Subsoil	75					
Fin Cutter, steel						2 00
Steel Jointer Point for No. 100 Plow.....						55
Steel Plate, sawtooth edge, for alfalfa point						1 95
*Steel Wing for point on Nos. 68 and 69 Plows....						3 30
*Cast Wing for point only on No. 2BC Plow.....						50
Slips for slip nose points, each.....						15
*Slips for 2B points, each.....						15
No. 126 Swivel, cast steel point.....						5 00
No. 200 Right Hand, cast steel point.....						4 75
Heavy Cast Points each 10 cents higher than Plain Points.						
For Polished Cast Points, add 15 cents each.						

MOLDBOARDS, MOLDBOARD STANDARDS, LANDSIDES, SHOES AND STRIPS

Plow No. or Name	Chilled Moldboard	S. C. Steel Moldboard	Moldboard Standards	Chilled Landsides	Steel Landsides	Shoes and Strips
1BC	3 00	5 50	3 00	1 20		
2BC	3 50	6 00	3 25	1 20		
3BC	3 85		3 50	1 40		
2 Scotch		9 00	4 00		1 50	70
3 Scotch		8 75	4 00		1 50	70
4 Scotch		9 00	4 75		1 50	70
5 or 6 Scotch		9 00	4 00		1 50	70
7 Scotch		9 00	4 75		1 50	70
8 Scotch		8 75	4 00		1 50	70
10 Series	3 00		4 00	1 00		
13 or 213	2 50	3 75	3 00	70	1 25	
16	4 00	7 75	4 00	1 10		
17	4 50	8 50	4 25	1 55		
18	5 00	9 00	4 25	1 55		
19	4 00	7 50	4 00	1 15		
20	3 25	5 75	4 50			90
21	2 75	4 50	3 50			70
22	2 50	4 50	3 25			70
23	5 00			1 55		
24	5 00			1 55		
25 or 60	5 00	8 00		1 40		
26	5 50	8 50	4 00	1 40		
26½	5 00	8 00	4 00	1 40		
27	5 00	8 00	4 00	1 40		
28	5 50	8 50	4 00	1 40		
29	4 50		3 50	1 55		
35		8 00	5 75			1 15
43	4 50	8 50	4 25	1 25	1 50	70
*44	5 00	9 00	4 25	1 25	1 50	70
*45	5 25	9 50	4 75	1 25	1 50	70
62	1 60		2 00	60		
63		3 00	2 00	80		
64	5 50			1 60		
65	6 00			2 00		
66	5 75			2 00		
67 Pavement				3 50		
68		9 00	1500		1 00	1 25
69		9 00				1 25
70	5 00	9 00	4 50	1 00		
71	4 75	9 00	4 50	1 00		
72	4 25	7 00	4 00	1 00	1 25	70
73	3 75	6 00	3 75	80	1 00	55
74	3 50	5 50	3 50	80	1 00	55
75	3 50	5 50	3 50	80	1 00	55
76						1 15
80	5 00	9 00	4 50	1 00	1 25	70
81	4 75	9 00	4 50	1 00	1 25	70
82 right or left	1 60	2 00	2 50			55
83 right or left	1 80	2 25	2 60			55
84 right or left	2 00	2 50	2 75			65
85 right or left	2 50		3 00			75
86 right or left	2 50		3 75			75
90	5 00	9 00	4 50	1 00	1 25	70
91	4 75	9 00	4 50	1 00	1 25	70
95		9 00	3 50		1 50	70

*No. 44 Solid Landside 1 50

*No. 45 Solid Landside 1 50

Moldboard Extension, 214, 215, 216 and 218 2 50

Moldboard Extension, 219 and 220 3 25

Moldboard Standards for Nos. 43, 44, 95, 100, 103,

104, 105, 524, 526, 528, 544, 546, 548 and 1500 Series

Sulky Plows are different from those used on Hand Plows.

MOLDBOARDS, MOLDBOARD STANDARDS, LANDSIDES, SHOES AND STRIPS

(Continued from page 29)

Plow No. or Name	Chilled Moldboard	S. C. Steel Moldboard	Moldboard Standards	Chilled Landsides	Steel Landsides	Shoes and Strips
100		9 00	3 75		1 50	70
100L		9 50	3 75		1 50	70
103	4 50	8 50	4 25	1 25	1 50	70
*104	5 00	9 00	4 25	1 25	1 50	70
105		9 00	3 75		1 50	70
106	5 25	9 50	4 75	1 25	1 50	70
109	3 60		2 75	1 00		
115	4 50	8 50				1 15
116 or 76	5 50	9 00				1 15
120	4 50	8 50	5 00			1 15
121	2 75	4 50	3 50			70
122	2 50	4 50	3 25			70
123 or 124	2 60	5 00	3 25			65
125	2 60	5 00	3 50			75
126	4 50	9 00	5 00			1 15
127	3 00	5 00	4 25			1 00
129	3 75	5 50	3 50			70
130	4 50	8 50	5 00			1 15
140	4 50	8 50	5 50			1 15
144	5 00		4 75	1 50		
200	4 25			95		
202	5 00	8 00	5 00	1 15		
203	5 00	8 00	5 00	1 15		
205	5 00	8 00	5 00	1 15		
206	5 00	8 00	5 00	1 15		
208J or 209J	90		1 40	50		
208H or 209H	1 20		1 40	50		
208B	1 30		1 40	50		
209B	1 40		1 40	50		
210	1 50		1 75	50		
212	1 60		2 00	55		
214	2 25		3 00	85		
215	3 00		3 00	90		
216	3 50		3 15	1 00		
218	3 50		3 30	1 00		
219	3 75		3 75	1 20		
220	4 00		4 25	1 20		
240	4 50		5 00	1 25		
300	4 50	8 50				1 15
416	3 00		3 00	90		
420	4 00		3 75	1 20		
440	4 50		4 25	1 25		
520	3 50	5 50	3 50	1 25		
522	4 00	5 50	3 50	1 25		
524 or 1524	4 50	8 50	4 25	1 50		
526 or 1526	5 00	9 00	4 25	1 50		
528 or 1528	5 25	9 50	4 75	1 75		
544 or 1544	4 50	8 50	4 25	1 50		
546 or 1546	5 00	9 00	4 25	1 50		
548 or 1548	5 25	9 50	4 75	1 75		
A	6 25		5 00	1 70		
D	6 25		5 00	1 70		
F	6 00		4 50	1 40		
Subsoil	1 50		4 00			

82 or 83 D Mold Stand Filler only 1 10

*No. 104 Solid Landside 1 50

*No. 106 Solid Landside 1 50

D.S. Points can be furnished for No. 106 and
Southern Series shown on page 11.

JOINTERS AND PARTS.

45M Jointer only, for 45 Plow	3 75
45M Jointer complete with Band and Guide, for No. 45 Plow	4 75
70M Jointer only, with Chilled Mold and Point, for Nos. 2, 3, 4, 5, 6, 43, 44, 70, 71, 72, 90, 91, 100, 100L, 202, 203, 522, 524, 526, and 528 Plows	3 75
70M Jointer with Bent Standard, for 219 and 220..	3 75
80M Jointer only, Chilled Mold and Point, for 106	3 75
546M Jointer only, Chilled Mold and Point, for Nos. 80, 81, 95, 103, 104, 105, 106, 205, 206, 544, 546, 548, 1544, 1546 and 1548 Plows	3 75
80M Jointer with Bent Standard, for Nos. 416 and 420 Plows	3 75
100M Jointer only, with Steel Mold and Point in one piece for No. 100 Plow	3 75
105M Jointer only, with Steel Mold and Point in one piece for No. 105 Plow	3 75
Any of above Jointers complete with Band and Guide or Clamp and Plate	4 75
74M Jointer only, for Nos. 73, 74, 75 and 200	3 00
74M Jointer with Band and Guide or Clamp and Plate, for Nos. 73, 74, 75 and 200	4 00
Jointer only, for Nos. 10, 10B, 10C and 10D Plows	3 00
Jointer as above, complete with Holder and Bolts..	4 00
80 Jointer only, malleable, for Nos. 16, 17, 18, 19, 25 and 26½	3 00
111 Jointer only, malleable iron, for Nos. 27, 28 and 29 Plows	3 00
80 or 111 Jointer, complete with Holder and Bolts	5 00
Malleable Adj. Jointer only, for A, D, F Plows	4 75
Jointer as above, complete with Band and Wedge..	5 75
74M Jointer and all attachments for Nos. 216 and 218 Plows	4 00
Jointer Standard for Nos. 10, 10B, 10C, 10D	1 75
80 Jointer Standard for Nos. 16, 17, 18, 19, 25, 26 and 26½ Plows	2 00
10M Jointer, lower section, for Nos. 43 and 44 O. S.	1 75
45M Jointer Section for No. 45 Plow	1 65
70M Jointer, lower section, for Nos. 43, 44, 70, 71, 72, 90, 91, 100, 202, 203, 219, 220, 522, 524, 526, 528 and Nos. 2, 3, 4, 5 and 6 Scotch Plows	1 65
74M Jointer Section for Nos. 73, 74, 75, 216 and 218	1 55
80M Jointer Standard for No. 106	1 65
144M Jointer Section for No. 144	2 00
144N Jointer Bracket	2 50
546M Jointer Section for Nos. 80, 81, 95, 103, 104, 105, 205, 206, 416, 420, 544, 546 and 548..	1 65
100M Jointer, lower section, for No. 100 Plow that takes Reversible Steel Jointer Point	1 65
105M Jointer, lower section, for Nos. 95 and 105 Plows that take Reversible Steel Jointer Point	1 65
111 Jointer Standard for Nos. 27, 28 and 29	2 00
36 Jointer or Colter Support for No. 10 Series	1 65
83 Jointer or Colter Support, malleable, for Nos. 16, and 19 Wood and Malleable Beam Plows	2 25
102 Jointer or Colter Support for Nos. 17, 18, 26 and 26½	2 25
112 Jointer or Colter Support for Nos. 27, 28 and 29 Plows	2 25
127 Jointer or Colter Support for No. 16 Cast Beam Plow	2 25
145 Jointer or Colter Support, malleable, for No. 25 Plow	2 25
Jointer, steel upper section, for Nos. 2, 3, 4, 5, 6, 7, 8, 43, 44, 45, 60, 70, 71, 72, 73, 80, 81, 90, 91, 100, 103, 104, 105, 106, 202, 205, 206, 214, 215, 216, 218, 219, 220, 240, 416, 440, 522, 524, 526, 528, 544, 546 and 548 Plows	1 35

JOINTERS AND PARTS—Continued.

Jointer, steel upper section, for Nos. 74, 75 and 520	1	10
70N Jointer or Colter Band Guide for Nos. 70, 71, 72, 90, 91 and Nos. 2 and 3 Scotch Plows		70
74N Jointer or Colter Band Guide for Nos. 73, 74 and 75		65
80N Jointer or Colter Band Guide for Nos. 80 and 81 Plows		70
105N Jointer Band Guide for Nos. 95, 103, 104, 105, 106, 219, 220, 416, and 420		70
100N Jointer or Colter Band Guide for Nos. 44, 45, 100, 214, 215, 216, and 218		70
Jointer or Colter Band, for Nos. 2, 3, 4, 5, 6, 44, 45, 70, 71, 72, 73, 74, 75, 80, 81, 90, 91, 95, 100, 104, 105, 106, 214, 215, 216, 218, 219, 220, 416 and 420		80
Jointer or Colter Band complete for Nos. 202, 203, 205 and 206 Plows	1	05
605N Jointer or Colter Clamp for Nos. 7, 8, 522, 524, 526, 528, 1524, 1526 and 1528		55
705N Jointer or Colter Clamp for Nos. 544, 546, 548, 1544, 1546, and 1548 Plows		55
605-O Jointer or Colter Clamp Plate for Nos. 7, 8, 520, 522, 524, 526, 528, 544, 546, 548, 1524, 1526, 1528, 1544, 1546 and 1548		75
Jointer or Colter Band for all other Plows, each	1	10
Iron Beam or Wood Beam Wedge, each		25
Jointer only for Swivel Plows	4	00
Jointer and Fixtures for Nos. 115x, 116, 126x, 140, 120SB and 126SB Swivel Plows, complete	5	25
Jointer Steel Shank for Swivel Plow	1	45
89 Jointer Standard for Swivel Plow	1	50
97 Shifter for Swivel Jointer		55
C Lever for Swivel Jointer		40
93 Washer for Swivel Jointer		35
95 Coupling for Swivel Jointer		50
F Collar and Set Screw for Swivel Jointer		50
126C Jointer Support for 120SB and 126SB	1	75
50AM and 50N and Z Washer		40
526X Washer		40
546X Washer		40

HANGING COLTERS AND PARTS.

Colter only, steel, for Nos. 2, 3, 4, 5, 6, 14, 15, 23, 24, 44, 45, 60, 70, 71, 72, 80, 81, 90, 91, 95, 100, 103, 104, 105, 106, 200, 202, 203, 205, 206, 219, 220, 240, 300, 416, 420, 440, 522, 524, 526, 528, 544, 546, 548, A, D, F, and 1500 Series Plows	3	25
Colters as above, complete with Holders and attachments, except for Nos. 200 and 300 Plows	4	00
Colters complete for Nos. 20 and 300 Plows	3	25
Hanging Colters only, steel, for Nos. 16, 17, 18, 19, 25, 26, 26½, 27, 28 and 29	2	75
Colters as above, complete with attachments	4	00
Colter only, steel, for Nos. 10, 20, 73, 74, 75, 123, 216 and 218 Plows	2	75
Colters as above, complete with attachments	3	75
Brush Colter Blade for Nos. 100, 105, 113 and 114	3	75
Brush Colters complete with attachments	4	50
100G Brush Colter Holder or Block for No. 100..		80
105G Brush Colter Holder or Block for No. 105....		80
Colter only, steel, for Nos. 115x, 116, 120SB, 125, 126SB, 126x and 127 Swivel Plows	3	25
Colter with fixtures complete for Nos. 115x, 116, 120, 126x, 126SB and 127 Swivel Plows	4	25
Colter only, long blade N. S. automatic, for Nos. 130x and 140 Plows	3	25
Colter, automatic, new style, with fixtures complete, for Nos. 130x and 140 Swivel Plows	4	25

HANGING COLTERS AND PARTS—Continued.

Colter and fixtures complete for No. 123 Plow	3 00
123H Colter Holder for No. 123 Plow	1 00
Colter and fixtures complete for No. 20 Plow	3 50
1F Colter Shift Plate for Nos. 130x and 140 Plows	1 00
2F Colter Holder for Nos. 130x and 140 Plows ..	1 00
3-F Colter Yoke for Nos. 130x and 140 Plows.....	1 25
77 Colter Shift Plate for Swivel Plows	90
Colter Adjustment Strap for Swivel Plows	65
68 Colter Holder for Nos. 20, 130x and 140 Swivel	1 20
125B Colter Support for Nos. 125 and 127 Plows..	80
126B Colter Support for Nos. 120SB and 126 SB..	1 00
129B Colter Yoke for No. 129	1 25
129A Thimble for No. 129 Yoke.....	20

For attachments for Colters, see Jointers

ROLLING COLTERS AND PARTS

Rolling Colter complete, 12-inch	6 00
Rolling Colter complete, 14-inch	6 50
O-B Yoke for Rolling Colter	1 35
1E Standard for Rolling Colter	1 10
2E Clamp Iron for Rolling Colter, each	40
3E Corrugated Washer for Rolling Colter	20
5B Swivel Post for Rolling Colter	50
6B Swivel Post Collar for Rolling Colter	25
10D Hub for Rolling Colter	45
11D Cones for Rolling Colter, each	25
12D Cone Bearings for Rolling Colter, each	25
C5 Yoke for Rolling Colter	1 35
C6 Gauge Plate for Rolling Colter	70
C7 Washer for Rolling Colter	45
C8 Adjuster with set screws for Colter	50
C9 Cone for Rolling Colter, each	25
C10 Gauge Plate for Rolling Colter, each	1 00
C12 Gauge Washer for Rolling Colter, each.....	50
C13 Yoke for Blade for Rolling Colter, each.....	1 75
C14 Cone Bearing for Rolling Colter, each	25
C15 Hub Plate for Blade for Rolling Colter	60
C-16 Hub Washer for Rolling Colter, each	60
C17 Washer and Set Screw for Rolling Colter	60
Standard, steel, 1-in. diameter, for Rolling Colter	1 10
Standard, steel, 1 1/8-in. diameter, for Rolling Colter	1 35
Beam Plate, steel, for Rolling Colter	45
Bolts for Gauge Plate for Rolling Colter	25
12-inch Blade only, with 10-D Hub for Colter	3 30
14-inch Blade only, with 10D Hub for Colter	3 50
12-inch Blade only, with C15 Hub for Rolling Colter	3 60
14-inch Blade only, with C15 Hub for Rolling Colter	3 90
12-inch Blade only for Rolling Colter	3 00
14-inch Blade only for Rolling Colter	3 30

JOINTER MOLDBOARDS, CHILLED

6 fits Nos. 27, 28, 29, 80, 81, 95, 103, 104, 105, 106, 205, 206, 416, 420, 440, 544, 546, 548, 1544, 1546 and 1548 Plows	50
84 fits Nos. 2, 3, 4, 5, 6, 16, 17, 18, 19, 25, 26, 26 1/2, 43, 44, 45, 60, 70, 71, 72, 90, 91, 100, 144, 202, 203, 219, 220, 240, 522, 524, 526, 528, 1524, 1526 and 1528 Plows	50
91 fits right side all Swivel Plows	40
92 fits left side all Swivel Plows	40
Right fits A, D, and F Plows	75

BEAM SUPPORTS AND GAUGES

1H Beam and Handle Support for 1BC and 2BC	70
BC3D Beam Gauge	70
7 Beam Gauge for Nos. 26 and 26 1/2 Plows	70
29 Beam Gauge for No. 29 Plow	70
62 Beam Gauge for Nos. 62 and 63 Plows	55

BEAM SUPPORTS AND GAUGES—Continued.

99 Beam Gauge for No. 13 Plow	70
82 Beam Support for Nos. 17 and 18 Plows	1 75
85 Beam Support	70
104 Beam Support for Nos. 16 and 19 Plows	1 75
109 Beam Support for Nos. 27 and 28 Plows	1 75
109E Beam and Mold Brace for No. 109 Vineyard	80
Beam Support, steel, for No. 20 Plow	70
144H Beam and Handle Support for No. 144	70
Beam Support, steel, for No. 35 Plow	80

MOLDBOARD LOCK SPRINGS

No. 1



This Spring fits the Nos. 115x, 126x and 300 Cast Beam, 120 and 126 Steel Beam, 129, 130x and 140 Wood Beam Swivel Plows, and takes the place of the Spring like this

No. 2



formerly used on some of the above described Plows, we having discontinued making the latter.
Each

45

No. 3



This Spring fits the Nos. 21, 115 and 130 Swivel Plows and the Old First Patterns 35, 116 and 125 Swivel Plows. Each

40

No. 4



This Spring fits the No. 22 one-horse Swivel Plow and the First Pattern No. 126 Plow with Cast Iron Beam, and the Nos. 121 and 122 two-horse Swivel Plows. Each

40

Coil Spring for Nos. 20, 123, 124 and 127 Plows..

40

When ordering Springs, specify for what Plow.

MOLDBOARD LOCKS AND PARTS

20A Moldboard Lock for Nos. 20 and 127 Plows ..	1 00
35 Moldboard Lock for No. 22 Swivel	1 00
35D Moldboard Lock for No. 35 Plow	1 00
46 Moldboard Lock for Old Pattern No. 126 Plow	1 00
48 Moldboard Lock for Nos. 115x, 120SB, 130x, 140 and 300 Swivel Plows with common length Cast or Steel Moldboards	1 35
48X Moldboard Lock for Nos. 126x Cast Beam and 126 Steel Beam Swivel Plows with common length Cast or Steel Moldboards	1 35
87 Mold Lock for Last Pattern No. 116 Plow	1 00
87A Moldboard Lock for Nos. 115, 125 and 130 Old Pattern and No. 21 Swivel Plows	1 00
121 Moldboard Lock for No. 121 Plow	1 00
122 Moldboard Lock for No. 122 Plow	1 00
123E Mold Lock for Nos. 123 and 124 Plows	95
123L Moldboard Lock Hooks	20
123R Moldboard Lock Hooks	20
129D Mold Lock for No. 129 Plow	1 00
219 Moldboard Lock for Nos. 115x, 120, 130 and 140 Plows with Long Steel Moldboards	1 35
221 Moldboard Lock for Nos. 126 and 126x Plows with Long Steel Moldboards	1 35

Above prices for Moldboard Locks include the Mold Lock Hooks.

4 Moldboard Lock Washer for Nos. 22, 121, 122 and Old No. 126 Swivel Plows	25
--	----

MOLDBOARD LOCKS AND PARTS—Continued.

T Thimble Washers for Nos. 35, 46, 48, 48x, 219 and 221 Moldboard Locks	07
138 or 139 Moldboard Lock Hooks, each	20
129 Moldboard Lock Support for Nos. 21, 35 and 130 Swivel Plows	50
Cup Washer for Nos. 87 and 87A Mold Locks ..	45
Dog with three prongs for Moldboard Lock for Nos. 21 and 116 Swivel Plows	45
20C Washer or Bushing for Nos. 20 and 127 Mold Lock	20
123-I Thimble for Nos. 123 and 124 Locks	07

SADDLES FOR SWIVEL PLOWS

20 Moldboard Saddle for No. 20 and 127 Plows ..	2	25
21 Moldboard Saddle for Nos. 21 and 22 Plows	2	00
35A Moldboard Saddle for No. 35 Plow	2	60
39 Moldboard Saddle for Nos. 126x and 126SB Swivel Plows	2	60
98 Moldboard Frame or Saddle for No. 116 Swivel Plow with Steel Mold	2	15
121 or 122 Moldboard Saddle for Nos. 121, 122 and 125 Swivel Plows	2	00
123D Saddle for Nos. 123 and 124 Plows	1	75
132 Moldboard Saddle for Nos. 115x, 120, 130x, 140 and 300 Swivel Plows	2	25

Y BRACES FOR SWIVEL MOLDS

13Y Moldboard Y Brace, fits Nos. 130x, 140 and 120 Plows with Long Steel Moldboards	1	50
20Y Moldboard Y Brace, fits Nos. 20 and 127 Plows ..	85	
22 Moldboard Y Brace, fits No. 22 Swivel Plow ..	1	10
35B Moldboard Y Brace, fits No. 35 Plow	1	65
43 Mold Y Brace, fits Nos. 126x and 126SB Swivel Plow with Common Length Cast or Steel Moldboards	1	50
78 Moldboard Y Brace, fits No. 116 Swivel Plow ..	1	50
122 Moldboard Y Brace, fits No. 122 Swivel Plow ..	1	10
123Y Moldboard Y Brace, fits Nos. 123 and 124..	1	10
123E Y Brace for No. 129 Plow	85	
131 Mold Y Brace, fits Nos. 115x, 120, 130x, 140 and 300 Plows with Common Length Cast or Steel Moldboards	1	50
147 Moldboard Y Brace, fits Nos. 21, 121 and 125 Swivel Plows	1	10
220 Moldboard Y Brace, fits Nos. 126x Cast Beam and No. 126 Steel Beam Plows with Long Steel Moldboards	1	50

HOOK BRACES FOR SWIVEL MOLD

Hook Brace for two-horse Swivel Plow	55
Hook Brace for one-horse Swivel Plow	45

WHEELS, WHEEL STANDARDS AND PARTS

(4E) Wheel 7½-inch diameter, taper hole 1 ⁵ / ₁₆ x1 ³ / ₁₆ inches, fits A, D, F and Nos. 23 and 24 Plows	80
(4F) Wheel, 7½-inch diameter, 1-inch straight hole, fits No. 10 Series, Nos. 7 Scotch, 16WB, 17, 18, 19, 20, 21, 22, 26, 26½, 27, 28, 29, 35, 43, 44, 45, 62, 63, 70, 71, 72, 73, 74, 75, 80, 81, 90, 91, 100, 103, 104, 105, 106, 113, 114, 130, 140, 144, 210, 212, 214, 215, 216, 218, 219, 220, 240, 416, 420, 440, 520, 522, 524, 526, 528, 544, 546, 548, Sub-soil and 1500 Series Plows	80
(4) Wheel, 6-inch diameter, 1-inch straight hole, fits Nos. 2, 3, and 4 Scotch, and Nos. 13, 16 Cast Beam, 20, 25, 35, 62, 63, 85, 86, 115, 115x, 116, 120SB, 121, 122, 125, 126, 126x, 126SB, 127, 200 and 300 Plows	75

WHEELS, WHEEL STANDARDS, PARTS—Cont.

(161) Wheel, 7½-inch diameter, taper hole 1⅜x 1-inch, fits 60SB, No. 10 O. S. (V shape) and No. 5 Wheel Standard for Nos. 16 and 25 Cast Beam Plows	80
5 Standard and Wheel (fits on side of Beam), Nos. 16 and 25 Cast Beam Plows	2 25
10 Standard and Wheel, V shape, complete, for old style No. 10	2 50
26A Rigid Standard and Wheel, complete, for 16 17, 18, 19, 26, 26½, 27, 28 and Sub-soil Plows	2 50
144 Wheel and Standard for 144WB	2 75
154 Standard and Wheel, automatic, complete, for Nos. 16, 17, 18, 19, 26, 26½, 27 and 28.....	2 75
155 Standard and Wheel, complete, for Nos. 10 and 63	2 20
Wheel and Standard (with sides Nos. 114 and 115), complete, for Nos. 16 and 25 Cast Beam, 115x, 116 and 126x Plows	2 60
Wheel and Standard, complete, (with sides Nos. 134 and 135) for Nos. 130 and 140	2 60
Wheel and Steel Standard, complete, for Nos. 2, 3, 4, 7, 8, 20, 35, 43, 44, 45, 70, 71, 72, 73, 74, 75, 80, 81, 85, 86, 90, 100, 103, 104, 105, 106, 113, 114, 120, 121, 122, 125, 126, 127, 200, 210, 212, 214, 216, 218, 219, 220, 300, 416, 420, 520, 522, 524, 526, 528, 544, 546, 548 and 1500 Series	2 00
Wheel and Wheel Standard for Nos. 13, 62, 63....	1 90
"Patented 1876" Wheel and Stand, complete, fits "F," "D" and "A"	2 75
Wheel and Stand for No. 35 Plow	2 20
Wheel and Stand for No. 20 Plow	2 20
Gauge Shoe and Attachment for No. 64	3 00
Gauge Shoe and Attachment, complete, for Nos. 65, 66, 67, 68 and 69.....	4 25
Wheel and Standard, complete, for Nos. 65, 66, 67, 68 and 69	4 25
6-inch Wheel for Nos. 65, 66, 67 and 69	1 25
Wheel Standard, steel, for Nos. 65, 66, 67, 68 and 69	3 00
Gauge Shoe Casting Supports, 2 pieces, for No. 64	2 00
Gauge Shoe Casting Supports, steel, for Nos. 65, 66, 67, 68 and 69	3 00
67D Shoe Casting for Nos. 65, 66, 67, 68 and 69	1 25
100V Shoe Casting for Nos. 64 and 100 Plows ..	1 00
5 Wheel Standard with solid arbor, fits No. 25 and No. 16 Cast Beam Plows	1 00
10 Wheel Standard only, V shaped, fits No. 10	1 40
23 or 24 Iron Beam Wheel Standard with solid arbor, fits Nos. 23 and 24 Plows	1 00
26A Rigid Wheel Standard only	1 00
134, left side, fits Nos. 130, 140, 21 and 22	75
135, right side, fits Nos. 130, 140, 21 and 22	75
114, left side, fits Nos. 16 and 25 Cast Beam and 115, 116, 115x and 126x Swivel Plows	75
115, right side, fits Nos. 16 and 25 Cast Beam and 115, 116, 115x and 126x Swivel Plows	75
144J Wheel Standard for 144WB	1 50
154 Wheel Stand only, fits Nos. 16, 17, 18, 19, 26, 26½, 27 and 28 Wood and Malleable Beam Plows	1 10
155 Wheel Standard only, fits Nos. 10 and 63 Plows	75
240J Wheel Stand for No. 240	1 50
440J Wheel Stand for No. 440	1 50
"Patented 1876" Wheel Standard only, fits A, D and F Plows	1 15

WHEELS, WHEEL STANDARDS, PARTS—Cont.

Steel Wheel Standard only, for 2, 3, 4, 7, 8, 13, 20, 43, 44, 45, 62, 70, 71, 72, 80, 81, 90, 91, 100, 103, 104, 105, 106, 120SB, 125, 127, 126SB, 522, 524, 526, 528, 544, 546, 548, 85, 86, 121, 122, 210, 212, 214, 215, 216, 218, 219, 220, 240, 416, 420, 440, 73, 74, 75, 200, 300 and 1500 Series	80
Adj. Arbor with Washer, complete, for "A," "D" and "F"	50
Arbor Washer, right or left, for Adj. Arbor	10
Straight Arbor or Axle, fits 4 and 4F Wheels	15
C-3 Wheel Crotches, each	1 00
X, O or V, H, A, 26B and 70H Washer, each	10
Arbor or Axle, complete, with two Steel Washers and Bolt, fits 115x, 126x, 116, 130, 140 and 16 and 25CB Plows, and 16, 17, 18, 19, 26, 26½, 27 and 28 Wood and Malleable Beam Plows ..	25
Arbor or Axle, complete, with two 70H Washers and Bolt, fits 2 and 3 Scotch, 13, 20, 43, 44, 45, 62, 65, 72, 73, 74, 75, 80, 81, 85, 90, 91, 100, 105, 106, 120, 125, 126SB, 127, 216, 218, 219, 220, 240, 300, 416, 420, 440 and 1500 Series ..	30
Arbor or Axle, complete, with one 70H Washer and one 26B Washer and Bolt, fits 17, 18, 19, 26, 26½, 27 and 28 for 26A Wheel and Standard	30
123G Wheel Plate for No. 123 Plow	45
124F Clamp for No. 124 Plow	40
126F Wheel Clamp for 35, 120SB, 126SB and 127	55
136 Wheel Stand Plate for W. B. Swivel	35
62F Wheel Plate for Nos. 62 and 13	40
218H Gauge or Wheel Stand 210, 212, 216, 218..	45
Steel Plate for No. 218H Gauge	25
85D Wheel Plate for 85 Plow	40
605E Clamp for Wheel Stand	20
605G Clamp for Wheel Stand	50

When ordering Wheel Stands, always give the number or mark and specify whether with or without arbor or crotch and arbor.

CLEVISES AND PARTS

Clevis Steel for Nos. 68 and 69 Plows	2 40
Clevis Steel for Nos. 64 and 65 Plows	80
Clevis Steel for Nos. 66 and 67 Plows	1 35
B Clevis for 85 Middlebreaker	60
C Clevis Front, fits Nos. 16, 17, 18, 19, 26, 26½, 27, 28, 29 and Sub-soil Wood Beam Plows	65
T Small Front Clevis and Pin, common	30
2 Small Front Clevis and Pin, twisted	35
29 Clevis for "A" and "D"	1 00
30 Clevis for "F" Plows	1 00
30N Clevis for Gang Plow	60
31 Three-horse Clevis for "F" Plows	1 00
32 Clevis for No. 62 Plow	70
33 Draw Hook for one-horse Plow, each	50
35E Clevis for No. 35 Plow	1 00
50H Clevis for Reversible Sulky	1 00
66 Clevis Front for Nos. 17, 18, 27, 28, Sulky	70
70-I Clevis Front, fits Nos. 219, 220, 4 Scotch	65
70L Clevis Front, fits Nos. 43, 44, 45, 70, 71, 80, 81, 90, 91, 95, 100, 103, 104, 105 and 106	65
70C Clevis Front, fits No. 72 and Nos. 2, 3, Scotch	65
72 Draw Hook for Swivel Plows, each	60
73A Clevis Front for No. 73 Plows	65
73B Clevis Heavy, with 3 holes for No. 73	65
83E Clevis Holder, fits Nos. 82 and 83 Plows	60
84E Clevis Holder, fits No. 84 Plows	60
105 Draw Hook for one-horse Plow, each.....	50
06 Clevis Front, with Extension, fits No. 10 Series and Nos. 74, 75, 13 and 63 Plows	60

CLEVISES AND PARTS—Continued.

106 Clevis Front, fits No. 10 Series and Nos. 74, 75, 13 and 63 Plows	55
109C Beam End Clevis	2 20
109J Hanging Clevis	85
118 Clevis Front for Adj. Clevis Swivel Plows.....	80
120 Clevis Front, fits all Malleable Beam, No. 16, and 25 Cast Beam, 60, 82, 83, 84, 86, 115, 116, 120, 125, 126 and 127 Plows	65
124K Clevis for No. 124 Swivel Plow	65
125A Clevis Holder for 125 and 127 Plows	60
125D Adj. Clevis Support for 125 and 127 Plows	40
126A Clevis Holder for Steel Beam Swivel	60
126G Filler for Long Steel Beam, Swivel	1 40
129C Plate for Shift on 129	35
137 Clevis Front for Nos. 20, 121, 122, 130 and 140 Swivel Plows when rigged with Plain Clevis	70
144L Beam End Clevis	1 00
144F Beam End Clevis, Oregon	1 40
151 Clevis for Nos. 21, 22, 123 Swivel Plows	60
163 Clevis Front, three-horse, for No. 60 Plow ..	60
200L Clevis for No. 200 Plow	60
208F Clevis for Nos. 208 and 209 Plows	70
218F Clevis Front, fits Nos. 82, 83, 84, 86, 210, 212, 214, 216, 218 and 520 Plows	70
526L Clevis Front for Nos. 526, 528, 546, 548, 1526, 1528, 1546, 1548, 7 and 8 Scotch	65
546E Clevis for 546, 548, 1546, 1548 Cast Beam ..	1 00
605L Clevis Front for 522, 524, 544 and 1544 Plows ..	65
Clevis Brace Strap, steel, for Nos. 43, 44, 45, 70, 71, 80, 81, 90, 91, 103, 104 and 106 Plows	35
Draw Hook for Nos. 21 and 22 Swivel Plows	45
Clevis Shackle and Pin for Middlebreaker	45
Clevis Pin Wrench, large, for Middlebreaker	30
Clevis Pin Wrench, small, for Middlebreaker	30
2900 Clevis only, large, for Nos. 1BC, 2BC Plows ..	1 00
E Clevis, Front or Cross, for Nos. 1BC, 2BC Plows ..	60
2821 Clevis Shackle and Pin, twisted, for 1BC, 2BC ..	45
1 Clevis Pin Wrench, small, for Nos. 1BC and 2BC ..	25
2 Clevis Pin Wrench, large, for Nos. 1BC, 2BC ..	30
Clevis complete, all parts, for Nos. 1BC and 2BC ..	2 10
Adjustable Clevis complete with all fixtures for Swivel Plows, each	2 10
117 Adjustable Clevis Shifter for Swivel Plows ..	55
Thimble for 117 Shifter	08
Adjustable Clevis Rod for Swivel Plows	50
Adjustable Clevis Lever for Swivel Plows	50
Adjustable Clevis Lever Spring for Swivel Plows ..	20
X4 Washer for Adjustable Clevis Lever Spring	15
X12 Adjustable Clevis Lever Gauge, fits Nos. 121 and 129 Handles and No. 130 Narrow Handles ..	80
123 Adj. Clevis Lever Gauge for Swivel Plows	80
124H Clevis Holder	45
126D Adj. Clevis Support for Steel Bam Swivel..	40
150 Adj. Clevis Washer for Nos. 130 and 140.....	30
20B Adj. Clevis Washer for No. 20 Plow	30
Clevis Gauge for Wood Beam, each.....	30
Y Clevis Ring	30
No. 3 Clevis Side, right } New style, fits Nos. 2	
No. 3 Clevis Side, left } and 3 Scotch Plows, ea	60
A Clevis Side, left } Fits "A," "D" and "F,"	
D Clevis Side, right } each	60
C1 Clevis Side, left } Fits BC3, 16, 17, 18, 19,	
C2 Clevis Side, right } 26, 26½, 27, 28, 29 and	
	Sub-soil W.B. Plows, ea.
	55
70E Clevis Side, fits 70, 71, 72, 80, 81, 90, 91, each	55
74E Clevis Side, fits 73, 74 and 75 Plows, each.....	50
86D Clevis Side, right } Fits No. 86 Middle	
86E Clevis Side, left } breaker, each	60

CLEVISES AND PARTS—Continued.

100R Clevis Side, right	} Fits Nos. 43, 44, 45, 100,	103, 104, 105 and 106 Plows, old style, each ..	60
100L Clevis Side, left			
107 Clevis Side, left	} Fits Nos. 13 and 213	Plows, each ..	50
108 Clevis Side, right			
107A Clevis Side, right	} Fits No. 10 Series and	No. 63 Plows, each ..	50
108A Clevis Side, left			
121 Clevis Side, right	} Fits 16 or 25 Cast Beam	and 16, 17, 18, 19, 26 26½, 27, 28 Malleable Beam Plows, each ..	60
122 Clevis Side, left			
150D Clevis Side, right	} Fits Nos. 3, 43, 44, 45,	95, 100, 103, 104, 106, 219, 220, 240, 416, 420, 440, and 7 and 8 Scotch, each ..	60
150E Clevis Side, left			
218D Clevis Side, right, fits Nos. 82, 83, 84, 86, 210, 212, 214, 215, 216 and 218 Plows, each....			50
218E Clevis Side, left, fits Nos. 82, 83, 84, 86, 210, 212, 214, 215, 216 and 218 Plows, each ..			50
605A Clevis Side, fits Nos. 240, 520, 522, 524, 526, 528, 544, 546, 548, 1524, 1526, 1528, 1544, 1546, 1548, 7 and 8 Scotch Plows, each ..			55

HANDLE SUPPORTS, RESTS, SLIDES, BRACES.

1D Handle Brace, long, for Nos. 1BC and 2BC	1	00
1E Handle Brace, short, for Nos. 1BC and 2BC		70
1F Hinge Piece for Handles for Nos. 1BC and 2BC		50
1G Hinge for Handles for Nos. 1BC and 2BC		50
BC3E Lower End Handle Support		45
1H Handle Support for Nos. 1BC and 2BC		55
4 Handle Brace for Nos. 26 or 26½		35
10 Handle Slide for No. 10 Series		45
10C Handle Support for No. 10 Series		65
A, D, F Handle Adjustment, fits A, D and F		35
26 Handle Support, fits Nos. 115x and 126x Cast Beam and Nos. 120 and 126 Steel Beam Plows ..		60
44H Handle Support and Spreader for 43 and 44..	1	00
45H Handle Support and Spreader for 45	1	00
43J Ear or Brace from Spreader to Mold on No. 43		35
44J Ear or Brace, Spreader to Mold, on Nos. 44, 45		35
52 Handle and Beam Support for No. 140 Plow ..		60
53 Handle Support for No. 140 Plow		65
67B Handle Support for 67 Plows	1	90
68D Lt. Handle Support for Nos. 68 and 69		30
70A Handle Gauge for Nos. 70, 71, 72, 90, 91 Plows		40
70D H'dle Sup't, lower, for Nos. 70, 71, 72, 90, 91		35
74A Handle Slide for Nos. 73, 74 and 75 Plows		50
79 Handle Support, lower, for Nos. 17 and 18		40
80A Handle Gauge for Nos. 80 and 81 Plows		40
80D Handle Support, lower, for Nos. 80 and 81 ..		35
81 Handle Support for Nos. 17 and 18 Plows		70
88 Handle Support for No. 116 Swivel Plow		60
100D Handle Support, right, for No. 100		85
100E Handle Support, left, for No. 100		65
100 Handle Support for No. 13 Plow		65
100S Handle Grip		40
100T Handle Grip		40
103 Handle Support for Nos. 16, 19 and 25		80
104H Handle Support and Spreader for 103 and 104		95
106H Handle Support and Spreader for No. 106 .		95
103J Ear or Brace from Spreader to Mold on 103		35
104J Ear from Spreader to Mold on Nos. 104, 106		35
105E Handle Support, right, for No. 105		65
105D Handle Support, left, for No. 105		90
109F Handle Bracket		55
109G Handle Support	1	65

HANDLE SUPPORTS, RESTS, SLIDES, BRACES—
Continued.

109H Handle Grip	30
109-I Handle Grip	30
110 Handle Support for Nos. 27 and 28 Plows	80
123 Handle and Beam Support for No. 123	50
124G Handle Support for No. 124 Swivel Plow	50
125C Handle Support for No. 125	60
128 Handle Support for No. 16 Cast Beam Plow.. 1	10
133 Handle Support, fits Nos. 130 and 130x	60
142 Handle Support, fits No. 25 Cast Beam Plow.. 1	10
144 Handle Support, fits old No. 115 Swivel Plow	60
144E Landside Handle Bracket	1 40
148 Handle Support, fits Nos. 21, 22, 121, 122 and 130x Special Swivel Plows	60
240C Moldboard Handle Bracket	1 40
240E Landside Handle Bracket	1 60
240F Landside Spreader Brace	80
440C Moldboard Handle Bracket	1 40
524G Lower Handle Support for Nos. 524, 1524..	70
524H Upper Handle Support for Nos. 524, 1524.. 1	00
524J Ear for Nos. 524 and 1524	35
526H Handle Sup't, upper, for 526, 528, 1526, 1528 1	00
526G Handle Sup't, lower, for 526, 528, 1526, 1528	80
526J Ear, Spreader to mold, for 526, 528, 1526, 1528	35
Handle Slide, steel, for 526-28-46-48, 1526-28-46-48	45
Handle Bracket and Spreader, Steel, for 526, 528	55
544G Lower Handle Support for Nos. 544 and 1544	70
544H Upper Handle Support for Nos. 544, 1544.. 1	00
544J Ear for Nos. 544 and 1544	35
546G Lower Handle Sup't for 546, 548, 1546, 1548	80
546H Upper Handle Sup't for 546, 548, 1546, 1548 1	00
546J Ear for Nos. 546, 548, 1546 and 1548	35
A, D, F Handle Support, fits A, D and F Plows....	70
Handle Support, steel, for Nos. 20 and 127 Plows	50
Handle Support, steel, between Moldboard and Handles for No. 68 Plow	1 75
Handle Support, upper right, for Nos. 43, 44, 45	45
Handle Spreader, steel, for Nos. 2, 3, 4, 7, 8, 43, 44, 45, 95, 103, 104 and 106	45
Handle Support, steel, lower, for Nos. 43, 44, 45....	45
Handle Support, steel, lower, for Nos. 103, 104, 106	45
Handle Support, steel, for No. 300 Plow.....	45
Handle Support, lower, steel, for No. 130 Plow....	45
Handle Support, steel, for No. 127	45
Handle Braces for Nos. 68 and 69 Plows, pair	2 10
Handle Braces for Nos. 43, 44, 45, 100, 103, 104, 105, 106, 219, 220, 240, 440 and 2, 3 Scotch, pair 1	00
Handle Braces for Nos. 82, 83, 84 and 86, each	55
Handle Support, steel, for 2 and 3 Scotch	45
Handle Support, steel, for 4, 7 and 8 Scotch	45
Handle Support, steel, for No. 69 Plow	1 40
Handle Strap Iron for No. 65, each	65
Handle Braces to Mold Middlebreaker, each	65
Handle and Beam Support, 210-218 Series, each....	55
Handle and Mold Support, 210-218 Series, each ..	55
Handle and Beam Braces, steel, for No. 213, set	85
Handle and Beam Support, steel, for No. 35, set..	75
Handle Braces, Handle to Mold on 219, 220, 420..	80
Handle Braces, Handle to Standard on Nos. 219, 220, 240, 420 and 440 Plows	70
Handle and Beam Braces for Nos. 210, 212, 214, 215, 216 and 218, set	70
Handle Support, right or left, for Nos. 208 or 209	50
Handle and Beam Braces for Nos. 208 and 209.....	55

SHIN PIECES.

68F Shin Piece for Contractor's Plow	2 00
69F Shin Piece for Contractor's Plow	2 00
86F fits No. 86 Middlebreaker	65
25 or 26 fits Nos. 25, 26, 26½ and 60 Plows, each	75

SHIN PIECES—Continued

43 or 44F fits Nos. 43 and 44 Plows, each	75
70 or 71 fits Nos. 70 and 71 Plows, each	75
74F fits Nos. 73, 74 and 75 Plows, each.....	70
90 or 91 fits Nos. 90 and 91 Plows, each	75
80F fits Nos. 80 and 81 Plows, each	75
103 or 104F fits Nos. 103 and 104 Plows, each	75
520F or 522F fits Nos. 520 and 522 Plows, each....	75
524F fits Nos. 524 and 1524 Plows, each	75
526F or 528F fits 526, 528, 1526, 1528 Plows, each	80
544F fits Nos. 544 and 1544 Plows, each	75
546F or 548F fits 546, 548, 1546, 1548 Plows, each	80
Shin Pieces for all other Plows fit the one Plow only and are marked as the Plow is numbered....	75

SPREADERS FOR MOLDBOARDS.

Moldboard Spreader, steel Hook, each	40
Moldboard Spreader, steel, upper, each	40
Moldboard Spreader, steel, lower	30
Moldboard Spreader, steel, lower, for 95BCS	50
Moldboard Spreader, steel, for 100BCS	45
Spreader, steel, for No. 64 Plow	80
5 Spreader, lower, for Nos. 26 or 26½	30
8 Spreader, lower, for No. 29	30
65B Spreader for No. 65 Plow	1 00
Steel Spreader for No. 66 Plow	1 00
70B Spreader for Nos. 70, 71, 90 and 91 Plows....	80
72B Spreader for No. 72 Plow	80
74B Spreader for Nos. 73, 74 and 75 Plows	65
80B Spreader for Nos. 80 and 81	80
100-I Mold Spreader for No. 100	50
105-I Mold Sprealer for No. 105	50
144G Spreader Brace	80
240G Spreader Brace	80
440G Spreader Brace	80
Spreader, Handle to Beam, upper, for No. 68	80
Spreader, Handles to Standard, lower, for No. 68..	80
Spreader, Handles to Beam, for No. 69	70
Spreader Handles for No. 3BC	45

WASHERS FOR STEEL MOLD AND POINTS.

Washers for Steel Points, marked 1J, 2F, 16 or 19K, 20K, 21, or 22K, 72K, 73K, 90K, 126K, 130K, 203K, 206K, TP32K, each	45
Washers for Steel Molds, marked 3P, 4P, 19D, 19E, 20D, 25C, 25D, 26D, 26E, 45A, 45B, 70K, 71K, 72K, 80K, 81K, 90K, 103A, 103B, 104A, 104B, 106A, 106B, 202A, 202B, 205A, 205B, 526X, each	45

**PARTS FOR SINGLE POWER LIFT AND DOUBLE
REVERSIBLE POWER LIFT SULKY PLOWS.**

400 Arch for Reversible Sulkies	8 75
440 Arch for Single Sulkies	8 75
50BA Bracket or Arm, right, for one piece bail and axle, each	1 30
50BB Bracket or Arm, left, for one piece bail and axle, each	1 30
50BC Box, iron, for hub in flange wheel	1 40
50BD Cap or Washer for flange wheel with iron hub	45
Box, iron, complete, for flange wheel	1 70
50BX Lever only, right, takes place of 50B	4 75
50BX Lever complete	7 00
50C Plunger, right, lower half	65
50D Circle Plate, right	40
50E Circle Ratchet, right	2 75
50F Bracket for beam bail rod, each	2 00
50G Handle, upper, for right lever	35
50-I Ratchet for right wheel	2 75
50J Lever only, left	4 75

WIARD PLOW CO. RETAIL PRICE LIST NO. 52

Parts for Single Power Lift and Double Reversible Power Lift Sulky Plows—Continued.

50J Lever complete	7 00
50K Plunger, left, lower half, for Power-Lift Sulky	65
50L Circle Plate, left	40
50M Circle Ratchet, left	2 75
50-O Washer for arch rod	15
50P Handle, upper, for left lever	35
50Q Foot Rest	1 70
50R Handle, lower, for right or left levers	35
50S Ratchet for left wheel	2 75
50T Washer for wheel hub	45
50U or 150U Beam Plate, upper half, each	1 70
50V or 150V Beam Plate, lower half, each	1 00
50W Plunger for upper half of lever, right or left	50
50X Washer for beam plate bolts	30
50Y or 150Y Clamp Washer for beam plate rod ..	30
50AH Brace Arm	2 10
50AJ Plunger, right, for Single Sulky	50
50AK Plunger, left, for Single Sulky	50
50AI Lever only, right	4 75
50AG Lever only, left	4 75
50AL Washer for pole	35
50AD Beam Backing for No. 100 Plow	55
50AC Beam Backing for No. 105 Plow	55
Pole Shifter complete for Reversible Sulky	3 45
50AN Shifter casting only	2 25
50AO Washer for Pole Shifter	15
50AV Washers	10
50AW Washers	10
50AZ Ratchet for Single Sulky	1 90
50AP Worm or Half Circle	70
50AT Ratchet for right steel wheel	1 40
50AU Ratchet for left steel wheel	1 40
50AQ Guide for worm or half circle	35
Coil Spring for pole shifter	35
Steel Lever for pole shifter	35
Roller Clevis and Pin	80
50AF Swivel Hook only	50
50AE Clevis less hook	1 00
50AE Clevis with swivel hook	1 45
50AX Bracket for seat spring	1 25
50AY Dog to adjust or tilt the seat	60
50AR Lever Handles, right	50
50AS Lever Handles, left	50
Steel Handle for 50AR or AS lever	50
Upright Strap, steel, for power trip	50
Foot Piece, steel, for power trip	35
Pin for center arch bearing	45
Hub Boxes, wood, each for 50 or 55 Sulky	80
Tool Box	60
Coil Plunger Spring	35
Set Screws with set nuts	15
Set Screws	10
Seat	1 70
Seat Spring	2 10
Special Set two-horse Whiffletrees with long evener ..	5 00
Special Long Neckyoke, two-horse	1 40
Set three-horse Whiffletrees	6 90
Long Evener for two or three-horse equipment	1 90
Singletrees with hooks, N. S.	1 10
Singletree Hooks, N. S., with ferrule only, steel	50
Short Evener for three-horse equipment	1 10
Neckyoke for three-horse rig	1 40
Long Pole for Nos. 50, 55, 500 and 550 Sulkies.....	5 00
Short Pole	1 70
Three-horse Offset for pole	1 70
Block for three-horse offset	45
Wrench	35
Monkey Wrench	1 20
Draw Iron Clevis Connection	2 10

**Parts for Single Power Lift and Double Reversible
Power Lift Sulky Plows—Continued.**

Foot Trip Power-Lift Attachment complete for Single Sulky	2 75
Foot Trip Power-Lift Attachment complete for Double Sulky	5 50
Bail Rod for beam plate, right or left, for Nos. 50 and 55 Sulkies	1 90
Bearings for bracket and lever for Nos. 50 and 55 Sulkies, each	1 00
Axles for Nos. 50 and 55 Sulkies, each	1 65
Bail and Axle in one piece for Nos. 400, 440, 500 and 550 Sulkies, right, each	3 50
Bail and Axle in one piece for Nos. 400, 440, 500 and 550 Sulkies, left, each	3 50
Wheel, all steel, with Ratchet No. 50AT and Iron Hub Box, for right side, Nos. 50, 55, 400, 500 and 550 Sulkies	10 50
Wheel, all steel, with Ratchet No. 50AU and Iron Hub Box, for left side, Nos. 50, 55, 400, 440, 500 and 550 Sulkies	10 50
Wheel, all steel, without Ratchet, with Iron Hub Box, for Nos. 55 and 440 Sulkies	9 00
Staples or Clip Bolts for hangers and bail on Nos. 400, 440, 500 and 550 Sulkies, each	45
30P Washer for steel wheel	30
N69 Cap for right or left wheel	55
N70 Cap for left steel wheel	55
X-III-L Hub Box, iron, for right steel wheel	1 55
X-III-R Hub Box, iron, for left wheel	1 55
New Construction, complete for Reversible Sulky..	10 50
SB591 Hub Box for steel wheel	1 55

PARTS FOR NOS. 400 AND 440 SULKIES

30E Plunger for lever	30
50BE Clevis Sides, each	65
50BF Bail for clevis	45
50BG Dog for left lever	1 50
50BH Frame for lower end of left lever	2 50
50BI Clamp for left lever to circle	90
50BJ Strap for lever, right or left	50
50BK Dog for right lever	1 50
50BL Frame for lower end of right lever.....	2 50
50BM Clamp for right lever to circle	90
50BN Pole Casting, rear	90
50BO Clamp for pole and frame	90
50BP Bracket for pole shift lever	60
50BR Ratchet for shift lever	75
50BS Plunger Holder for shift lever	60
50BT Thimble Washer for rear end pole	30
50BU Arbor for pole shifter	15
50BW Swivel Clevis	1 00
50BV Washer for clevis bar	30
50BY Clevis for evener	35
50BZ Clevis for evener	30
50CA Washer for foot trip	20
Steel Clevis to connect short eveners, pair	50
Pole in one piece for Nos. 400 and 440 Sulkies....	5 00
Lever only for No. 400 Sulky, steel	2 45
Plunger only for No. 400 Sulky, steel	60
Coil Spring for No. 400 Sulky lever	35
Lever complete for No. 400 Sulky, right or left....	7 60
Lever for pole shift only, steel	1 00
Connecting Rod from pole shift lever to angle, steel	45
Angle Fulcrum for pole shifter connection	50
Shifter Connection Strap for pole, steel	70
Main Frame only, steel	4 15
Brace from arch to front of main frame	1 70
Upper Cross Brace for main frame, steel	1 40
Lower Cross Brace for main frame, steel	1 65
Right Support for cross brace of main frame, steel	70

PARTS for Nos. 400 and 440 SULKIES—Continued

Center Support for cross brace of main frame, steel	70
Lever for hand latch, steel, right or left, each	50
Weed or Grass Hooks complete with attachments for Reversible Sulky, per set	1 75
For prices of Extras for Sulky Plow, see Plow List.	

PARTS FOR TWO-FURROW WALKING GANG PLOWS NOS. 202, 203, 205 AND 206.

30A Ratchet for right hand Plow	1 40
30R Ratchet for left hand Plow	1 40
30C Ratchet used on ALL right hand Gangs where spring is UNDER the frame	1 40
30CX Ratchet used on ALL right hand Gangs where the spring is OVER the frame	1 40
30Q Ratchet used on ALL left hand Gangs where spring is UNDER the frame	1 40
30QX Ratchet used on ALL left hand Gangs where spring is OVER the frame	1 40
30D Lever Castings	1 00
30E Plunger for lever	30
30F Holder for lift spring rod	35
30G Bracket for rear axle	50
30H Bracket for front axle	50
30-I Collar for axle and hub	45
30K Arm for connecting rod	1 00
30L Collar, Set Screw and Set Nut for axle	50
30P Washer for hub, inside	30
30S Filler for Jointer or colter, right hand	50
30T Filler for jointer or colter, left hand	50
30U Spring Holder and Bracket for front axle	55
30V Filling for steel draw head	50
30W Clevis Holder (2 pieces), malleable	75
C121 Latch	35
100S Handle Grip	40
100T Handle Grip	40
Straight Colter only, each	3 25
Jointer or Colter Band complete, each	1 00
Jointer with Band and Cap complete	4 75
Colter with Band and Cap complete	4 25
Handles, steel, complete, pair	3 10
N62 Cap for wheel hub	55
X76L Box for wheel hub	1 20
Wheels only	4 10
Wheels complete with hub and box and cap	6 90
Handle Sides, right and left	85
Handle Brace	45
Frame, straight piece	5 50
Frame, angled piece	6 90
Frame Brace, angled	3 50
Axle Arms, front or rear, each	4 10
Connecting Rod, lever to axle	75
Clevis Holder Brace, O. S.	55
Spring Coil	95
Spring Hook	45
Levers only, short	70
Levers only, long	85
Clevis Holder, steel, N. S. complete (takes place of No. 30M)	2 75

For Prices of Wearing Parts See Plow List

BOLTS AND CLEVIS PINS.

Clevis Pins, $\frac{7}{16}$ or $\frac{1}{2}$ ", 4 inches and under	15
" " $\frac{7}{16}$ or $\frac{1}{2}$ ", over 4 inches	20
" " $\frac{5}{8}$ and $\frac{3}{4}$, all lengths	25
Wheel Standard Bolts W/ Lever Nut	20
Lever Nuts, only, each	10
Moldboard Standard Bolts, front, each	25
Moldboard Standard Bolts, rear, each	15

BOLTS and CLEVIS PINS—Continued

Plow Bolts, $\frac{3}{8}$ to $1\frac{3}{4}$ long	04
" " $\frac{3}{8}$ over $1\frac{3}{4}$	05
" " $\frac{7}{16}$ to $1\frac{1}{2}$ long	04
" " $\frac{7}{16}$ over $1\frac{1}{2}$ long	06
" " $\frac{1}{2}$ to $1\frac{1}{2}$ long	06
" " $\frac{1}{2}$ over $1\frac{1}{2}$ long	07
" " $\frac{9}{16}$ and $\frac{5}{8}$	12
Carriage and Machine Bolts, $\frac{1}{4}$ and $\frac{5}{16}$ to 3" long	03
" " " " $\frac{1}{4}$ and $\frac{5}{16}$ over 3"	04
" " " " $\frac{3}{8}$ and $\frac{7}{16}$ to 3"	04
" " " " $\frac{3}{8}$ and $\frac{7}{16}$ over 3"	05
" " " " $\frac{1}{2}$ to 3" long.....	06
" " " " $\frac{1}{2}$ over 3 inches.....	07
" " " " $\frac{5}{8}$, all lengths	12

List of Sizes of Bolts sent on application.

PARTS FOR NO. 245 TWO AND THREE-FURROW GANG PLOWS.

50 B. S. Plunger Holder for Shift Lever.....	60
245 Top Casting for Front Wheel	1 15
245A Front Clamp for Clevis.....	60
C Clevis	65
T Clevis and Pin and Ring	60
245B Wheels, each	4 15
245C Wheels, each	85
Wheel and Standard, rear	2 50
245D Plate for Wheel Standard, complete.....	85
245D Plate for Wheel Standard, only	60
245E Ratchet for Lift Lever	1 15
245F Plate between Handle and Beam	50
245G Washers, each	30
245H Washers, each	30
245J Washers, for Ratchet	30
245K Spool for Front Wheel ($\frac{3}{4}$ -inch hole).....	50
245S N. S. Spool for Front Wheel (1-inch hole)....	50
245L Washer for Front Truck ($\frac{3}{4}$ -inch hole).....	35
245R N. S. Washer for Front Truck (1-inch hole)	45
245M Arbor for Front Wheel ($\frac{3}{4}$ -inch hole).....	45
N. S. Gas Pipe Arbor for Front Wheel (1-in. hole)	50
245N Offset Arm for Right Wheel.....	1 15
245P N.S.Offset Arm for Right Wheel (1-in. hole)	1 50
245-O Ratchet for Right Lever	85
245X Spreader Block for Reverse Hitch.....	40
Arbor Bolt for Right Wheel ($\frac{3}{4}$ -inch diameter)....	50
N. S. Arbor Bolt for Right Wheel (1-inch).....	60
Steel Lever, right, with 50 B. S.	1 50
Arbor for Offset Arm (gas pipe) ($\frac{3}{4}$ -inch hole)....	45
N. S. Arbor for Offset Arm (1-inch hole).....	60
Connection Rod for Right Lever	45
Lift Spring	90
Lever only, long	75
Front Wheel Stand Sides, steel (with $\frac{3}{4}$ -inch hole at lower end), each	1 70
N. S. Front Wheel Stand Sides, steel (with 1-inch hole at lower end), each	1 70
Beam Brace between right and center	1 70
Beam Brace between left and center	1 70
Steel Clevis Bar, front	1 50
Steel Clevis Brace to center beam.....	1 50
Hook for Spring	45
Pipe Spreader for Front Wheels ($\frac{3}{4}$ -inch hole)....	45
N. S. Pipe Spreader for Front Wheels (1-in. hole)	70
Rod or Axle for Front Wheels with Nuts ($\frac{3}{4}$ -inch diameter)	1 95
N. S. Rod or Axle for Front Wheels (1-inch).....	2 45
Beam, right	5 20
Beam, middle	5 50
Beam, left, angled	5 25
100T Handle Grip	40

**PARTS for No. 245 TWO and THREE FURROW
GANG PLOWS—Continued**

100S Handle Grip	40
Handle, steel, main piece	70
Handle Brace, steel	45
Handle, complete, long	1 70
C121 Adjustable Lever Handle	35
30E Plunger for Lever	30
Wheel Standard for Rear Wheel.....	1 00
H62 Arbor, complete, for Rear Wheel.....	50
Wide Clevis Extension, complete, for 245.....	3 50

MISCELLANEOUS

Wrenches, malleable iron, each	35
Set Screws, each	10
Mold Support to Beam, steel, upper, for No. 100..	50
Mold Support to Beam, steel, upper, for No. 95....	50
Lock Lever for No. 2BC Slip Point.....	35
Lock Lever Spring for 2BC Slip Point.....	25
109K Lever Nut	12
125E and 126E Truss Washer for Swivel, Steel Beam	30
63C Washer for No. 63	12
100H Beam Backing for No. 100.....	65
105H Beam Backing for No. 105.....	65
Steel Support for Point on 65 and 200.....	30
100F Filler between Mold and Land on No. 100....	45
95F Filler between Mold and Land on No. 95.....	45
95P Upper Mold Support to Beam on No. 95.....	45
105F Filler between Mold and Land on No. 105....	45
100P Upper Mold Support to Beam on No. 100....	45
105P Upper Mold Support to Beam on No. 105....	45
67C Shoe or Buffer for Front End No. 67 Beam....	1 40
66E Shoe or Buffer, Front End Nos. 66, 69 Beams	1 40
65G Shoe for Front End No. 65 Beam.....	1 40
45G Point Support	30
86G Rear Beam Fastener on No. 86.....	50
Rudder Steel for Nos. 83, 84, 85, 86 Middlebreaker	50
43-44 K or 103-104 K Wedges	45
124-H Filler for Front End No. 124 Steel Beam....	45
124J Filler between No. 124 Steel Beams.....	30
218G Washer for Channel Beams	05
127E Filler for No. 127 Steel Beam.....	1 00
39 or 40 Axle Steel for O. S. Sulky.....	1 55

INDEX

Axles and Arbors	36, 37
Beams	25
Beam Supports and Gauges	33, 34
Bean Harvesters	24
Bolts and Clevis Pins	44, 45
Clevises and Parts	37, 38, 39
Colters and Parts	32, 33
Colters, Rolling	33
Corn Planters	22
Explanations and Suggestions	2, 3
Grade Ripper	23
Handles	26
Handle Supports, Braces, Rests	39, 40
Harrows, Disc	20
Harrows, Giant Spring Tooth	22
Harrows, Orchard	20, 21
Harrows, Spading	21
Harrow Foretruck	22
Hitches, Tractor	6
Hook Braces	35
Instructions to Customers	48
Jointers and Parts	31, 32
Jointer Moldboards	33
Landsides	29, 30
Lime Sower	23
Moldboards	29, 30
Moldboard Locks and Parts	34, 35
Moldboard Lock Hooks	34
Moldboard Standards	29, 30
Miscellaneous	46
Plows, one horse	10, 11, 13
Plows, two horse	9, 10, 11, 12, 13, 14
Plows, three horse	9, 10, 11, 12, 13, 14
Plows, 40 Series	10
Plows, 70-90 Series	10
Plows, 100 Series	12
Plows, 200 Series	11
Plows, 1500 Series	9
Plows, Cast Iron Beam Flat Land	9
Plows, Contractor	14, 15
Plows, Gang	8
Plows, Gang, Extra Parts for.....	44, 45, 46
Plows, Middlebreaker	11
Plows, Scotch	12
Plows, Swivel, Steel Beam and Cast Beam.....	18
Plows, Swivel, Wood Beam	16
Plows, Subsoil	12
Plows, Sulky	5, 7
Plows, Tractor	4, 5
Plows, Wood Beam Flat Land.....	13
Points	27, 28
Rakes	24
Saddles for Swivel Moldboards	35
Scarifiers	23
Shin Pieces	40, 41
Shoes and Strips	29, 30
Slips for Slip Nose Points	28
Standards for Wheels	35, 36, 37
Standards for Moldboards	29, 30
Spreaders for Molds	41
Springs for Mold Locks	34
Sulky Plow Extras	41, 42, 43
Washers for Steel Molds	41
Wheels and Parts	35, 36, 37
Weeders	23
Y Braces for Swivel Molds	35

RETAIL PRICE LIST No. 52

COVERING

Walking and Riding Horse Drawn and Tractor Drawn
Plows, Weeders, Disc Harrows, Spading Harrows,
Spring Tooth Harrows, Orchard Harrows,
Grade Rippers, Rakes, Bean Harvesters,
Corn Planters, etc., and
Plow Repairs.

Extra Parts Lists for other tools sent upon request.

This list supersedes all others and is subject to change without notice.

INSTRUCTIONS TO CUSTOMERS

Address all correspondence to WIARD PLOW CO.,
BATAVIA, N. Y., U. S. A.

If a regular customer send your orders to nearest transfer house. (See front page of cover.)

In ordering Plows, always specify how rigged, that is, whether with or without jointer or colter and wheel and standard; and if a swivel plow, whether with common or adjustable clevis. Also with chilled or steel moldboards.

In ordering extra parts always give the number or name of the part wanted and for what number or size of plow, referring to current price list.

When parts are designated as right or left it is understood that you stand behind the plow, looking toward it.

State whether to ship by freight, express or parcel post and by what route, and give name of railroad station and postoffice.

Telephone or Telegraph Orders received at sender's risk and must be prepaid. We cannot be held responsible for mistakes in orders so transmitted.

All local shipments of repairs or extras are f. o. b. point of shipment.

A reasonable charge will be made to cover cost of preparing package to comply with regulations of post-office or express company.

Postage and Insurance charge due same as repairs in that shipment.

Additional or subsequent orders take same discount as initial quantity order. Purchaser to pay all transportation charges on same.

When goods have been delivered in good order to railroad and receipt obtained therefor, our responsibility ceases.

Upon receipt of shipment, if any parts are missing or broken, have your R. R. Agent note same on your paid freight bill and send it to us, advising what is short or broken, and we will use our best endeavor to trace or collect for the same.

Remit by New York draft, money order or registered letter; or, if less than \$1.00, postage stamps will be accepted.

We answer all inquiries and correspondence and fill orders promptly.

WIARD PLOW CO.

Office and Factory at

BATAVIA, N. Y., U. S. A.